



**EN**

# TECHNICAL MANUAL

**MODEL:**

**SERVICE CONTACT:**



# Contents

<b>1. General information</b>	<b>5</b>
1.1. Safety considerations	5
1.2. Disposal	11
<b>2. Heat pump installation</b>	<b>12</b>
2.1. Transport and handling	12
2.2. Dimensions and connections	12
2.3. Unpacking	14
2.4. Assembly and disassembly of the covers	14
2.5. Recommended positioning	15
2.6. Service areas	16
<b>3. Hydraulic installation</b>	<b>17</b>
3.1. General instructions	17
3.2. Brine circuit	17
3.3. Heating / Cooling circuit	19
3.4. DHW circuit	22
3.5. Pool circuit	23
3.6. Drain	24
<b>4. Filling and discharge circuits</b>	<b>25</b>
4.1. Filling the production circuit (heating, cooling, DHW and pool)	25
4.2. Filling the brine circuit	25
4.3. Discharging the circuits	26
<b>5. Electrical system</b>	<b>27</b>
5.1. General instructions	27
5.2. Heat pump control power supply	30
5.3. Power supply of the compressor	31
5.4. Internal auxiliary equipment power supply	32
5.5. External protections	33
5.6. Outside temperature sensor	33
5.7. External storage systems	33
5.8. External production equipment	34
5.9. DG1 – SG4 Outlet Units	34
5.10. External auxiliary equipment	34
5.11. Aerothermal or hybrid brine systems	35
5.12. Alarm signal	35
5.13. Remote control by digital input	35
5.14. Inside environment control	36
5.15. Remote control by BUS	38
5.16. Energy meter	38
<b>6. Start-up</b>	<b>39</b>
<b>7. Technical specifications VOLTA W-S   VOLTA W-L</b>	<b>40</b>
7.1. Component location	40
7.2. Power circuit diagram	46
7.3. VOLTA W-S/L electrical connection tables	49
7.4. Load losses	51
7.5. Brine circulation pump	52

7.6. Production circulator pumps ..... 54

8. Operation map ..... 56

9. Operation curves ..... 58

10. Technical data table..... 66

11. Symbols ..... 74

## 1. General information



- This manual contains the necessary information to install the heat pump. Read this manual carefully before installing the equipment. Keep this manual handy for future reference.

This manual contains two different kinds of warnings that should be heeded.



NOTE

- Indicates a situation that may cause material damage or equipment malfunction. This may also be used to indicate practices that are recommended or not recommended for the equipment.



DANGER!

- **W**arning of imminent or potential danger which, if not avoided, may result in injury or even death. This may also be used to warn of unsafe practices.

VOLTA W-S/L heat pumps are designed to function within heating systems, cooling systems, for the production of domestic hot water (DHW), pool heating or other similar uses. The manufacturer is not responsible for any material damage and/or personal injury resulting from improper use or incorrect installation of the equipment.

The heat pump must be installed by a licensed installer in accordance with applicable local regulations and in accordance with the installation instructions described in this manual.

### 1.1. Safety considerations

The detailed instructions in this section cover important safety aspects and must therefore be strictly complied with.




DANGER!

- **A**ll the installation and maintenance work described in this manual must be performed by an authorised engineer.
- **D**o not allow children to play with the heat pump.
- **C**hildren should not clean or maintain the heat pump without adult supervision.
- **I**mproper installation or use of the equipment could cause electrocution, short circuits, leakage of working fluids, fire or other personal injuries and/or material damage.
- **I**f you are unsure of the procedures for installation, maintenance or use of the equipment, contact your local dealer or technical support for advice.
- **I**f you detect a malfunction in the unit, contact your local dealer or technical support to answer any questions.
- **W**hen carrying out installation, maintenance or commissioning of the heat pump, always use appropriate personal protective equipment.
- **K**eeep the plastic bags included in the packaging out of the reach of children, as improper use could result in injury caused by asphyxia.

## Refrigerant

VOLTA Heat Pumps heat pumps may contain different types of refrigerant depending on the model. The refrigerants used by VOLTA Heat Pumps are not harmful to the environment as they do not contain chlorine and therefore do not contribute to the destruction of the ozone layer. Refer to the label on your heat pump to identify which refrigerant it contains. You can use the following table to check their flammability and toxicity characteristics.

Refrigerant	GWP	Flammability, see label	
R410A	2088	A1	No
R290	3	A3	

**Table 1.1.** Flammability and toxicity properties of refrigerants used by VOLTA Heat Pumps heat pumps.

Under normal operation of the heat pump the toxicity of the refrigerant is nil and there is no risk of explosion. However, the following precautions should be taken in the event of refrigerant leakage.



- **T**he refrigerant contained inside the heat pump must not be released into the atmosphere as it contributes to global warming (GWP).
- **T**he refrigerant should be recovered for recycling or elimination according to current legislation.
- **D**o not directly touch the area where the leak has occurred, as this could result in severe frostbite injuries.
- **I**n the event of refrigerant leakage, ventilate the area immediately.
- **M**ake sure that the area in which the heat pump is installed is properly ventilated before you open the unit's refrigerant circuit.
- **K**ep the area ventilated while performing maintenance or repair operations.
- **A**nyone who has come into contact with refrigerant vapour must evacuate the area immediately and breathe fresh air.
- **A**1 refrigerants: Direct exposure of the refrigerant to a flame produces toxic gas. However, this gas can be detected by its odour when at concentrations well below the permitted limits.
- **A**2L and A3 refrigerants: Do not allow any source of ignition to come into contact with the refrigerant. When searching for a refrigerant leakage, use means that do not involve a naked flame. If you use an electronic detector, it must be designed to detect the refrigerant used by the unit. You can also use liquid detectors, but make sure that the detergents in these liquids do not contain Chlorine which can corrode copper piping. Please remember that refrigerants may not give off any odour.

In addition to the above recommendations, please observe the following precautions when carrying out maintenance and repair work.



**DANGER!**

- **B**efore carrying out any work on the refrigerant circuit, the power supply must be disconnected.
- **D**o not pierce or burn any pipes that contain refrigerant until the equipment has been discharged.
- **D**o not carry out maintenance work in enclosed spaces. If necessary, switch off the heat pump and carry out repairs in an adjacent well-ventilated room.
- **A**ll maintenance work must be carried out by an authorised installer in accordance with the applicable local regulations governing work involving refrigerants, and with the instructions contained in this manual. In addition, everyone involved in maintenance work must be aware of the hazards associated with working with refrigerants.
- **F**ollow the maintenance and service guidelines in this manual at all times. If in doubt, contact VOLTA Heat Pumps's technical department for assistance.
- **T**he work area must be checked with a refrigerant detector, appropriate to each type of refrigerant, before and during any tasks that require the use of a flame or any other form of heat input to avoid creating explosive atmospheres. To ensure that the gas concentration is a maximum of 25% of the lowest combustible concentration (Lower Flammability Limit, LII) of the refrigerant used, the leakage detection equipment must be configured and calibrated for the refrigerant used.
- **N**o one carrying out work on a refrigeration system that involves exposing piping should use any source of ignition in such a way as to create a risk of fire or explosion.
- **M**ake sure that CO<sub>2</sub> extinguishing equipment is on hand before starting work involving heat input.
- **C**heck that there are no sources of ignition, including cigarettes, while performing maintenance and repair work on the equipment.
- **B**efore any work is carried out, you must inspect the area around the equipment to ensure that there are no flammable hazards or any risk of ignition. "No smoking" signs shall be put in place.
- **I**f you suspect a leak, all naked flames must be eliminated / extinguished.
- **I**f you discover a refrigerant leak requiring soldering, all refrigerant must be recovered from the system. Do not apply a flame until the circuit is completely empty.
- **M**ake sure that any replacement components in the refrigerant circuit are supplied or approved by VOLTA Heat Pumps.
- **D**o not apply any permanent inductive or capacitive charge to the heat pump.
- **I**n the presence of a flammable atmosphere, do not activate any component of the heat pump.

**DANGER!**

- **I**f there is a problem that might compromise safety, do not connect the heat pump to any power supply until it has been satisfactorily resolved. If the problem cannot be corrected immediately, but it is nonetheless necessary to continue with the operation, a suitable temporary solution, agreed with VOLTA Heat Pumps's technical department, must be used. This must be reported to the owner of the equipment so that all parties can be informed.
- **N**ever modify safety features such as pressure switches or refrigerant circuit sensors.
- **M**ake sure that the recovery and vacuum equipment is suitable for working with the refrigerant used in the unit, and that it is in good condition.
- **A**t the end of the repair, leave all components (insulation, fasteners and cables) in the same condition as when you found them. In the event of any damage, replace the element in question.
- **W**hen starting up the unit, make sure that the condensers are discharged: do this in a safe manner to avoid the possibility of causing sparks.
- **M**ake sure that no active electrical wiring or components are left exposed while charging, recovering, or pumping out the system.
- **M**ake sure that grounding continuity is maintained throughout maintenance and repair work.

When performing work on a refrigerant circuit, follow these brief guidelines:

1. Remove the refrigerant.
2. Purge with Nitrogen (N<sub>2</sub>).
3. Pump out the unit.
4. Purge the circuit and spray the area where the opening is to be carried out with Nitrogen (N<sub>2</sub>).
5. Open the circuit with a blowtorch or by cutting.
6. Carry out the repair work.
7. Close and pressurise with Nitrogen (N<sub>2</sub>) to check for the presence of leaks.
8. Pump out the unit.
9. Fill it with the amount of refrigerant indicated on the product label.



Observe the following warnings during the recovery and charging processes:



**DANGER!**

- **W**hen transferring refrigerant to recovery cylinders, make sure that only suitable refrigerant recovery cylinders are used. Make sure that the correct number of cylinders are available to hold the total system charge. All cylinders to be used are designed for the refrigerant being recovered and labelled for that refrigerant (i.e., special refrigerant recovery cylinders). Cylinders must be complete with a pressure relief valve and associated cut-off valves in good working order. Empty recovery cylinders should be evacuated and, if possible, cooled before recovery takes place.
- **T**he recovery equipment must be in good working order and a set of instructions for the equipment must be to hand. It must be suitable for the recovery of all appropriate refrigerants, including, where applicable, flammable refrigerants. A set of calibrated scales must also be available and in good working order. Hoses must be complete with disconnect couplings free of leaks and in good condition. Before using the recovery machine, check that it is in good working order, that it has been properly maintained and that all associated electrical components are sealed to prevent ignition in the event of refrigerant being released. If in doubt, ask the manufacturer.
- **T**he recovered refrigerant shall be returned to the refrigerant supplier in the correct recovery canister and an appropriate waste transfer note shall be provided. Do not mix refrigerants in recovery units and particularly not in recovery cylinders.
- **I**f you are going to remove a compressor or compressor oil, make sure that it has been evacuated to an acceptable level to ensure that no flammable refrigerant remains within the lubricant. Evacuate the compressor before you return it to the suppliers. To speed up this process, only heat the compressor body by electrical means. When draining oil from a system, do so in a safe manner.
- **M**ake sure that the different refrigerants are not contaminated when using the charging equipment. Keep hoses or lines as short as possible to minimise the amount of refrigerant they contain.
- **K**eeep the recovery tanks in an appropriate position as per the instructions.
- **M**ake sure that the refrigeration system is grounded before charging the system with refrigerant.
- **T**ake great care not to overfill the refrigeration system.
- **T**he system must be tested for leaks when charging has been completed but before start-up. A leak test should be carried out before the equipment is left to operate normally.

### Hydraulic installation

Installation and subsequent interventions on the heating, brine or DHW circuits must only be performed by authorised personnel in accordance with applicable local regulations and the instructions provided in this manual.



**DANGER!**

- Do not touch any of the internal components during or immediately after heat pump operation; this can result in burns caused by cold or heat. If these components need to be touched, allow sufficient time for the temperatures to stabilise and wear protective gloves to avoid injury.

### Water quality

Be aware of how the DHW circuits and tank of the heat pump react to corrosion. If you are not sure about the quality of the water available for filling the system, analyse it. In the following tables you can check the water quality level requirements for the production and brine circuit.

Water components	Concentration in mg/l	Water components	Concentration in mg/l
Alkalinity	$\text{HCO}_3^- < 70$	Free carbon dioxide	$\text{CO}_2 < 5$
Sulphur	$\text{SO}_4^{2-} < 70$	Nitrate	$\text{NO}_3^- < 100$
Alkalinity / Sulphur	$\text{HCO}_3^- / \text{SO}_4^{2-} > 1$	Iron	$\text{Fe} < 0.2$
Ammonium	$\text{NH}_4 < 2$	Aluminium	$\text{Al} < 0.2$
Free chlorine	$\text{Cl}_2 < 1$	Manganese	$\text{Mn} < 0.1$
Hydrogen sulphur	$\text{H}_2\text{S} < 0.05$	Chloride	$\text{Cl}^- < 300$

**Table 1.2.** Concentration limits of water elements for production and brine circuits.

Water properties	Limit values
pH	$7.5 < \text{pH} < 9$
Hardness	$4 < \text{°dH} < 8.5$
Electrical conductivity	$10 < \mu\text{S/cm} < 500$

**Table 1.3.** Water property limits for production and brine circuits.

The water used in the DHW tanks of the VOLTA W-L must be filled with drinking water with a chloride concentration of less than 250mg/l.



**DANGER!**

- Risk of damage due to unsuitable water.
- Deposits caused by the use of unsuitable water can damage the brine source, the pipes, the heat exchangers and the DHW tank of the heat pump.
- The use of sea water is not permitted.
- The quality of the drinking water must comply with the applicable regional regulations and the instructions in this manual.

### Electrical system

Any intervention on the electrical system must only be performed by an authorised electrician in accordance with applicable local regulations and the instructions provided in this manual.



- **T**he heat pump has more than one electrical power supply.
- **T**he heat pump must be supplied with an external switch that can cut off all the circuits. VOLTA Heat Pumps recommends that an external switch be installed for each of the electrical power sources (control, internal auxiliary equipment and inverter).
- **B**efore performing any operation on the electrical panel, disconnect the power supply.
- **D**uring installation and maintenance of the unit never leave the electrical panel unattended while it is exposed.
- **D**o not touch any component of the electrical panel with wet hands as this could cause an electric shock.

## 1.2. Disposal



- This device should not be treated as household waste.
- At the end of its useful life, dispose of the device properly in accordance with local regulations and in an environmentally friendly way.

The heat pump contains refrigerant. VOLTA Heat Pumps uses refrigerants that are not harmful to the environment, but once their useful life cycle is over, the refrigerant must be recovered so that it can be recycled or disposed of in accordance with current regulations.

Please read the following warnings carefully before disposal.



- **F**amiliarise yourself with the equipment and its use.
- **E**lectrically isolate the system.
- **B**efore you begin the procedure, make sure that you have the necessary mechanical equipment to handle the refrigerant tank. Also make sure that all necessary personal safety equipment is available and used properly. Finally, make sure that the recovery process is continuously supervised by an authorised person and that the recovery equipment and tanks comply with the appropriate standards.
- **P**ump out the refrigerant system, if possible. If it is not possible to pump it out, create a branch so that the refrigerant can be recovered from different parts of the system.
- **C**heck that the refrigerant tank is on the scale before you start to recover it. Start up the recovery device and recover according to the manufacturer's instructions.
- **D**o not overfill the cylinders (max. 80% of liquid content volume).
- **D**o not exceed the maximum permissible working pressure of the cylinders, even temporarily.
- **W**hen the cylinders have been correctly filled and the process is complete, close all cut-off valves on the equipment and remove the cylinders and equipment from the installation immediately.



- The recovered refrigerant must not be poured into any other system before it has been cleaned and inspected.
- The equipment must be marked to indicate that it has been taken out of operation and emptied of refrigerant. The marking must be dated and signed. Check that the equipment is marked to indicate that it contains flammable refrigerant.

## 2. Heat pump installation

### 2.1. Transport and handling

The heat pump must be transported vertically and not exposed to adverse weather conditions. It can be lain carefully on its rear side to facilitate transportation to the installation site.



NOTE

- Do not tilt the heat pump more than 45°, since this could impair proper equipment operation.
- Due to its heavy weight, the heat pump should be handled by two workers using a forklift for heavy loads.

### 2.2. Dimensions and connections

The overall dimensions and hydraulic connections of the VOLTA W-L and VOLTA W-S heat pumps are described below.

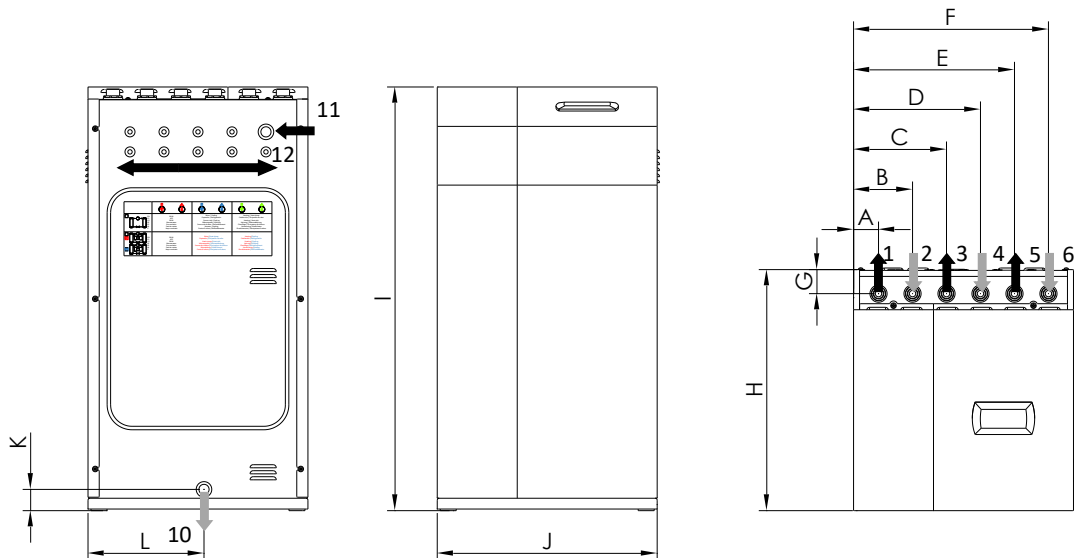


Figure 2.1. Overall dimensions and hydraulic connections of the VOLTA W-S model

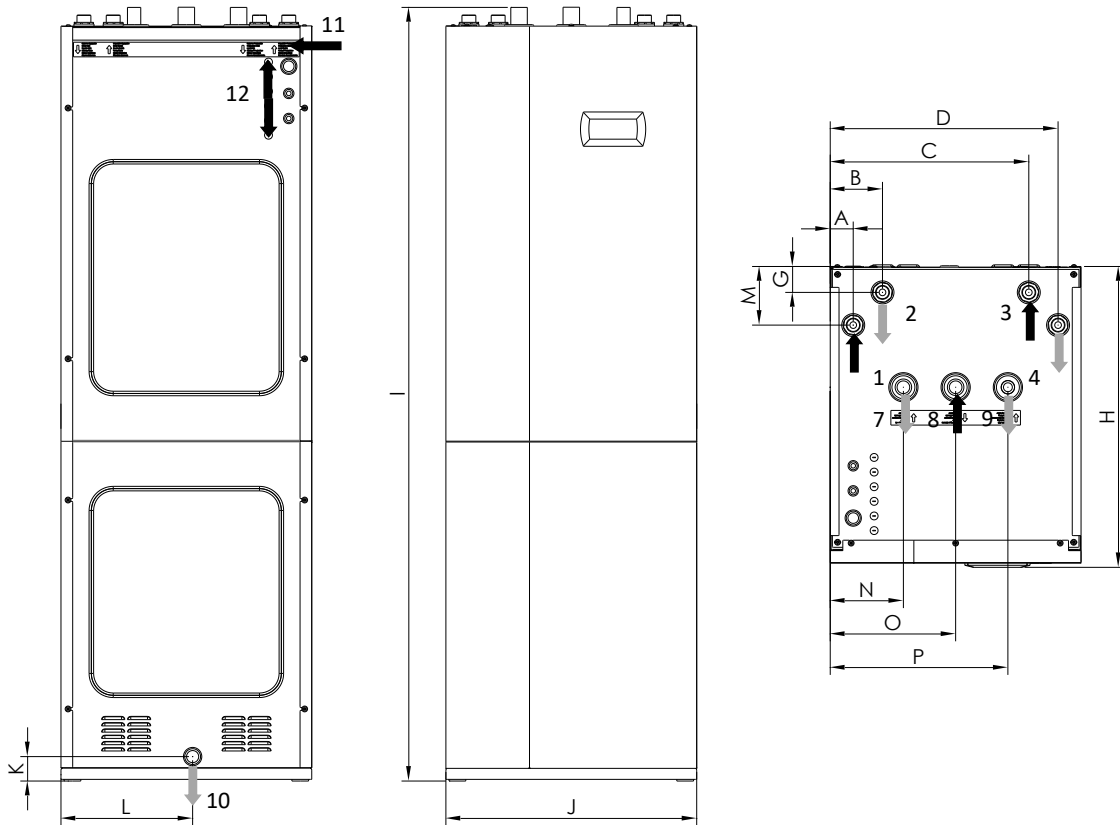


Figure 2.2. Overall dimensions and hydraulic connections of the VOLTA W-L model

No.	Description	1-9 kW	3-12 kW	5-22 kW
1	Heating / cooling inlet; Male	G1-1/4"	G1-1/4"	G1-1/4"
2	Heating / cooling return; Male	G1-1/4"	G1-1/4"	G1-1/4"
3	Brine inlet; Male	G1-1/4"	G1-1/4"	G1-1/4"
4	Brine return; Male	G1-1/4"	G1-1/4"	G1-1/4"
5	DHW exchanger inlet; Male	G1-1/4"	G1-1/4"	G1-1/4"
6	DHW exchanger return; Male	G1-1/4"	G1-1/4"	G1-1/4"
7	Tap water inlet; Female	G1"	G1"	G1"
8	DHW outlet; Female	G1"	G1"	G1"
9	DHW recirculation return; Female	G3/4"	G3/4"	G3/4"
10	Drain; $\phi$ 16 mm			
11	Power cables inlet			
12	Control cables inlet			

Table 2.1. Hydraulic connections key.


No.	1-9 kW		3-12 kW		5-22 kW	
	Basic	Compact	Basic	Compact	Basic	Compact
A	55	55	55	55	55	55
B	153	125	153	125	153	125
C	251	475	251	475	251	475
D	349	545	349	545	349	545
E	447		447		447	
FR	545		545		545	
G	70	62	70	62	70	62
H	710	720	710	720	710	720
I	1058	1851	1058	1851	1058	1851
J	600	600	600	600	600	600
K	61	58	61	58	61	58
L	300	315	300	315	300	315
M	-	140	-	140	-	140
N	-	175	-	175	-	175
O	-	300	-	300	-	300
P	-	425	-	425	-	425

**Table 2.2.** Key to overall dimensions in mm.

The factory installation is prepared for connection at the top.

### 2.3. Unpacking

To unpack the heat pump, remove the wooden box carefully, remove the pallet anchoring screws and perform a check to make sure the heat pump has not been damaged during transportation.

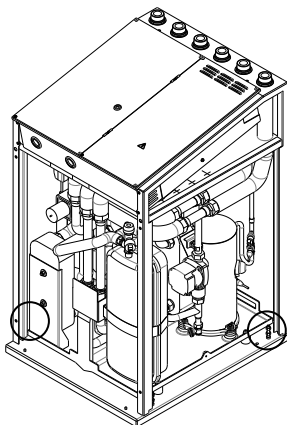

**Figure 2.3.** Removing the screws fastening the heat pump to the pallet

### 2.4. Assembly and disassembly of the covers

A 4 mm Allen wrench is needed to assemble and disassemble the covers.

#### VOLTA W-L Models

1. Disassemble the top front cover. Loosen the screws located at the upper part and pull the cover upwards.
2. Disassemble the bottom front cover. Remove the screws located at the upper part and pull upwards.
3. Disassemble the side covers. Loosen the screws located at the front and rear and remove the cover.
4. Once the covers have been removed, the acoustic insulation panels can be removed by pulling them outwards.

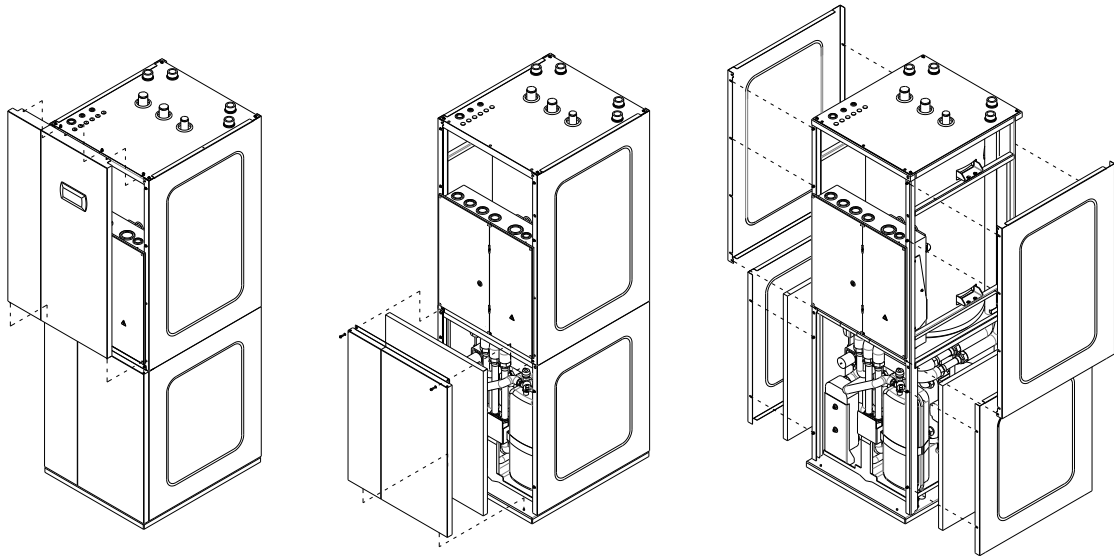


Figure 2.4. Disassembly of the covers of VOLTA W-L models

### VOLTA W-S Models

1. Disassemble the top cover. Remove the screws located at the rear and pull the cover upwards.
2. Disassemble the front cover. Remove the screws located at the upper part and pull the cover upwards.
3. Disassemble the side covers. Loosen the screws located at the front and rear and on the top, and remove the cover.
4. Once the covers have been removed, the acoustic insulation panels can be removed by pulling them outwards.

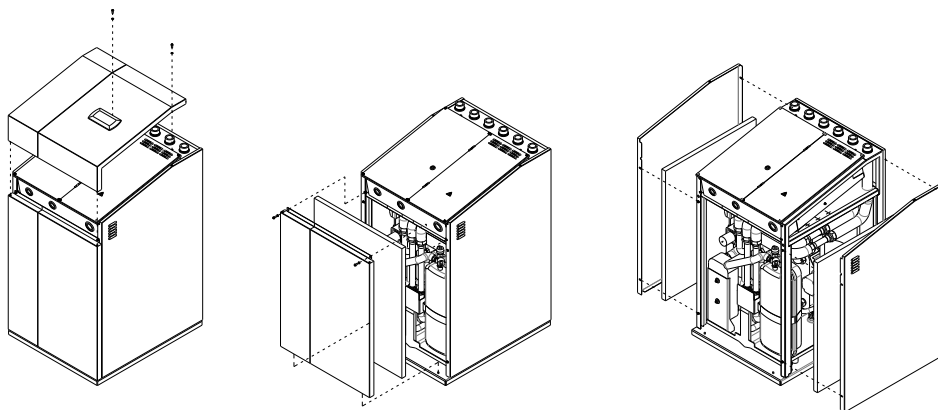


Figure 2.5. Disassembly of the covers of VOLTA W-S models



#### NOTE

- During cover disassembly, take care to remove the control panel cable without damaging it.

## 2.5. Recommended positioning

Choose a dry place where there is no risk of frost. Avoid installation against bedroom walls or walls of other rooms where noise emissions can be annoying. If possible, install the heat pump with the rear part pointed toward an exterior wall. Avoid installation near a corner, since this can amplify noise emission levels.

The heat pump should be installed on a stable base that can support the total weight of the equipment and the operating fluids in its interior. Use the adjustable legs to compensate for possible irregularities on the supporting surface.

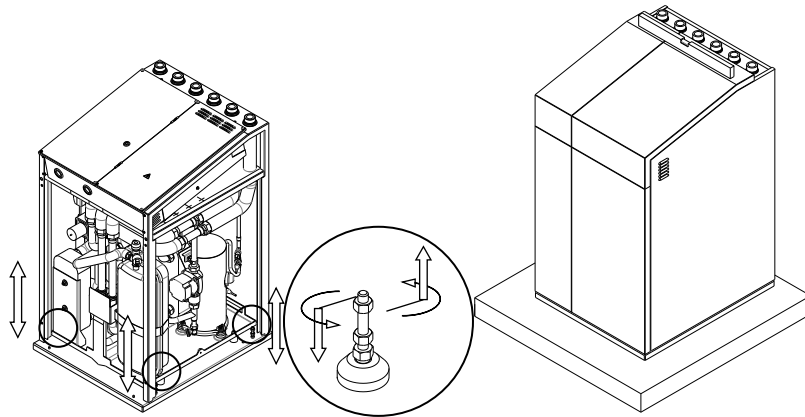


Figure 2.6. Positioning and levelling the heat pump



- **W**arning: VOLTA W-S/L heat pumps have an IP20 protection rating. Their installation in damp environments such as laundries or saunas, etc. is therefore prohibited.
- **T**he heat pump must be stored in a room where there are no sources of ignition in continuous operation (e.g., naked flames, a working gas appliance or a working electric heater).

## 2.6. Service areas

To facilitate installation, start-up and maintenance work, the recommended minimum clearance distances around the heat pump are specified below.

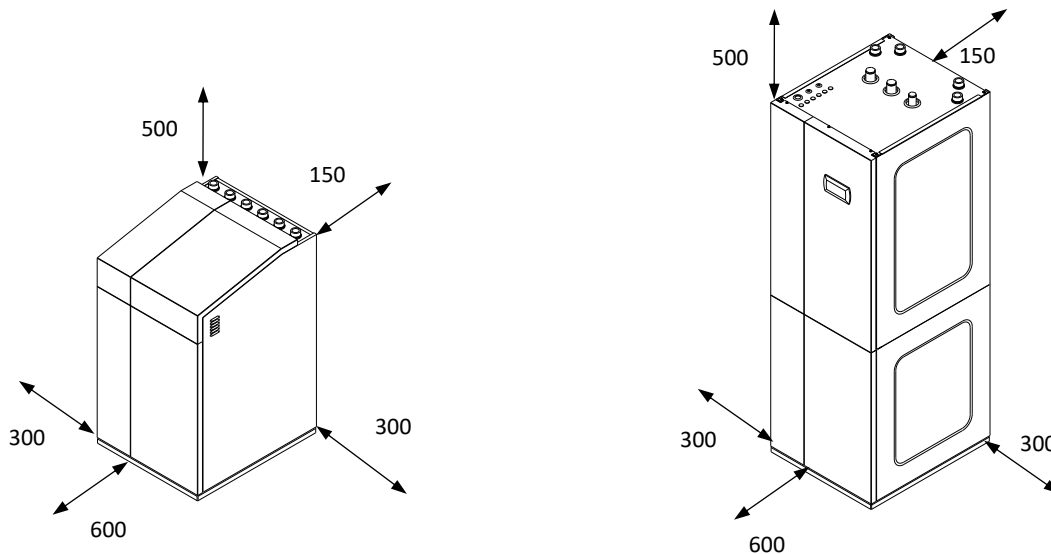


Figure 2.7. Minimum recommended service areas around the heat pump (amounts in mm)



- **D**o not cover the ventilation ducts of the heat pumps, there may be a risk of components breaking and causing injury and/or material damage.



- Pay special attention, both when designing the piping layout and when positioning the heat pump, to allow easy access to the cover hardware and convenient access to the internal components of the heat pump.



### 3. Hydraulic installation



#### NOTE

- The installation schemes included from here on should be considered simply as a guide.
- The design of the hydraulic installation must be performed by qualified personnel and in accordance with applicable local regulations.
- The design of the hydraulic system must ensure at all times the minimum required flow through the heat pump, otherwise, could cause malfunction of the equipment and even rupture.

#### 3.1. General instructions

The following recommendations should be taken into consideration for proper hydraulic installation.

- Avoid excessive strain between the pipes and the heat pump connections to prevent leaks and/or transmission of vibrations. Flexible hoses should be used for the heat pump wiring.
- Install cut-off valves at all the hydraulic connections to facilitate future maintenance tasks.
- Install traps at all the installation points where air pockets can form.
- Place heat insulation on all circuit pipes to prevent unnecessary heat loss. Pay special attention to the heating insulation on the brine circuit pipes, since these can reach temperatures below 0°C, causing condensation and/or frost.



#### DANGER!

- **D**uring installation work on the hydraulic circuits, take special care to prevent liquid from spilling on the internal electrical heat pump components, which could cause personal injury due to electrocution and/or poor equipment operation.
- **D**o not install components that might cover the inlet or outlet of the safety valves; this could lead to a risk of some of its components breaking and cause injuries and/or material damage.

#### 3.2. Brine circuit

The VOLTA W-S/L heat pumps can be used with horizontal or vertical (A) geothermal brine systems or by using groundwater (B). Aerothermal brine can also be used by replacing the geothermal collector with one or more VOLTA W-O (C) aerothermal units. Finally, hybrid brine can be obtained by combining a geothermal collector with one or more VOLTA W-O (D) aerothermal units.



#### DANGER!

- **T**he use of other aerothermal brine systems not described in this manual could cause the equipment to malfunction or even break down.
- **C**arefully check the antifreeze concentration of the working fluid. Do not use automatic fill valves or other items that can change the concentration of the working fluid. Inadequate concentration of the working fluid could cause malfunction of the equipment and even rupture.

### Geothermal brine systems

Brine systems with more than one circuit must be connected in parallel, so the flow rate through each one is similar.

### Groundwater brine systems

Groundwater brine systems must use a midway exchanger to prevent the heat pump evaporator from corrosion, freezing or getting dirty.

### Brine systems with aérothermal units

The brine circuit of the heat pump is connected directly to the VOLTA W-O unit so the antifreeze mixture flows through a closed circuit, absorbing energy from the outdoor air when it passes through the VOLTA W-O unit and yielding it in the heat pump evaporator.

Aérothermal brine systems with more than one VOLTA W-O unit must be connected in parallel, so the flow rate through each one is similar. The connection should use a reverse return or a collector.

### Hybrid brine systems

In hybrid brine installations, the aérothermal collector and the geothermal collector must be connected in series so the antifreeze mixture circulates first through the aérothermal collector and then through the geothermal collector. On the other hand, on-off 3-way valves must be installed between the outlet and the return for each collector to bypass the collector so the antifreeze mixture can absorb heat from the outdoor air, the earth or both. The heat pump automatically selects the most efficient heat source, depending on the percentage of energy absorbed from each.

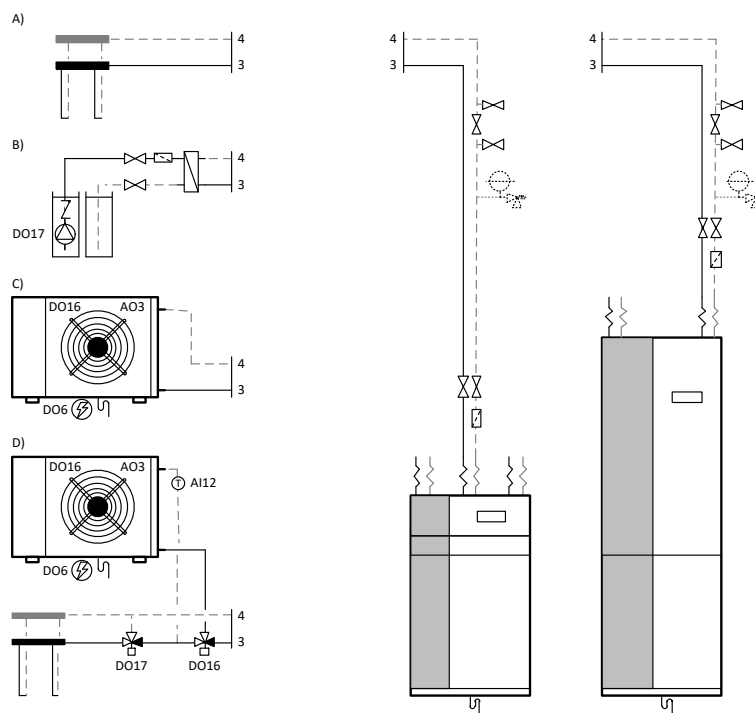


Figure 3.1. Brine circuit connection options

### Integrated components

The following brine circuit components are included within the heat pump.

- Variable speed and high efficiency outlet pump (energy class A).
- Expansion vessel with a capacity of 8 litres, with pre-adjusted pressure of 0.75 bar gauge (75 kPa).
- Safety valve tared to a 3 bar gauge (300 kPa).
- Drain valve.

## Installation instructions

Follow the instructions below to wire the brine circuit.

- Install the necessary components to carry out the filling/discharge of the inlet piping.
- Install a particulate filter in the return pipe with a mesh size no greater than 1 mm. It is recommended to install cut-off valves immediately before and after the filter to make it easier to clean or replace.
- Check that the volume of the expansion vessel integrated in the heat pump is capable of absorbing any overpressures from the circuit. If this volume is not enough, install a supplementary external expansion vessel.
- If necessary, adjust the pressure of the expansion vessel integrated in the heat pump to guarantee that the circuit remains pressurised at all points.
- The pressure of the brine circuit must have a value of between 0.7 and 2 bar gauge (70 and 200 kPa).
- Use a working fluid with a freezing point of at least 10°C below the minimum nominal working temperature of the equipment.
- Configure the equipment with a protection of at least 5°C above the freezing temperature of the working fluid.

### 3.3. Heating / Cooling circuit

The VOLTA W-S/L heat pumps can be connected to various types of heating / cooling systems, both directly and by separating buffer storage tanks. On the other hand, these enable control over several devices that are external to the heating / cooling system directly from the heat pump's electrical panel.

#### Heating / cooling system

VOLTA W-S/L heat pumps are designed for use with underfloor heating systems, low temperature radiators or convectors, etc. They are not recommended for use in heating systems that require higher temperatures. For nominal operating temperatures, please refer to the products' technical tables.

VOLTA W-S/L heat pumps can be used with cooling systems such as convectors and underfloor cooling systems.

Special care should be taken in the design and control in installations with underfloor cooling, to prevent problems of condensation on floors.

The models that are not equipped with integrated free cooling allow control of external free cooling equipment.

#### Direct installation

In simple heating / cooling systems, VOLTA W-S/L heat pumps can be installed directly into the distribution system, in systems with underfloor heating, low temperature radiators and convectors.

This configuration makes it possible to simplify the hydraulic installation, reduce costs and space, while optimizing the energy efficiency of the equipment. However, the design of the hydraulic installation must guarantee the minimum required flow at all times through the heat pump. For this, the necessary elements must be planned to protect the heat pump in the event of a low flow situation in the emission system. For this, the installation can be planned to operate with at least one of the emission circuits open continuously. If all the emission circuits can be closed, it is recommended to install a differential pressure valve between the outlet and inlet pipes of the heat pump. Other solutions can also be considered, such as the installation of a hydraulic separator between the heat pump and the emission system, as long as the minimum required flow is guaranteed (see section 10).

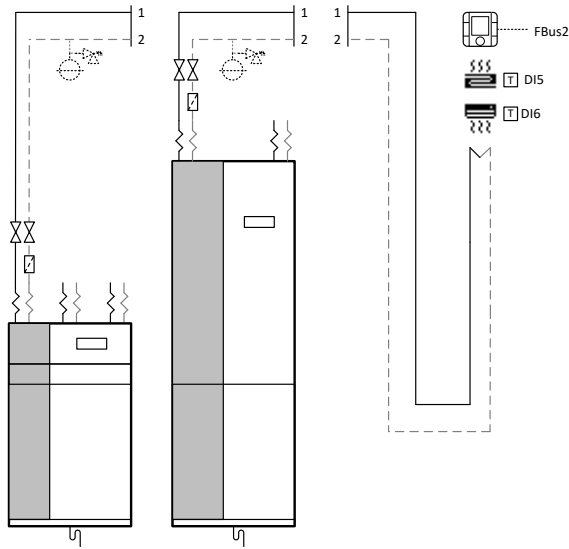


Figure 3.2. Single zone wiring scheme directly to the heating / cooling system

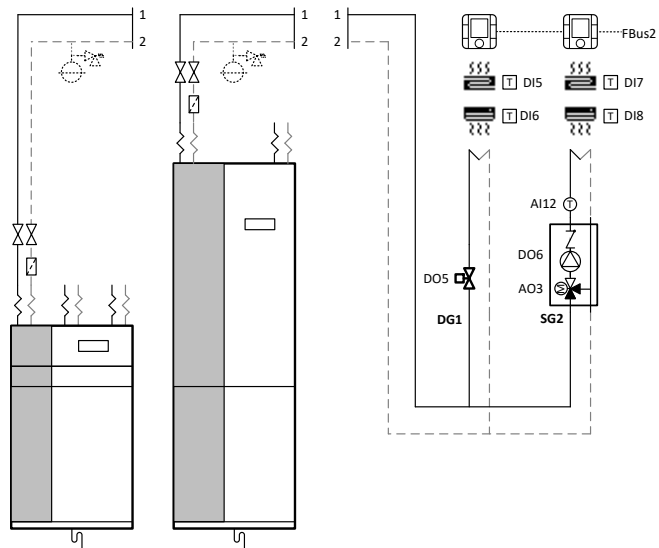


Figure 3.3. Dual zone wiring scheme directly to the heating / cooling system


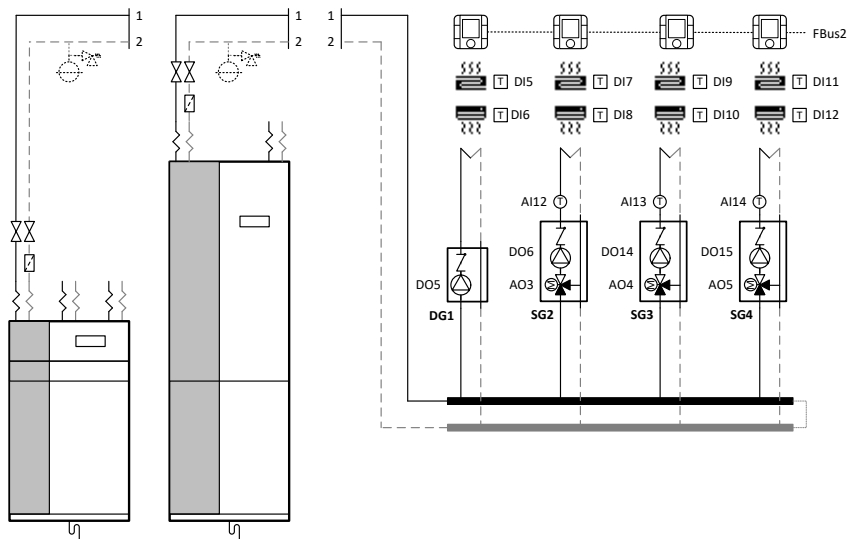



Figure 3.4. Wiring scheme directly to the heating / cooling system

**Installation using buffer storage tanks**

If required by the application, the heat pump can also be connected to the heating / cooling system using a buffer separator tank. To do so, it is equipped with temperature sensors that are used to control a buffer storage tank for heating and a buffer storage tank for cooling. In installations where there is only one buffer storage tank for heating and cooling, both sensors have to be installed in the storage tank. Install the temperature sensors at the points where heating / cooling production begins. Heating / cooling production is stopped by the return temperature sensor installed inside the heat pump.

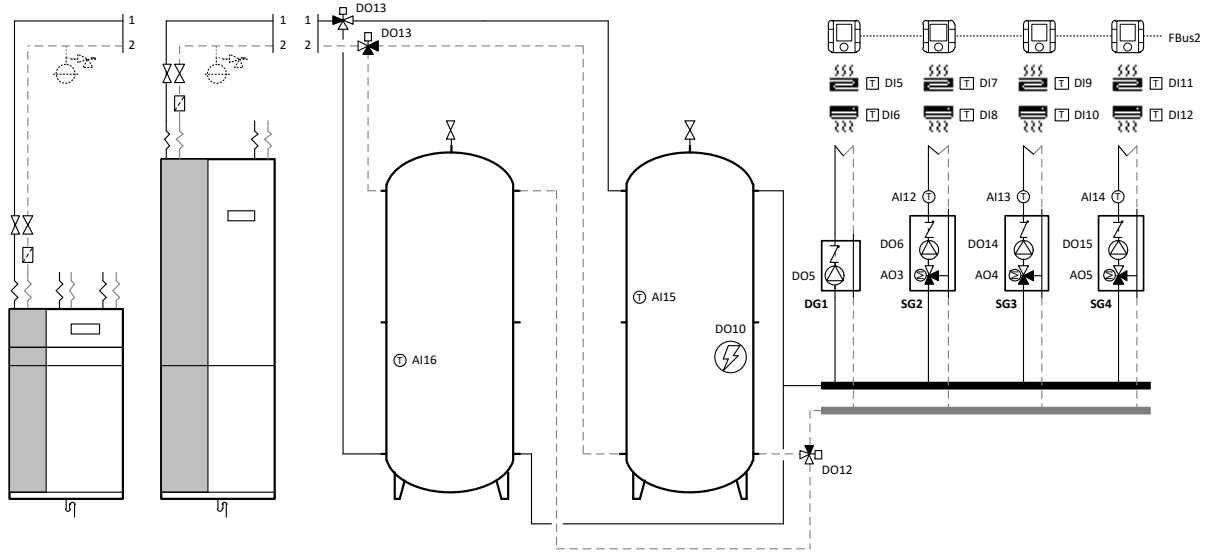

**Figure 3.5.** Wiring scheme using two buffer storage tanks

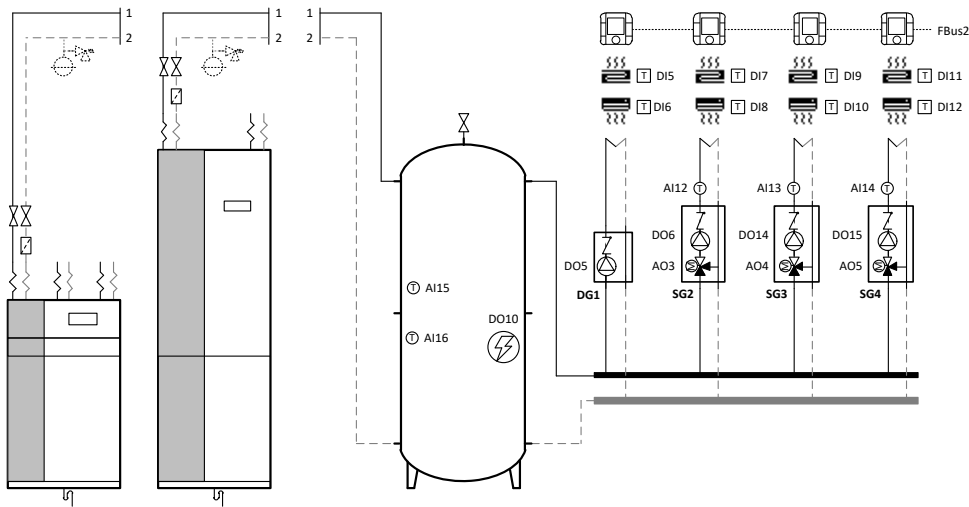

**Figure 3.6.** Wiring scheme using a single buffer storage tank

**Outlet units**

These make it possible to manage different outlet temperatures. This is done by managing one direct outlet unit and two or three combined outlet units. Please refer to section 5.9. The combined outlet units have to use modulating 3-way valves with an analogue signal of 0-10Vdc. Each outlet unit has independent terminals for heating and cooling demands. These signals must be supplied with 24Vac voltage.

**Auxiliary equipment integrated in the heating buffer storage tank**

This is used to control an auxiliary unit integrated in the heating buffer storage tank. It can be used for normal heat production or as emergency equipment.

**Auxiliary boiler**

This is used to control start-up / stop of an auxiliary boiler and regulate final temperature downstream from the boiler by a 0-10 Vdc modulating 3-way valve. The heat pump can use the boiler to assist in normal heat production or as emergency equipment.

**NOTE**

- The hydraulic installation must ensure that while the boiler is working, the temperature through the heat pump never exceeds 65°C, since this could cause serious damage to the refrigerant circuit.

**Integrated components**

The following heating / cooling circuit components are included within the heat pump.

- Variable speed and high efficiency pump (energy class A).
- Expansion vessel with a capacity of 12 litres, with pre-adjusted pressure of 1.3 bar (130 kPa).
- Safety valve tared to a 3 bar gauge (300 kPa).
- Drain valve.

**Installation instructions**

- Follow the instructions below to wire the heating / cooling circuit.
- Install a particulate filter in the return pipe with a mesh size no greater than 1 mm. It is recommended to install cut-off valves immediately before and after the filter to make it easier to clean or replace.
- Check that the volume of the expansion vessel integrated in the heat pump is capable of absorbing any overpressures from the circuit. If this volume is not enough, install a supplementary external expansion vessel.
- If necessary, adjust the pressure of the expansion vessel integrated in the heat pump to guarantee that the circuit remains pressurised at all points.
- If there is an auxiliary system integrated in the heating storage tank, install a safety valve to protect it from any overpressures.
- The pressure of the heating / cooling circuit must have a value of between 0.7 and 2 bar gauge (70 and 200 kPa).

**3.4. DHW circuit****VOLTA W-L Models**

The VOLTA W-L heat pumps are provided with an integrated inter storage tank with a capacity of 165 litres, so it does not require the installation of an external DHW storage tank.

**VOLTA W-S Models**


The VOLTA W-S heat pumps are designed to be used with external storage systems with a midway heat exchanger that can be either internal or external.

**DHW Recirculation**

This is used to control a DHW recirculation pump. The storage tanks included in the VOLTA W-L models are provided with a separate inlet for DHW recirculation. If an external storage tank without a separate inlet for DHW recirculation is used, it is recommended to connect recirculation to the cold water inlet pipe.

**Auxiliary equipment integrated in the DHW storage tank**

This is used to control a support system integrated in the DHW storage tank. This can be used as support to reach higher temperatures during normal production, to carry out legionella protection programs or as emergency equipment.

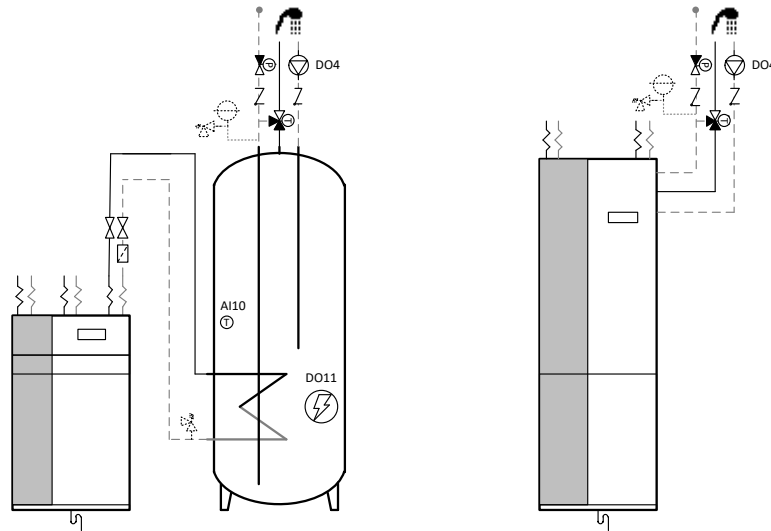

**Figure 3.7.** Wiring scheme of the DHW circuit

### Installation instructions

Follow the instructions below to wire the DHW circuit.

- In the VOLTA W-S models, install a particulate filter in the return pipe to the heat pump with a mesh size no greater than 1 mm. It is recommended to install cut-off valves immediately before and after the filter to make it easier to clean or replace.
- The DHW tank is permanently connected to the tap water supply.
- Install a check valve at the tap water inlet to prevent the possible return of hot water from the mains.
- A safety group (expansion vessel + safety valve) must be installed at the tap water inlet to prevent possible overpressure in the DHW storage tank. In VOLTA W-L models, the maximum tank pressure is 8 bar (800 kPa).
- If there is a risk of scalding, a thermostatic mixing valve should be installed at the DHW outlet.
- If the maximum system pressure can exceed 5 bar, it is recommended to install a pressure reducing valve in the mains inlet to prevent overpressure in the storage tank.
- If there is an auxiliary system integrated in the DHW storage tank, install a safety valve in the production circuit inlet to protect it from any overpressures.

### 3.5. Pool circuit

The VOLTA W-S/L heat pumps can be used to send hot water directly to the pool production storage tank through an open / close 3-way valve. It can be connected two different ways for this purpose, depending on the application. In both cases, the POOL mode must be activated via a voltage-free signal from a thermostat.

#### Connection to the heating circuit (A)

In models that are not equipped with the HTR system, pool production should be connected to the heating circuit via an open / close 3-way valve. This type of connection allows non-simultaneous production for the pool on the one hand and heating or cooling on the other hand.

#### Connection to the HTR system (B)

In addition to the option mentioned above, in VOLTA W-S models with an HTR system, pool production can be connected to the DHW circuit. This allows two options: exclusive pool production with the primary condenser and simultaneous heating / cooling and pool production through the HTR system.

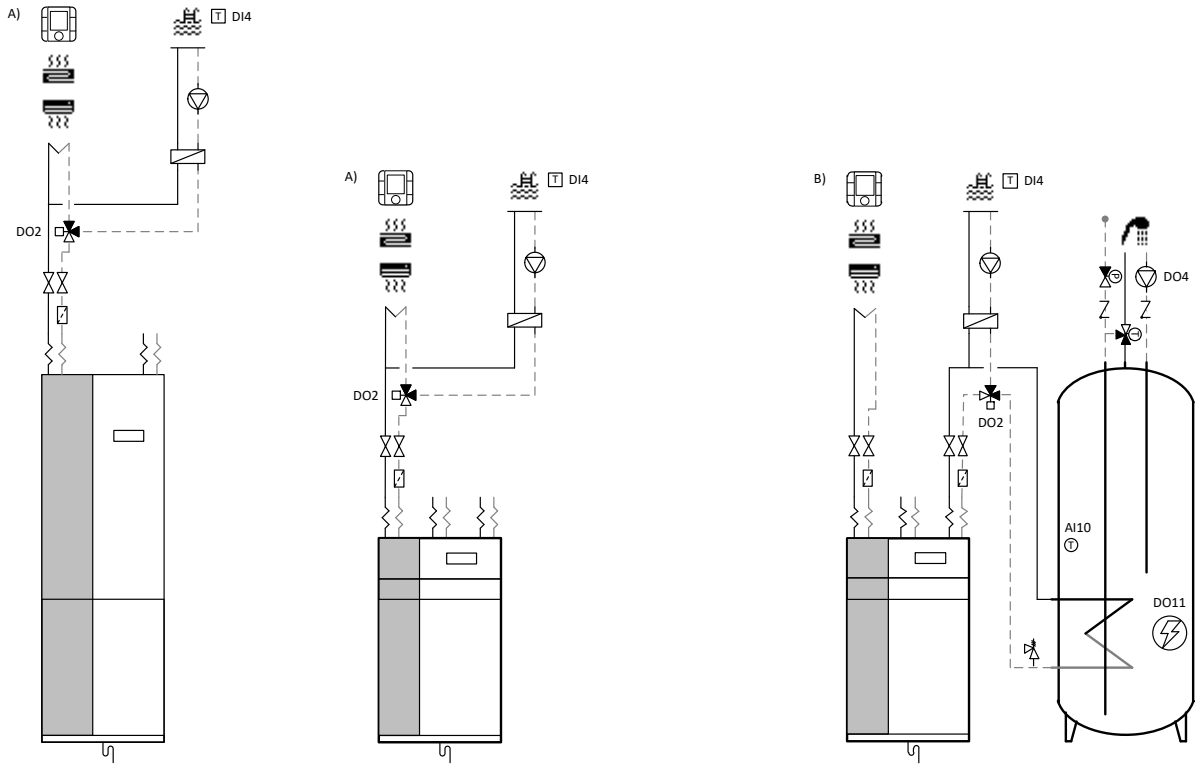


Figure 3.8. Pool production wiring schemes

### 3.6. Drain

Condensation may occur on certain internal heat pump components during normal operation. On the other hand, antifreeze mixture or water may spill from the heat pump's internal safety valves due to eventual circuit overpressure.

There is a drain connection at the rear of the heat pump to evacuate these liquids.



## 4. Filling and discharge circuits



**DANGER!**


- During filling work on the hydraulic circuits, take special care to prevent liquid from spilling on the internal electrical heat pump components, which could cause personal injury due to electrocution and/or poor equipment operation.

### 4.1. Filling the production circuit (heating, cooling, DHW and pool)

The heat pump is equipped with internal filling / discharge valves for the production circuit. It is recommended to use these valves to ensure that the internal circuits are completely bled. Take the following steps to fill the circuit.

1. Open all the valves of the production circuits.
2. Fill the circuit through the filling valve until the target pressure is reached. Make sure that the pressure does not exceed 3 bar (pressure gauge) under any circumstance.
3. Remove the air from the circuit using the traps installed for that purpose.
4. Check the circuit pressure and repeat the filling process if necessary.

The VOLTA W-L models are equipped with a manual trap at the entry to the coil to bleed the DHW production circuit.

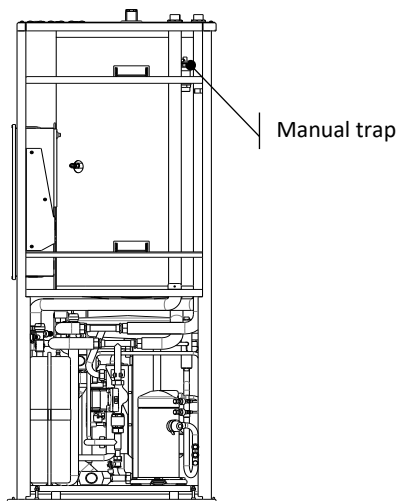

**Figure 4.1.** Bleeding the DHW production circuit in VOLTA W-L models

### 4.2. Filling the brine circuit

The brine system temperature can fall below 0°C, so a mixture of water/antifreeze agent must be used. It is recommended to use propylene glycol as an antifreeze additive or ethylene glycol with a corrosion inhibitor. Please check local regulations before using any type of antifreeze mixture.

When preparing the mixture, be careful to calculate the volume of antifreeze agent necessary to reach the desired degree of antifreeze protection. It is recommended to use a mixture with a freezing point at least 10°C below the nominal minimum temperature.

Brine circuit filling should be done with the filling unit installed in the return pipe and an external circulation pump, taking the following steps.

1. Prepare the appropriate proportions of antifreeze mixture in external tank A.
2. Connect the external recirculation pump outlet to valve D.
3. Connect a transparent hose from valve E to antifreeze mixture tank A.
4. Close valve C and open filling valves D and E.

5. Start the external recirculation pump and keep it running until the return is completely free of air and the antifreeze mixture is mixed perfectly.
6. Open valve C and keep the external pump connected to remove the air between valves D and E.
7. Close valve E and pressurise the circuit to target pressure. Make sure that the pressure does not exceed 3 bar (pressure gauge) under any circumstance.
8. Close valve D.

After completing the brine circuit filling process, it is recommended to check the concentration of antifreeze mixture again using a refractometer.

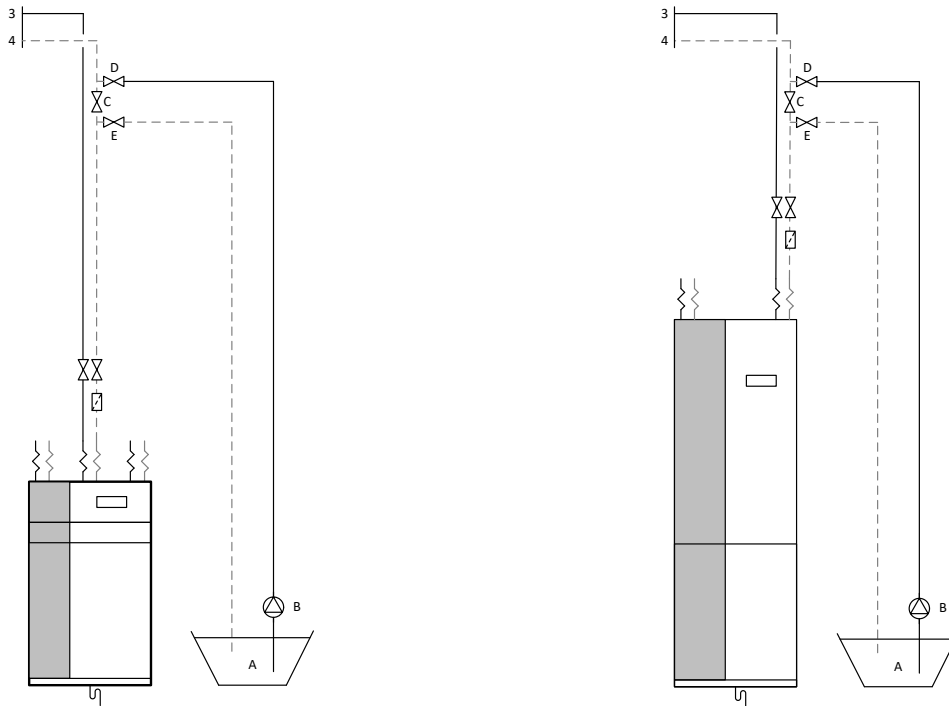


Figure 4.2. Filling the brine circuit

### 4.3. Discharging the circuits

The heat pump is equipped with internal drain valves that ensure complete discharge of the various internal circuits.


## 5. Electrical system



- **B**efore performing any operation on the electrical panel, disconnect the power supply.
- **R**emember that the heat pump has more than one electrical power supply.
- **V**OLTA Heat Pumps recommends that an external switch be installed for each of the electrical power sources (control, internal auxiliary equipment and inverter).
- **A**ny intervention on the electrical system must only be performed by an authorised electrician in accordance with applicable local regulations and the instructions provided in this manual.
- **T**he cables used to connect the heat pump must comply with applicable national regulations.
- **I**nstall cables entering the heat pump in such a way that they have no voltage, cannot become corroded, are not affected by vibration and do not touch sharp edges.
- **I**nstall power cables so that the ground cable is at least 50mm longer than the rest of the cables, to ensure that it is the last cable to be disconnected in case of accidental disconnection.

### 5.1. General instructions

The locations of the main electrical panel components are shown below.

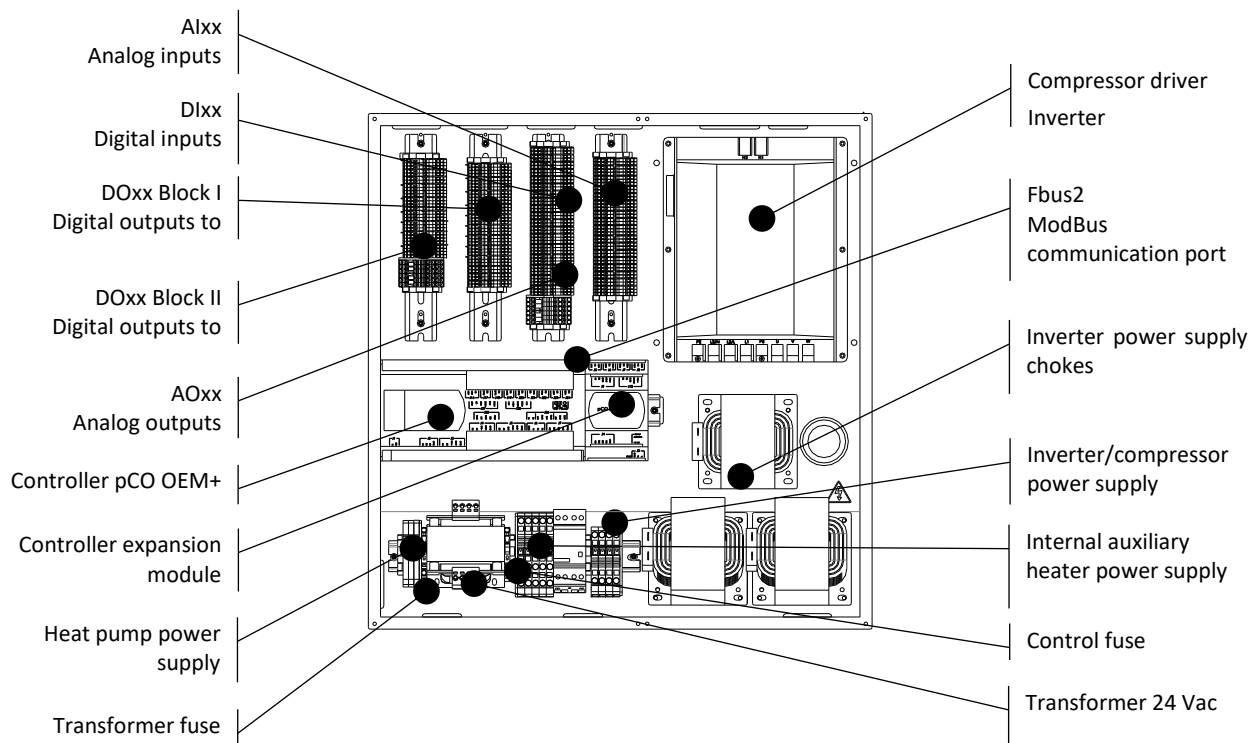

**Figure 5.1.** Location of the components in the VOLTA W-S/L electrical panel

Several installation devices are controlled from the heat pump electrical panel. Some are internal and other are installed externally. The internal components are connected to the electrical panel in the factory. Depending on the installation that the heat pump is going to be connected to, in addition to the power supply, it may be necessary to connect various temperature sensors (analogue

inputs Alxx), control signals from thermostats or other external equipment (digital inputs Dlxx) on/off switching of pumps and/or valves (digital outputs DOxx) or regulation of pumps and/or valves (analogue outputs AOxx).

The figure below shows a sample installation with the options for connecting external components to the heat pump.

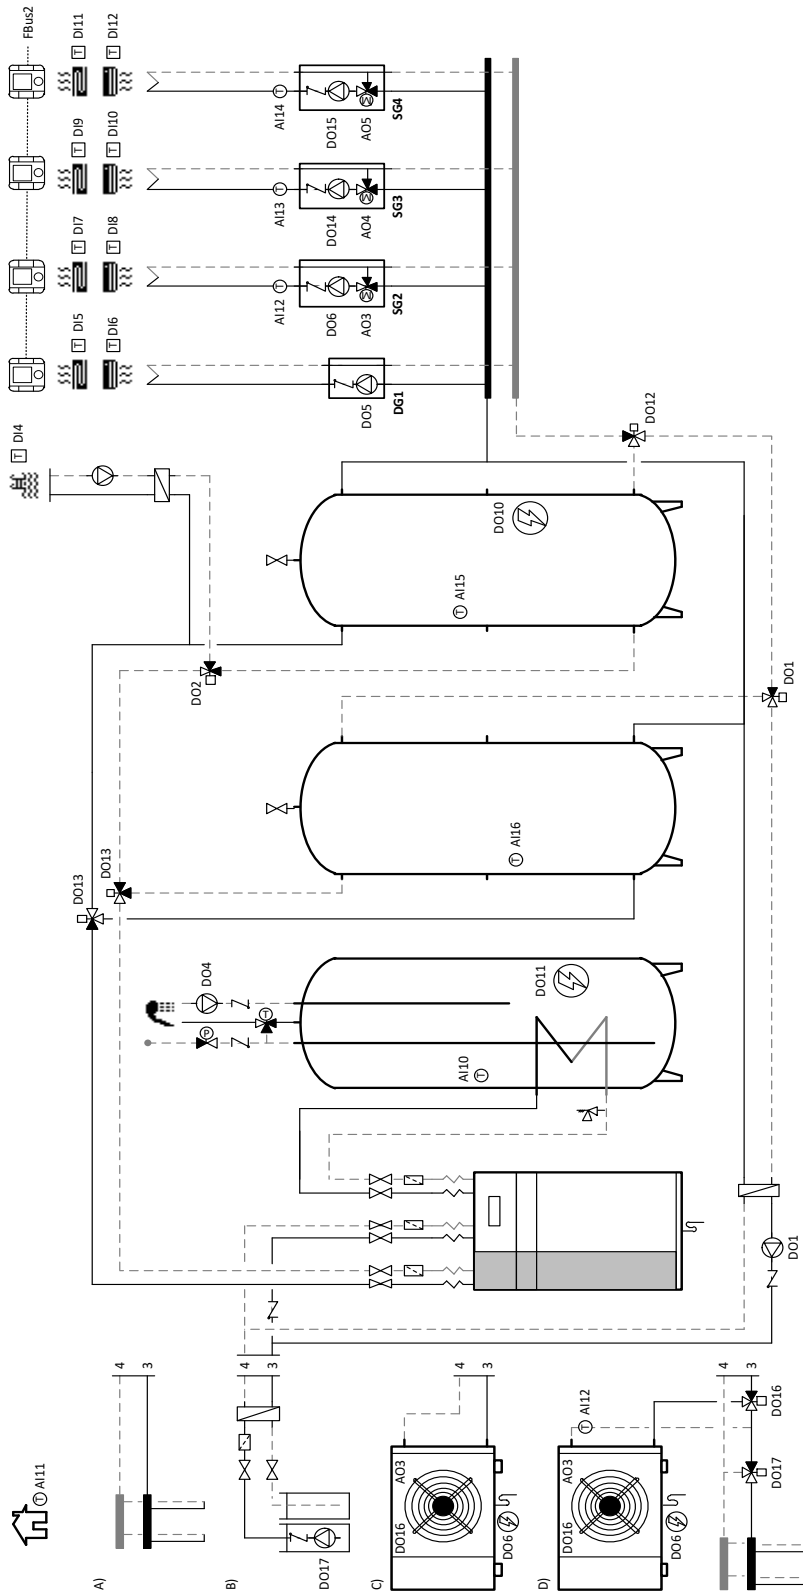


Figure 5.2. General scheme of the heat pump's electrical connections Example shown is an VOLTA W-S model.


### Analog inputs (A1xx)

These terminals are used to connect external temperature sensors. Only passive NTC temperature sensors can be connected, so cable connection polarity is not important.

If necessary, use extension cables with a maximum length of 50 m and a minimum diameter of 0.75 mm<sup>2</sup>. For greater lengths (up to 120 m) it is recommended to use cable with a section of 1.5 mm<sup>2</sup>.



- Use original temperature sensors only; other types of components could cause poor heat pump operation and/or cause heat pump component breakdowns.

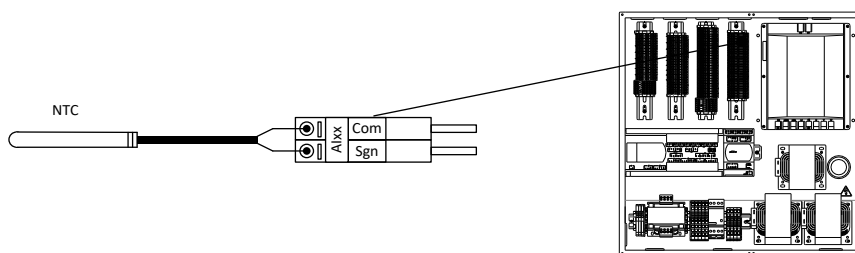


**Figure 5.3.** Example of temperature sensor connections

### Digital control inputs (D1xx)

Digital signals from thermostats or other external devices can be connected to these terminals to control heat pump production functions.



- Take special care with the working voltage of each digital input; improper handling could cause poor heat pump operation and/or heat pump component breakdowns. Some digital inputs require voltage-free signals, while others require 24Vac signals. 24Vac signals are sent from their own terminal block strip.
- Do not mix voltage-free and 24Vac signals.

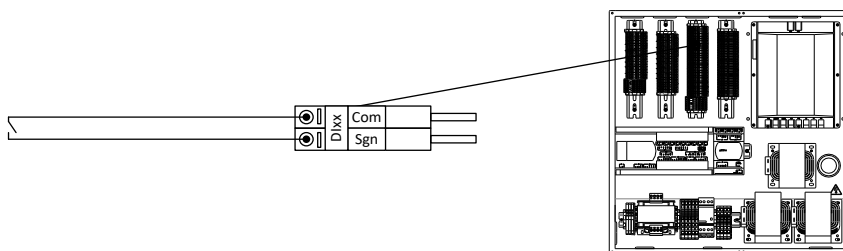

**Figure 5.4.** Example of voltage-free digital input connections



- You can connect external units to 24Vac directly from the heat pump; the total connected units must not exceed 36VA or 1.5A. If you ignore these ranges, the heat pump may malfunction and/or cause a component to break.

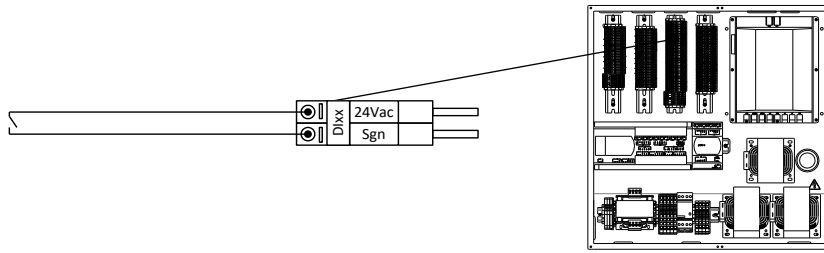


Figure 5.5. Example of digital input connection with 24Vac voltage

**Analog outputs (AOxx)**

These terminals send analogue 0-10Vdc regulation signals to modulate the control of outlet units with mixture, aérothermal brine units with variable speed fan, external auxiliary boilers, etc. On the other hand, these connectors have a 24Vac power supply terminal to supply the modulating valve motor.

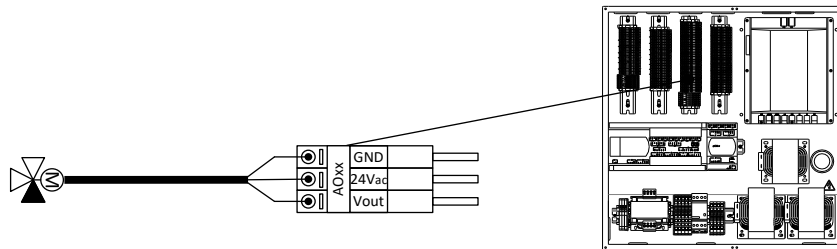


Figure 5.6. Example of 0-10Vdc modulating regulation signal connections

**Digital outputs to relay (DOxx)**

These terminals provide 230Vac activation signals for various external components, such as outlet units, open / close 3-way valves, external auxiliary equipment, etc. The connectors used for valve control allow connection of any type of 2-point control valve, as long as it has a single-phase 230Vac power supply.

**i**  
NOTE

- Pay special attention to the maximum consumption allowed by each connector. Use an intermediate relay for the connection, if necessary.

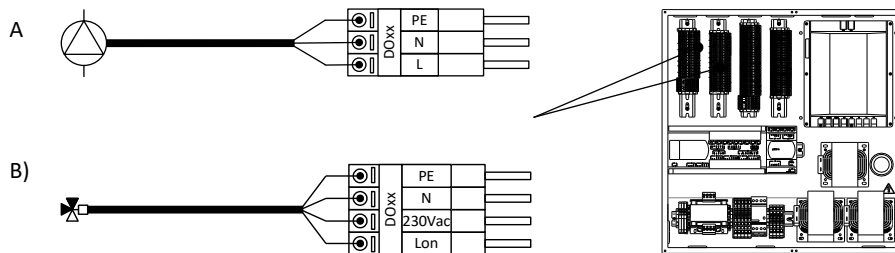


Figure 5.7. Example of digital outputs to relay for A) circulator pumps and B) open / close 3-way valves

**ModBus RS485 (FBus2) Communication Port**

Internal terminals with thT bus communication data can be connected to this terminal.

**5.2. Heat pump control power supply**

The VOLTA Heat Pumps heat pump requires two power supply points. One for the power supply of the control, including in this unit the power supply of the circulators and/or the internal and external valves and also the regulation signals, and the digital and analog

inputs. This power supply should always be single-phase 1/N/PE 230 V / 50-60 Hz, and should be provided by an external 16 A switch that cuts off the electrical circuit. The recommended cable cross-section is 2.5 mm<sup>2</sup>.

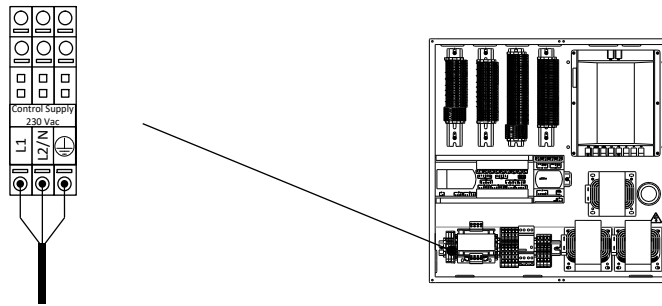


Figure 5.8. Connection scheme of the VOLTA W-S/L heat pump control power supply.

### 5.3. Power supply of the compressor

Depending on the heat pump model, the compressor power supply may require a single-phase 1/N/PE 230 V / 50-60 Hz or a three-phase 3/PE 400 V / 50-60 Hz power supply.

Heat pumps must be powered via an automatic external differential switch which switches off all the circuits and which detects at least alternating or pulsating leakage currents with or without a continuous component, i.e., a type A or A HI component (⚡). In addition to the differential switch mentioned above, the heat pump must be protected by an external thermal-magnetic switch. Shown below are the recommended cable diameters for each heat pump model and the recommended range of external electric thermal-magnetic protection. Maximum heat pump electrical consumption can vary widely depending on working conditions; for more information, please refer to the Technical Service Manual.

Model	Electrical power supply	Cable section	Maximum current
VOLTA W-S/L-* -10-230	Single phase	4 mm <sup>2</sup>	22 A
VOLTA W-S/L-* -10-400	Three phase	1.5 mm <sup>2</sup>	6 A
VOLTA W-S/L-* -14-230	Single phase	6 mm <sup>2</sup>	26 A
VOLTA W-S/L-* -14-400	Three phase	2.5 mm <sup>2</sup>	9 A
VOLTA W-S/L-* -22-230	Single phase	6 mm <sup>2</sup>	26 A
VOLTA W-S/L-* -22-400	Three phase	2.5 mm <sup>2</sup>	12 A

Table 5.1. Dimensioning of the power cable and the external switch.

This device may only be connected to a source with a system impedance of no more than 0.36 Ω. If necessary, consult your supply authority for information on system impedance.

To carry out the electrical installation, insert the power cable through the rear cover of the heat pump and pass it to the bottom left part of the heat pump. Continue by connecting the cables to the power terminal block of the heat pump, as described below.

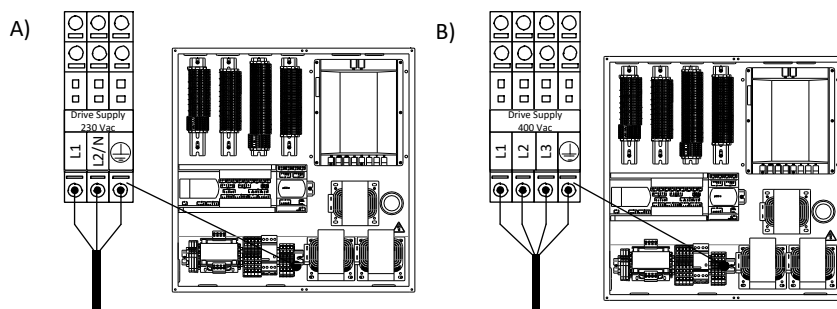


Figure 5.9. Power supply connection scheme in the A) single phase and B) three phase models.



- VOLTA W-S/L heat pumps comply with IEC 61000-3-12. The 3-phase heat pump always complies with the Ssc short-circuit rating whether it is greater than or equal to 1081 kVA at the interface point between the user's supply and the public system. It is the responsibility of the installer or user of the equipment to ensure, in consultation with the operator of the distribution network if necessary, that the equipment is connected only to a Ssc short-circuit power supply greater than or equal to 1081 kVA.

### 5.4. Internal auxiliary equipment power supply

VOLTA W-S/L heat pumps have 3 types of internal auxiliary resistor, as listed in the table below.

Unit	No. elements	Power per element	Total power	Connection 1/N/PE 230V 50-60 Hz	Connection 3/N/PE 400V 50-60 Hz (See note)
VOLTA W-S/L-*-10	3	1.3 kW	4 kW	✓	✓
VOLTA W-S/L-*-14	3	2 kW	6 kW	✓	✓
VOLTA W-S/L-*-22	3	2 kW	6 kW	✓	✓

Table 5.2. Types of internal auxiliary equipment available per heat pump.

Irrespective of the heating element installed, it requires a separate power supply for each element. Each of the elements is connected to a single-phase 1/N/PE 230V / 50-60 Hz power supply. Depending on the thermal power you wish to obtain, connect the number of elements you need.

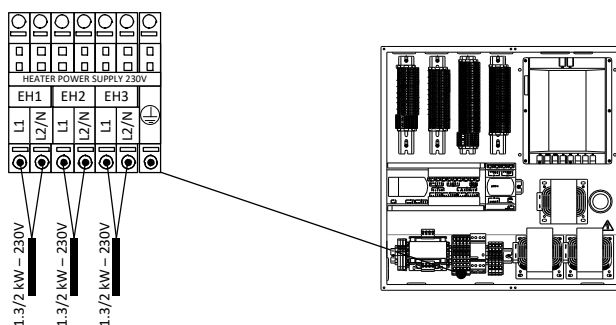


Figure 5.10. Example shown: a single-phase connection with VOLTA W-S/L range.



- If you have a three-phase 3/N/PE 400 V / 50-60 Hz electricity supply, you can connect the heater with a star-type connection.
- Do not connect the electrical heater in delta; this could cause poor heat pump operation and/or heat pump component breakdowns.

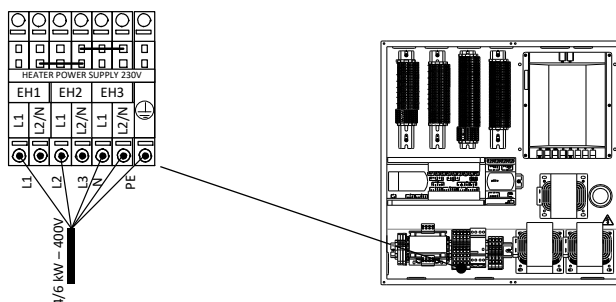


Figure 5.11. Example shown: a three-phase connection with VOLTA W-S/L range.

Regardless of the connection method, the electrical resistance must be powered by an external automatic switch that can cut off all the circuits. You can consult the capacity of these switches in the following table.



Unit	Connection 1/N/PE 230V 50-60 Hz						Connection 3/N/PE 400V 50-60 Hz	
	1 element [A]		2 elements		3 elements		3 elements	
	Cable	Protection	Cable	Protection	Cable	Protection	Cable	Protection
VOLTA W-S/L-*-10	2.5 mm <sup>2</sup>	C10A	4 mm <sup>2</sup>	C16A	4 mm <sup>2</sup>	C20A	2.5 mm <sup>2</sup>	C10
VOLTA W-S/L-*-14	2.5 mm <sup>2</sup>	C16A	4 mm <sup>2</sup>	C20A	6 mm <sup>2</sup>	C32A	2.5 mm <sup>2</sup>	C16A
VOLTA W-S/L-*-22	2.5 mm <sup>2</sup>	C16A	4 mm <sup>2</sup>	C20A	6 mm <sup>2</sup>	C32A	2.5 mm <sup>2</sup>	C16A

Table 5.3. Dimensioning of the power cable and the external switch.

### 5.5. External protections

It is equipped with a connector that can be connected to various types of external mechanical protections, such as flow switches, pressure switches, thermostats, etc.

The ESS connector is used to wire these protections. The external protection devices are powered from the heat pump connector and should have a cut-off capacity of at least 200mA/230Vac.

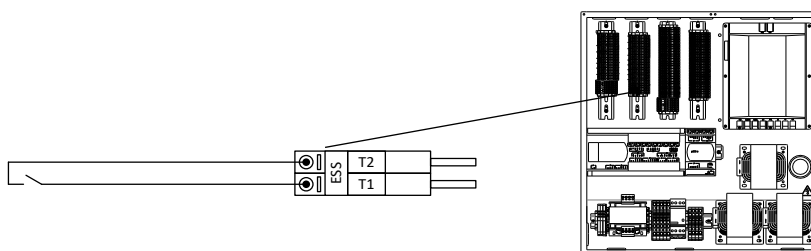


Figure 5.12. Connection scheme of the external protection devices

### 5.6. Outside temperature sensor

The outside temperature sensor, supplied with the heat pump, has to be installed for the heat pump to work properly.

The VOLTA W-S/L range is equipped with an NTC outdoor temperature sensor.

When installing the sensor, bear the following indications in mind:

- Install the outside sensor in a well ventilated area, but protected from wind and rain.
- Do not install the outside sensor at a distance of less than 1 m from windows or doors to avoid the effect of possible currents of warm air.
- It is recommended that you use a shielded 2-pole cable to prevent interferences.

Description	Signal	Type	Connector
External sensor temperature	Analog input	NTC 10K 25 °C sensor	AI11

Table 5.4. Connection terminals for external sensor temperature.

### 5.7. External storage systems

These can be used to control DHW storage, heating and cooling temperatures using temperature sensors.

Description	Signal	Type	Connector
DHW inter-storage tank	Analog input	NTC 10K 25 °C sensor	AI10
Heating buffer storage tank	Analog input	NTC 10K 25 °C sensor	AI15
Cooling buffer storage tank	Analog input	NTC 10K 25 °C sensor	AI16

**Table 5.5.** Connection terminals for external accumulation system.

## 5.8. External production equipment

These are used to control production equipment handling of the various services, such as bypass valves or circulator pumps.

Description	Signal	Type	Connector
Heating / cooling consumption	Digital output	Activation 230Vac / 2A maximum	DO12
Active cooling production	Digital output	Activation 230Vac / 2A maximum	DO13
Free cooling production	Digital output	Activation 230Vac / 1A maximum	DO1
Pool production	Digital output	Activation 230Vac / 2A maximum	DO2
DHW production	Digital output	Activation 230Vac / 2A maximum	DO3
DHW Recirculation	Digital output	Activation 230Vac / 2A maximum	DO4

**Table 5.6.** Connection terminals for external production equipment.

## 5.9. DG1 – SG4 Outlet Units

The heat pump can control a direct outlet unit (DG1) and three outlet units with mixture (SG2, SG3 and SG4). Unit activation can be controlled according to heating or cooling demand. In addition, the units with mixture can measure the unit's outlet temperature and generate a regulation signal for the 3-way modulating valve.

Description	Signal	Type	Connector
DG1 direct unit	Digital output	Activation 230Vac / 2A maximum	DO5
SG2 unit with mixture	Analog input	NTC 10K 25 °C sensor	AI12
	Analog output	Valve regulation 0 – 10Vdc	AO3
	Digital output	Activation 230Vac / 2A maximum	DO6
SG3 unit with mixture	Analog input	NTC 10K 25 °C sensor	AI13
	Analog output	Valve regulation 0 – 10Vdc	AO4
	Digital output	Activation 230Vac / 2A maximum	DO14
SG4 unit with mixture	Analog input	NTC 10K 25 °C sensor	AI14
	Analog output	Valve regulation 0 – 10Vdc	AO5
	Digital output	Activation 230Vac / 2A maximum	DO15

**Table 5.7.** Connection terminals for outlet units.



- You can connect external units to 24Vac directly from the heat pump; remember that the total connected units must not exceed 36VA or 1.5A. If you ignore these ranges, the heat pump may malfunction and/or cause a component to break.

## 5.10. External auxiliary equipment

This is used to control the activation of the auxiliary equipment integrated in the DHW heating buffer storage tanks via outputs to relays. They are also used to control activation of the all / nothing external auxiliary boiler. If modulating boilers are installed, it is also used to control the temperature downstream from the boiler, so the heat pump and the boiler can function simultaneously.

Description	Signal	Type	Connector
Auxiliary heating buffer storage tank equipment	Digital output	Activation 230Vac / 1A maximum	DO10
DHW inter-storage tank auxiliary equipment	Digital output	Activation 230Vac / 2A maximum	DO11
Auxiliary boiler	Analog input	NTC 10K 25 °C sensor	AI13
	Analog output	Valve regulation 0 – 10Vdc	AO4
	Digital output	Activation 230Vac / 2A maximum	DO14

Table 5.8. Auxiliary equipment connection terminals.

### 5.11. Aerothermal or hybrid brine systems

These are used to control activation of the aerothermal (VOLTA W-O range) and geothermal brine systems. They also generate a regulation signal for the variable speed fan of the VOLTA W-O unit.

The connection terminals of the SG2 outlet unit are used to manage the aerothermal brine units, so this one cannot be used.

Description	Signal	Type	Connector
Aerothermal collector (VOLTA W-O range)	Analog input	NTC 10K 25 °C sensor	AI12
	Analog output	Regulation 0 – 10Vdc	AO3
	Relay digital output	Defrost activation 230Vac / 2A maximum	DO6
	Relay digital output	Fan activation 230Vac / 2A maximum	DO16
Geothermal collector	Relay digital output	Activation 230Vac / 2A maximum	DO17

Table 5.9. Connection terminals for aerothermal or hybrid brine systems.

### 5.12. Alarm signal

If the heat pump cannot start up the compressor because of an active alarm, the heat pump will generate an alarm signal.

Description	Signal	Type	Connector
Alarm signal	Relay digital output	Activation 230Vac / 2A maximum	DO9

Table 5.10. Connection terminals for alarm signal.

### 5.13. Remote control by digital input

The heat pump is equipped with digital inputs for remote control of production services, EVU control and SG control modes.

Description	Signal	Type	Connector
Control of electrical consumption (EVU)	Digital input	Voltage-free (0V)	Configurable (DI1/DI2/DI3)
1 SG signal	Digital input	Voltage-free (0V)	Configurable (DI1/DI2/DI3)
2 SG signal	Digital input	Voltage-free (0V)	Configurable (DI1/DI2/DI3)
WINTER / SUMMER program selection	Digital input	Voltage-free (0V)	Configurable (DI1/DI2/DI3)
Enable / disable DHW production	Digital input	Voltage-free (0V)	Configurable (DI1/DI2/DI3)
Pool production	Digital input	Voltage-free (0V)	DI4

Table 5.11. Connection terminals for digital inputs that control service production, EVU and SG modes.



## NOTE

- Activation of the SG mode control is incompatible with EVU and only allows you to assign the remaining digital input to WINTER / SUMMER remote programme selection or DHW production.

#### EVU (production control with compressor and electric resistors)

Enables / disables energy production with both the compressor and the auxiliary equipment. In any event, circulator pumps, valves and other components can be activated to consume energy from the storage systems.

**SMART GRID**

Enables / disables the SG states of the heat pump. Depending on the value of the digital inputs, there are four SG operating statuses:

SG1 [0 0] (Normal state): The heat pump is operating normally, as per its configuration.

SG2 [0 1] (Reduced tariff): As we are in a reduced tariff period, we will take advantage of the lower price of electricity to use the pump to produce heat or cold.

SG3 [1 0] (Block status): Signal for compressor blocking to the heat pump.

SG4 [1 1] (Forced state): The heat pump will force the maximum possible consumption in the installation to help balance the network.

These external signals can be sent by the electricity company itself to endeavour to keep the distribution network balanced at all times.

**Remote WINTER / SUMMER program selection**

Used for remote selection of the heat pump operation program.

**DHW production**

Enables / disables the DHW production function. If the function is enabled, DHW production is governed by the DHW configuration in the heat pump controller.

**Pool production**

Activates / deactivates pool production demand. If the signal is requested, pool production is governed by the pool configuration in the heat pump controller.

**5.14. Inside environment control**

The heating and cooling functions can be controlled by digital signals from relay thermostats, by interior terminals with thT bus communication, by a combination of both or even not using any interior control terminal.

**Relay thermostats**

Each outlet unit, from DG1 to SG4, has two 24Vac digital signals to activate heating or cooling demands from the interior thermostats or other external control devices.

Description	Signal	Type	Connector
DG1 direct unit heating request	Digital input	24Vac signal	DI5
DG1 direct unit cooling request	Digital input	24Vac signal	DI6
Mixture SG2 unit heating request	Digital input	24Vac signal	DI7
Mixture SG2 unit cooling request	Digital input	24Vac signal	DI8
Mixture SG3 unit heating request	Digital input	24Vac signal	DI9
Mixture SG3 unit cooling request	Digital input	24Vac signal	DI10
Mixture SG4 unit heating request	Digital input	24Vac signal	DI11
Mixture SG4 unit cooling request	Digital input	24Vac signal	DI12

**Table 5.12.** Connection terminals for digital inputs that control outlet units DG1 - SG4.

A single thermostat or several thermostats connected in parallel can be used for each outlet unit, as shown below.

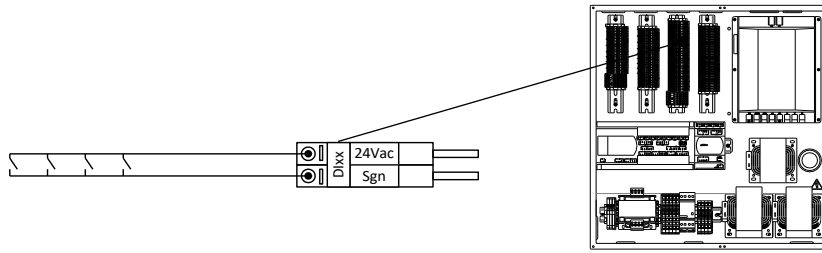


Figure 5.13. Example of connection of several thermostats in parallel

**thT bus terminals**

In addition to digital input control (interior thermostats) interior terminals with thT data bus communication can also be used. These terminals capture the inside temperature and humidity of the area associated with each outlet unit, DG1 – SG4, using a serial cable over a Modbus protocol. They also have a digital output to control a valve for the area. A single thT terminal can be connected per outlet unit.

Read the assembly instructions carefully before installing the terminals.

escription	Signal	Connector
thT terminal communication bus	ModBus RS485	FBus2

Table 5.13. Data bus connection terminals for the thT terminals.

Follow the recommendations below to connect the thT terminals to the heat pump.

- Use a three-pole, shielded AWG 20-22 cable for the connection.
- Connect the terminals in series for installations with more than one terminal in the network. The maximum length of the circuit assembly should not exceed 500 metres. For connection networks with more than two thTs, it is necessary to install a 120 Ohm heater between Rx+/Tx+ and Rx-/Tx- in the first and last terminal to prevent possible communication problems.
- Configure the terminal address according to the settings of the controller following the steps described in the thT terminal manual.

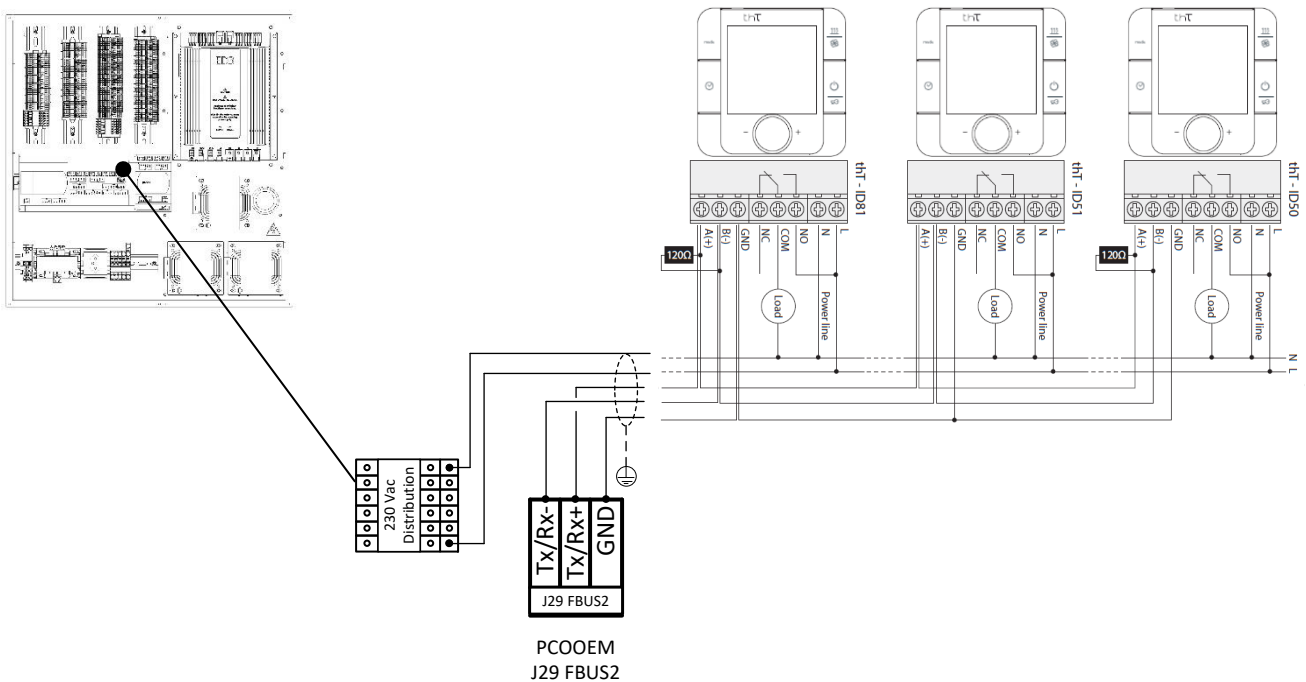


Figure 5.14. Example of connection of thT terminals

### Installation without interior terminals

The VOLTA W-S/L heat pumps can also be used in installations that do not have any type of interior terminal to generate request signals. In these cases, a continuous request can be imposed at the digital input of the unit to activate by selecting the appropriate control logic in the controller. As a result, the heat pump will run the start / stop cycles according to the temperature control of the circuit and the outside cut-off temperatures of each service.

### 5.15. Remote control by BUS


The heat pump allows MODBUS communication. Signals can be sent to switch the heat pump on and off, activate the demand for DHW, pool or heating or cooling services for each configured outlet unit and vary the setpoints for DHW, pool and for both heating and cooling in each unit.

Description	Signal	Connector
MODBUS read and write	ModBus RS485	BMS2

**Table 5.14.** Read and write data bus connection terminals.

Follow the recommendations below for connecting the converters.

- Use a three-pole, shielded AWG 20-22 cable for the connection.
- For installations with more than one heat pump, connect the terminals in series. The maximum length of the circuit assembly should not exceed 500 metres.
- Configure the BMS2 terminal address on the controller following the steps laid out in the technical service manual.

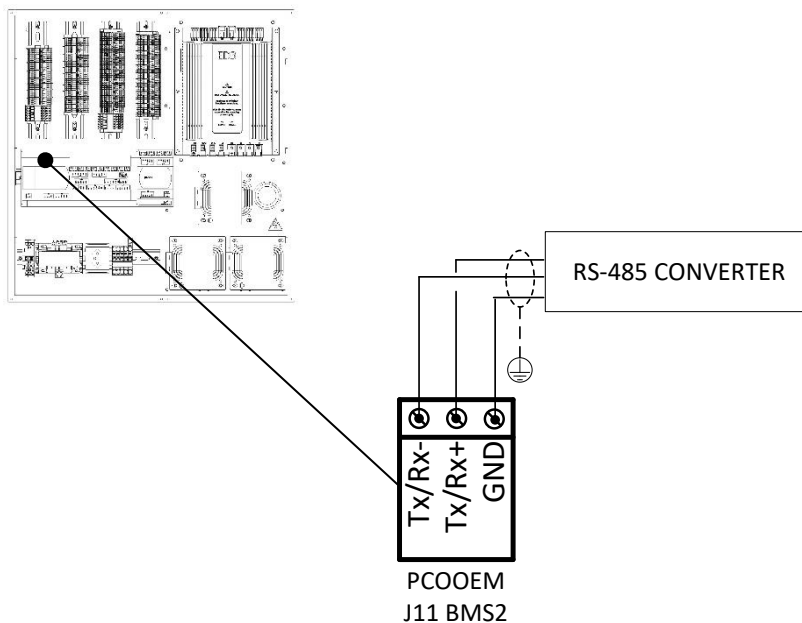

**Figure 5.15.** Example shown: an RS-485 converter connection for read write data on the heat pump.



NOTE

- For more information about BUS connections, please contact your distributor.

### 5.16. Energy meter


The heat pump allows MODBUS communication with energy meters supplied by VOLTA Heat Pumps. Before installing the energy meter, carefully read its assembly instructions.

Description	Signal	Connector
Energy meter BUS communication	ModBus RS485	FBus2

**Table 5.15.** Data bus connection terminals for the energy meter.

Follow the recommendations below to connect the energy meter to the heat pump.

- Use a three-pole, shielded AWG 20-22 cable for the connection.
- Connect the terminals in series for installations with more than one terminal in the network. The maximum length of the circuit assembly should not exceed 500 metres. For connection networks with more than two thTs, it is necessary to install a 120 Ohm heater between Rx+/Tx+ and Rx-/Tx- in the first and last terminal to prevent possible communication problems.
- To install the device supplied by VOLTA Heat Pumps, follow the steps in the manufacturer's installation manual included with the equipment. It is necessary to configure a 100 address on the measurement device for proper communication with your heat pump (See control applications manual).

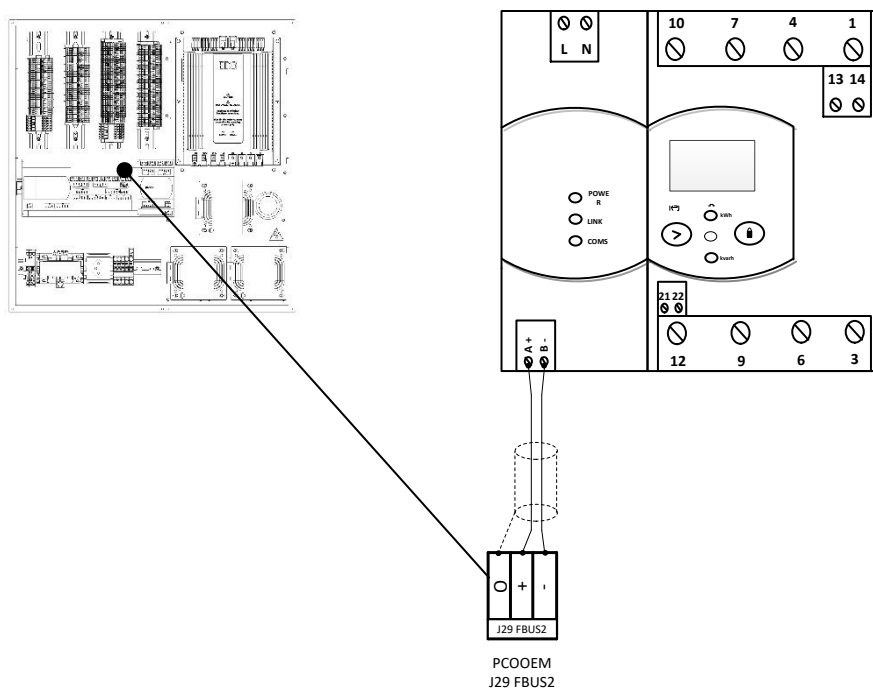

**Figure 5.16.** Example of connection of energy meter.

## 6. Start-up

Check the following items before starting up the heat pump. Not doing so could result in poor heat pump operation and/or serious heat pump damage.

1. All the hydraulic circuits of the installation have been properly filled and bled.
2. The cut-off valves of the hydraulic brine and production circuits are open.
3. An external switch has been installed to cut off all the power supply circuits of the heat pump.
4. The heat pump power supply has the proper voltage and allows sufficient consumption to start up the compressor.
5. The inside room temperature of the home is at least 18°C. Otherwise, the temperature has to be increased by auxiliary equipment.


## 7. Technical specifications VOLTA W-S | VOLTA W-L

### 7.1. Component location


No.	Description	No.	Description
1	Production outlet	29	Compressor suction temp. sensor
2	Production inlet	30	Compressor drain temp. sensor
3	Brine outlet	31	Brine outlet temp. sensor
4	Brine inlet	32	Brine inlet temp. sensor
5	DHW inter-storage tank outlet	33	Production outlet temp. sensor
6	DHW inter-storage tank inlet	34	Production inlet temp. sensor
7	Evaporator (direct cycle)	35	Suction pressure transducer
8	Condenser (direct cycle)	36	Discharge pressure transducer
9	HTR system exchanger	37	Brine pressure transducer
10	Free cooling / defrosting exchanger	38	Production pressure transducer
11	Compressor	39	Suction mini-pressure switch
12	Electronic expansion valve	40	Discharge mini-pressure switch
13	Filter dryer	41	Service outlet
14	Cycle inversion valve	42	Cooling outlet inverter
15	Production circulator pump	43	Cooling inlet inverter
16	Brine circulator pump	44	Outlet resistor
17	HTR circulator pump	45	Safety thermostat
18	Brine expansion vessel	46	Electrical panel
19	Production expansion vessel	47	Tap water inlet
20	Brine safety valve	48	DHW outlet
21	Production safety valve	49	DHW Recirculation
22	HTR system retention valve	50	DHW storage tank
23	Brine discharge valve	51	DHW coil
24	Production discharge valve	52	Manual trap
25	HTR system discharge valve	53	Storage tank drain valve
26	DHW valve	54	DHW temperature sensor
27	Free cooling production valve	55	Refrigerant circuit backflow preventer
28	Free cooling brine valve	56	Refrigeration valve inverter




**VOLTA W-S-H**

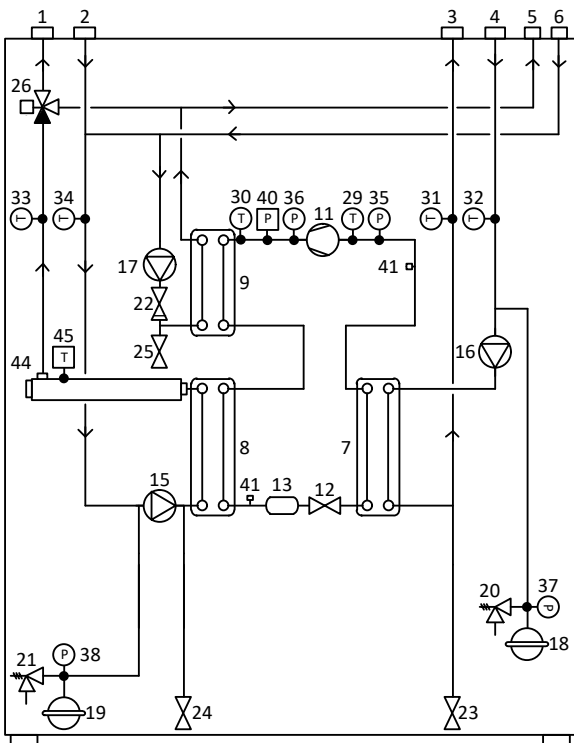


**VOLTA W-S-P**

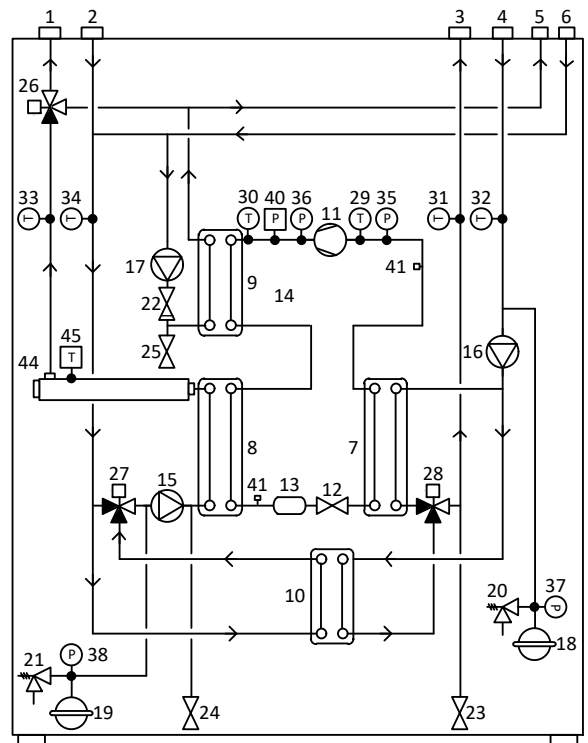

**VOLTA W-S-A**

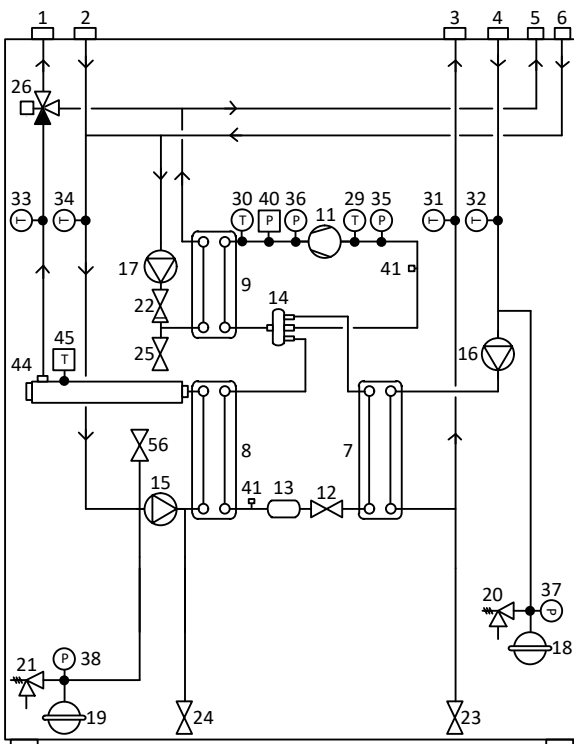


**VOLTA W-S-F**

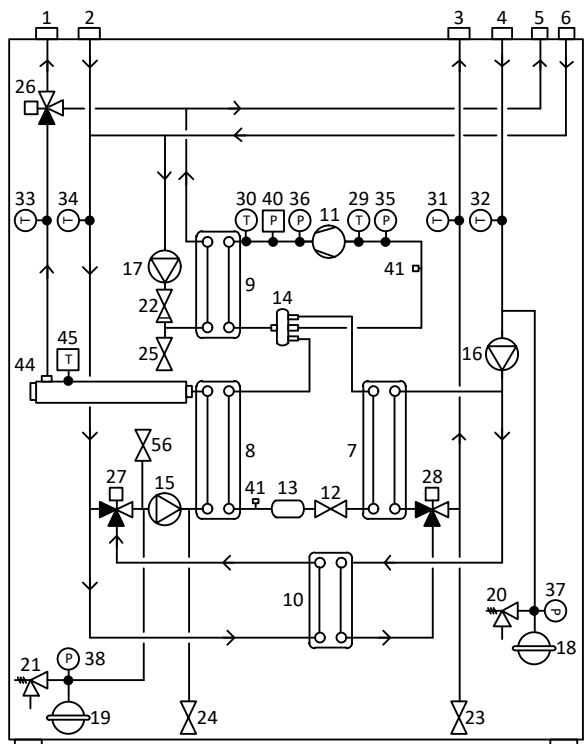


VOLTA W-S


EN

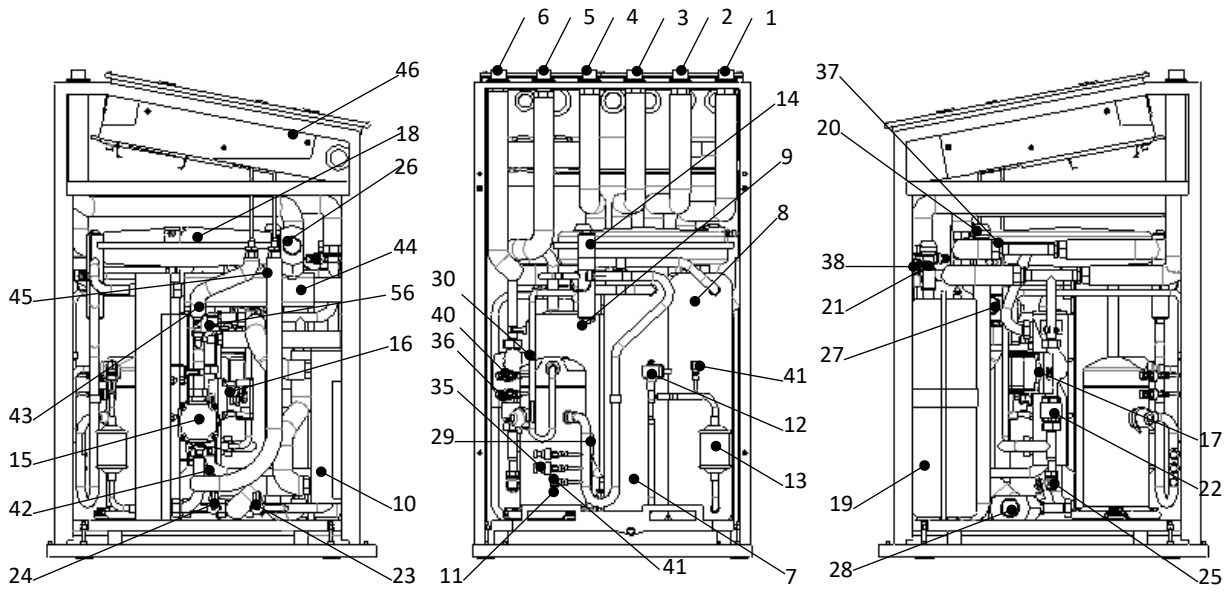

VOLTA W-L-H

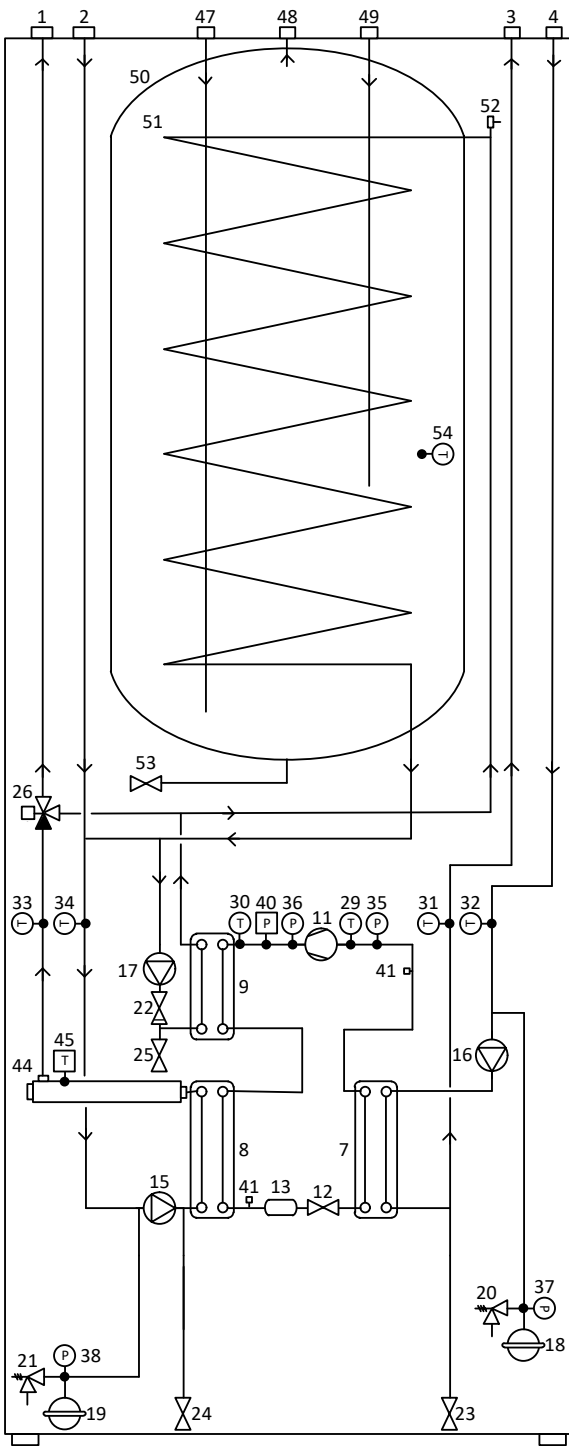


VOLTA W-L-P

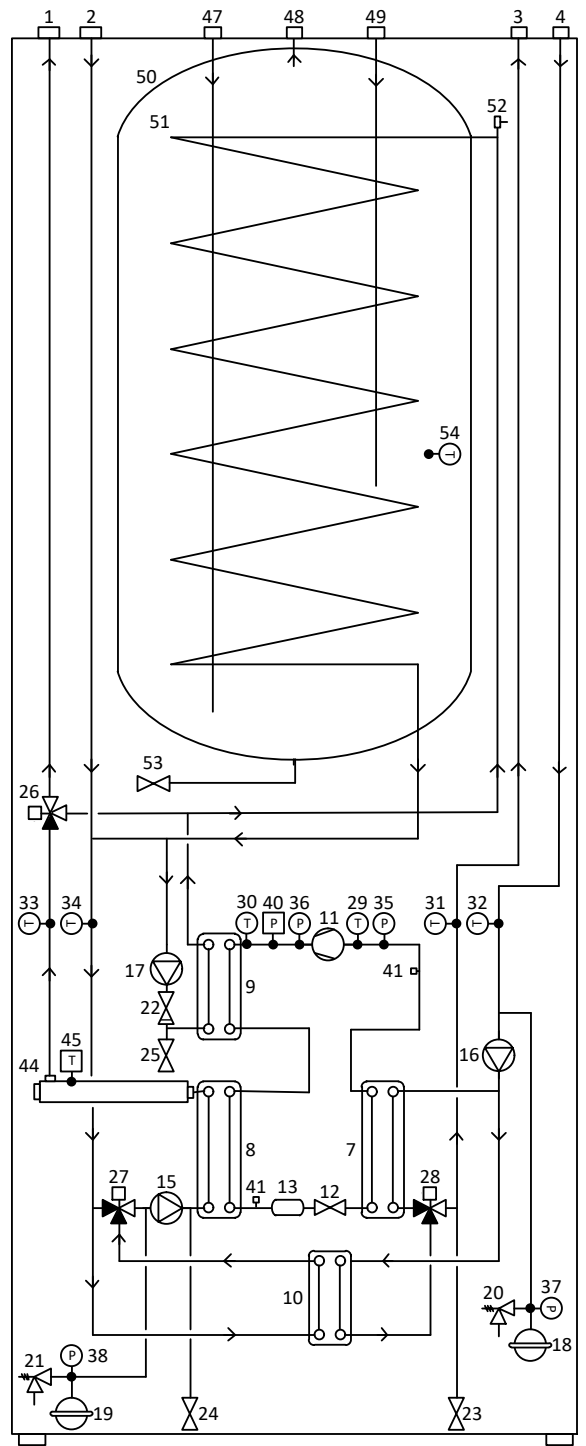


EN


VOLTA W-L-A

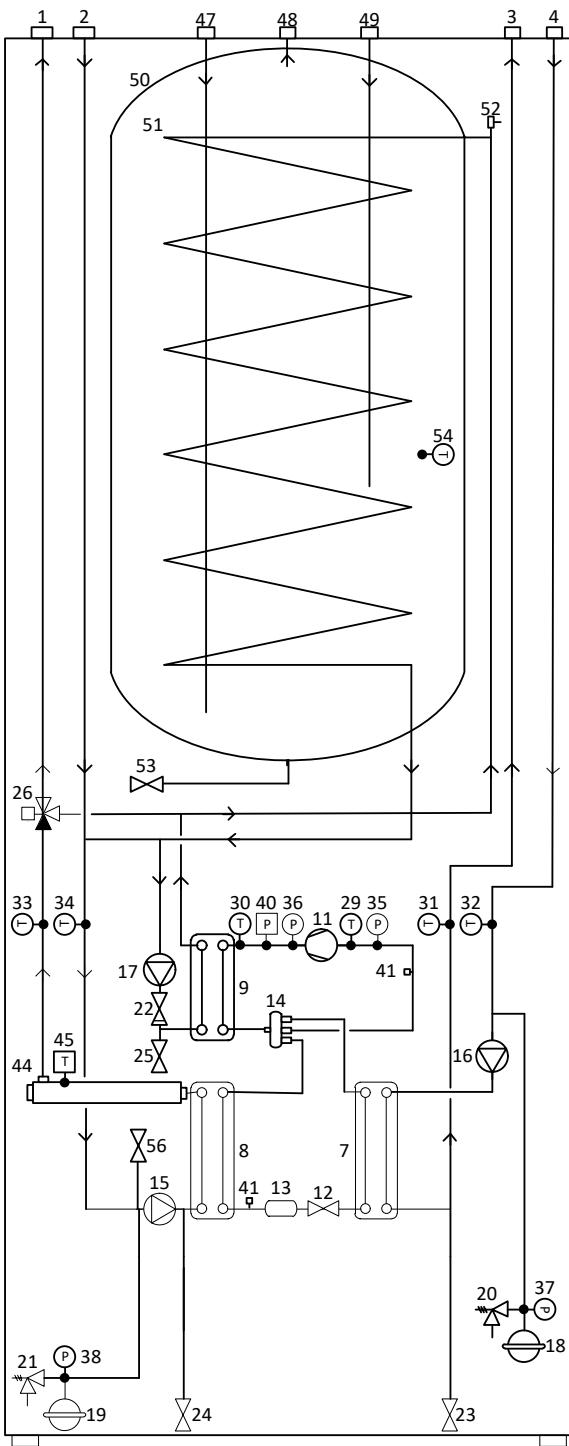


VOLTA W-L-F

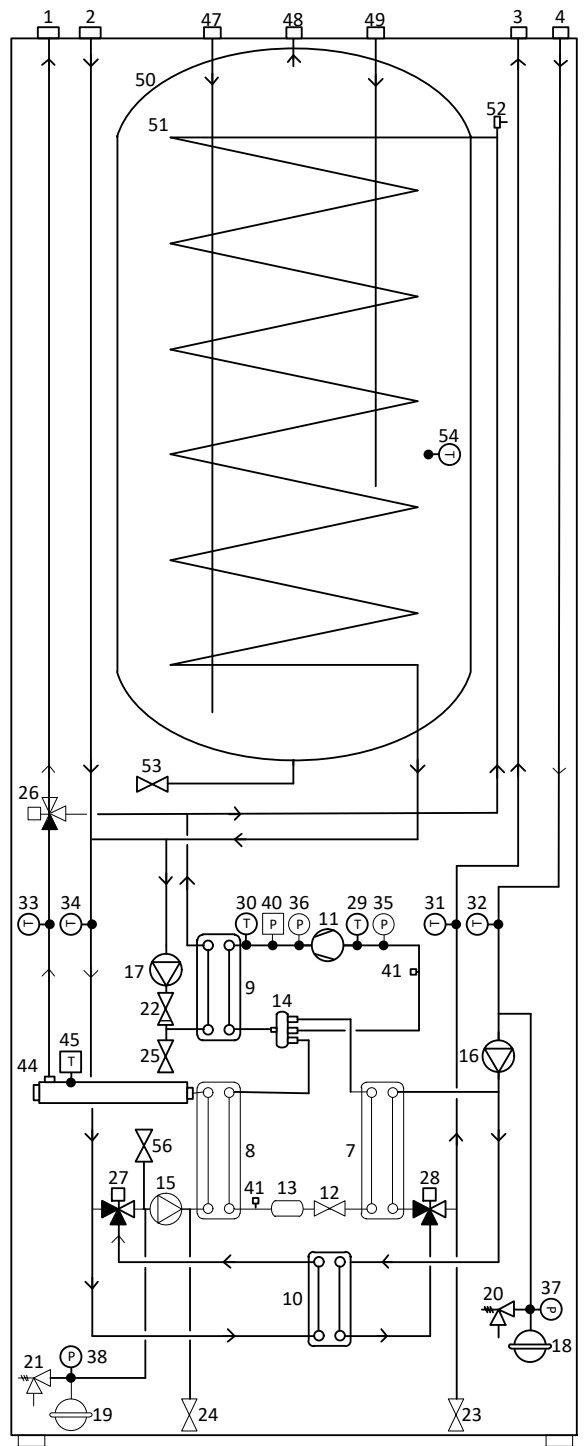

VOLTA W-L

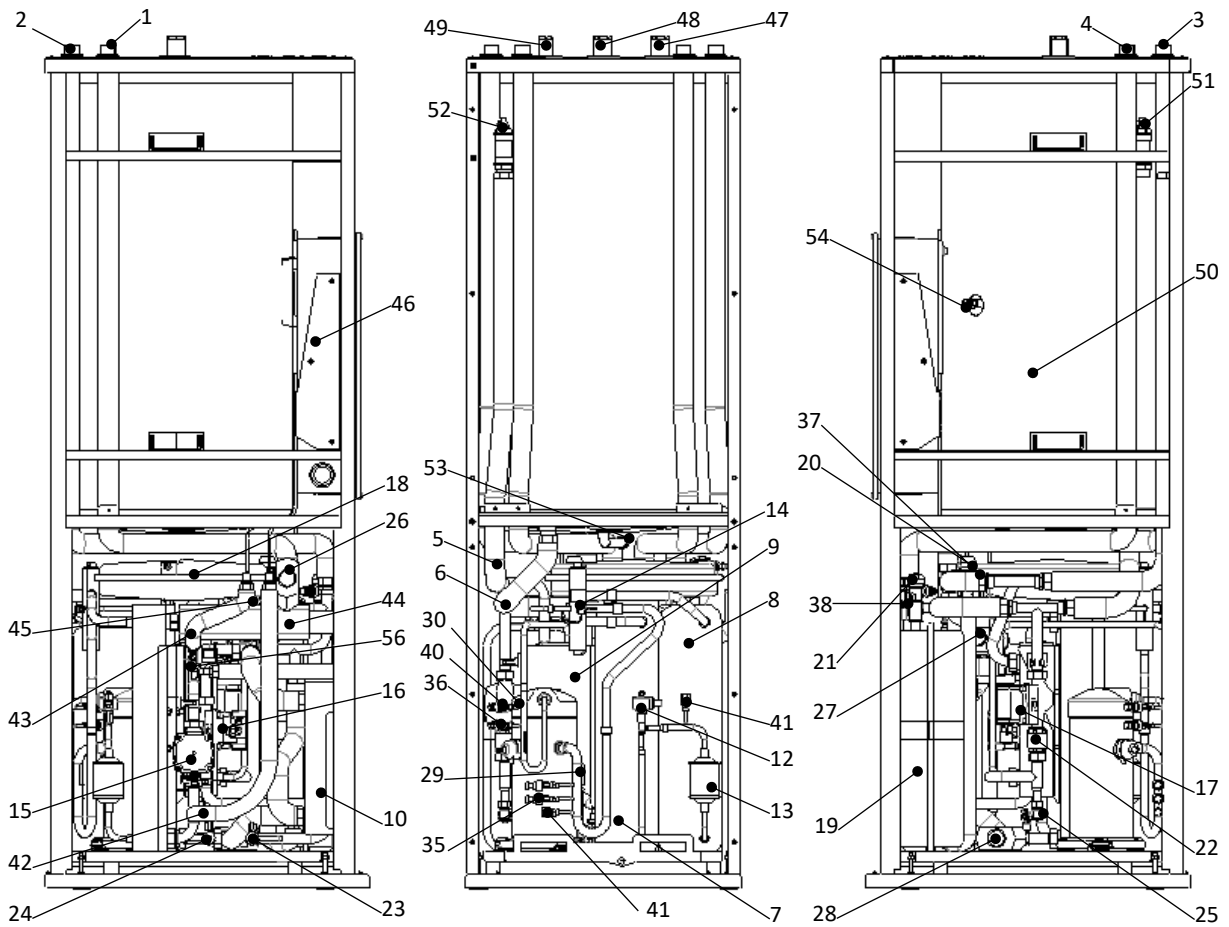


VOLTA W-S/L

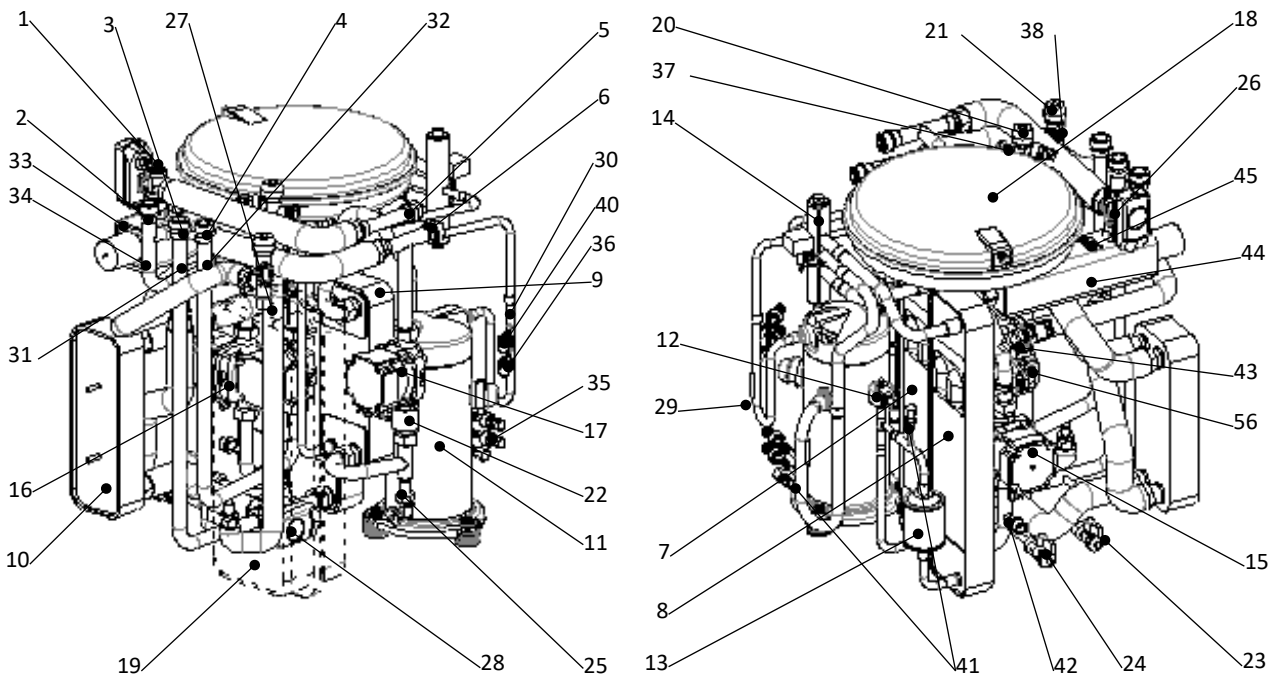

### 7.2. Power circuit diagram

VOLTA W-S-L-\*-10-230(-SH)

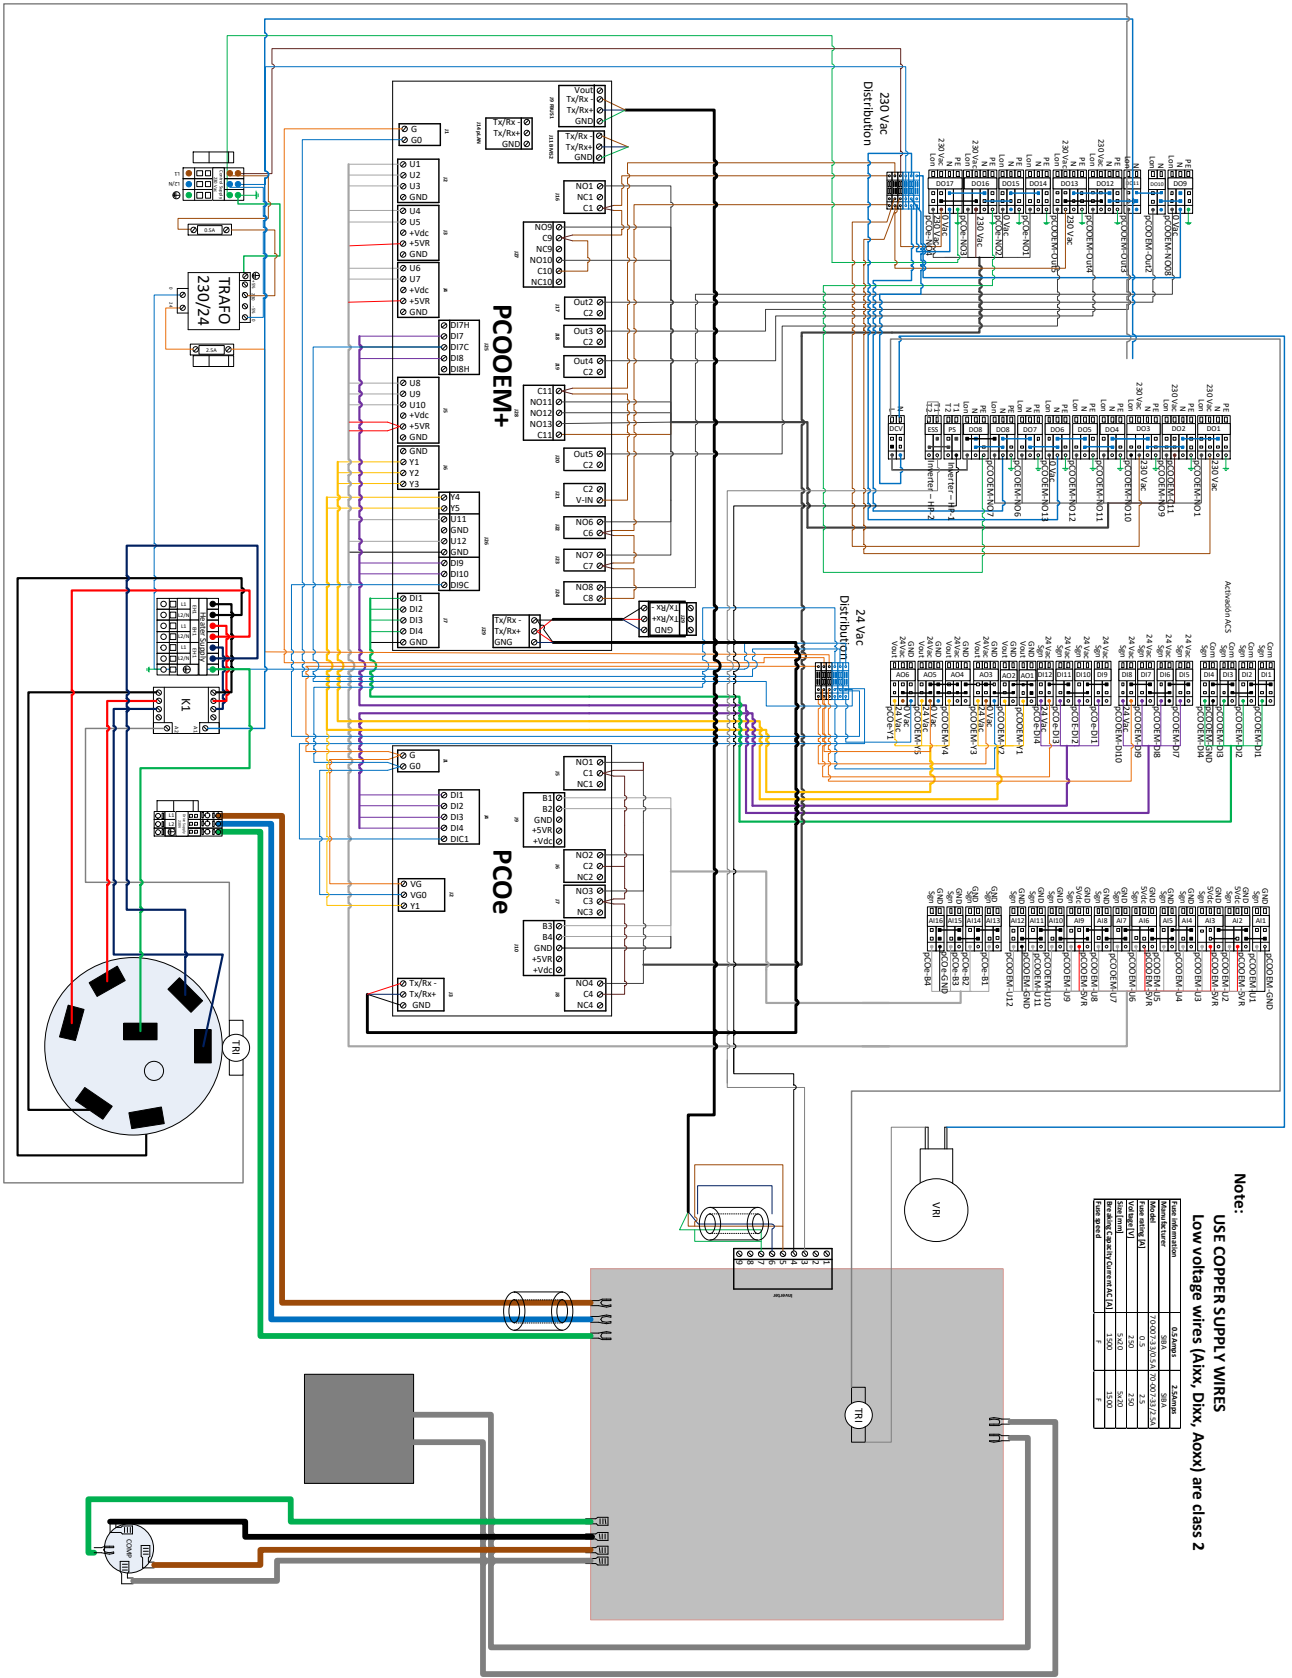


**Note:**  
**USE COPPER SUPPLY WIRES**  
**Low voltage wires (Axx, Dxx, Axxx) are class 2**

Wire designation	AWG	3-Phase
Power/Wire	10/2 (11), 10/2 (12)	10/2
Power/Wire (V)	6, 7, 8	7, 8
Power/Wire (D)	10/2 (11), 10/2 (12)	10/2
Power/Wire (Axx)	18, 20	20
Power/Wire (Dxx)	18, 20	20
Power/Wire (Axxx)	18, 20	20
Power/Wire (Control Axx)	18, 20	20
Power/Wire (Control Dxx)	18, 20	20
Power/Wire (Control Axxx)	18, 20	20
Power/Wire (Control Dxxx)	18, 20	20



VOLTA W-S-L\*-14-230(-SH) | VOLTA W-S-L\*-22-230(-SH)

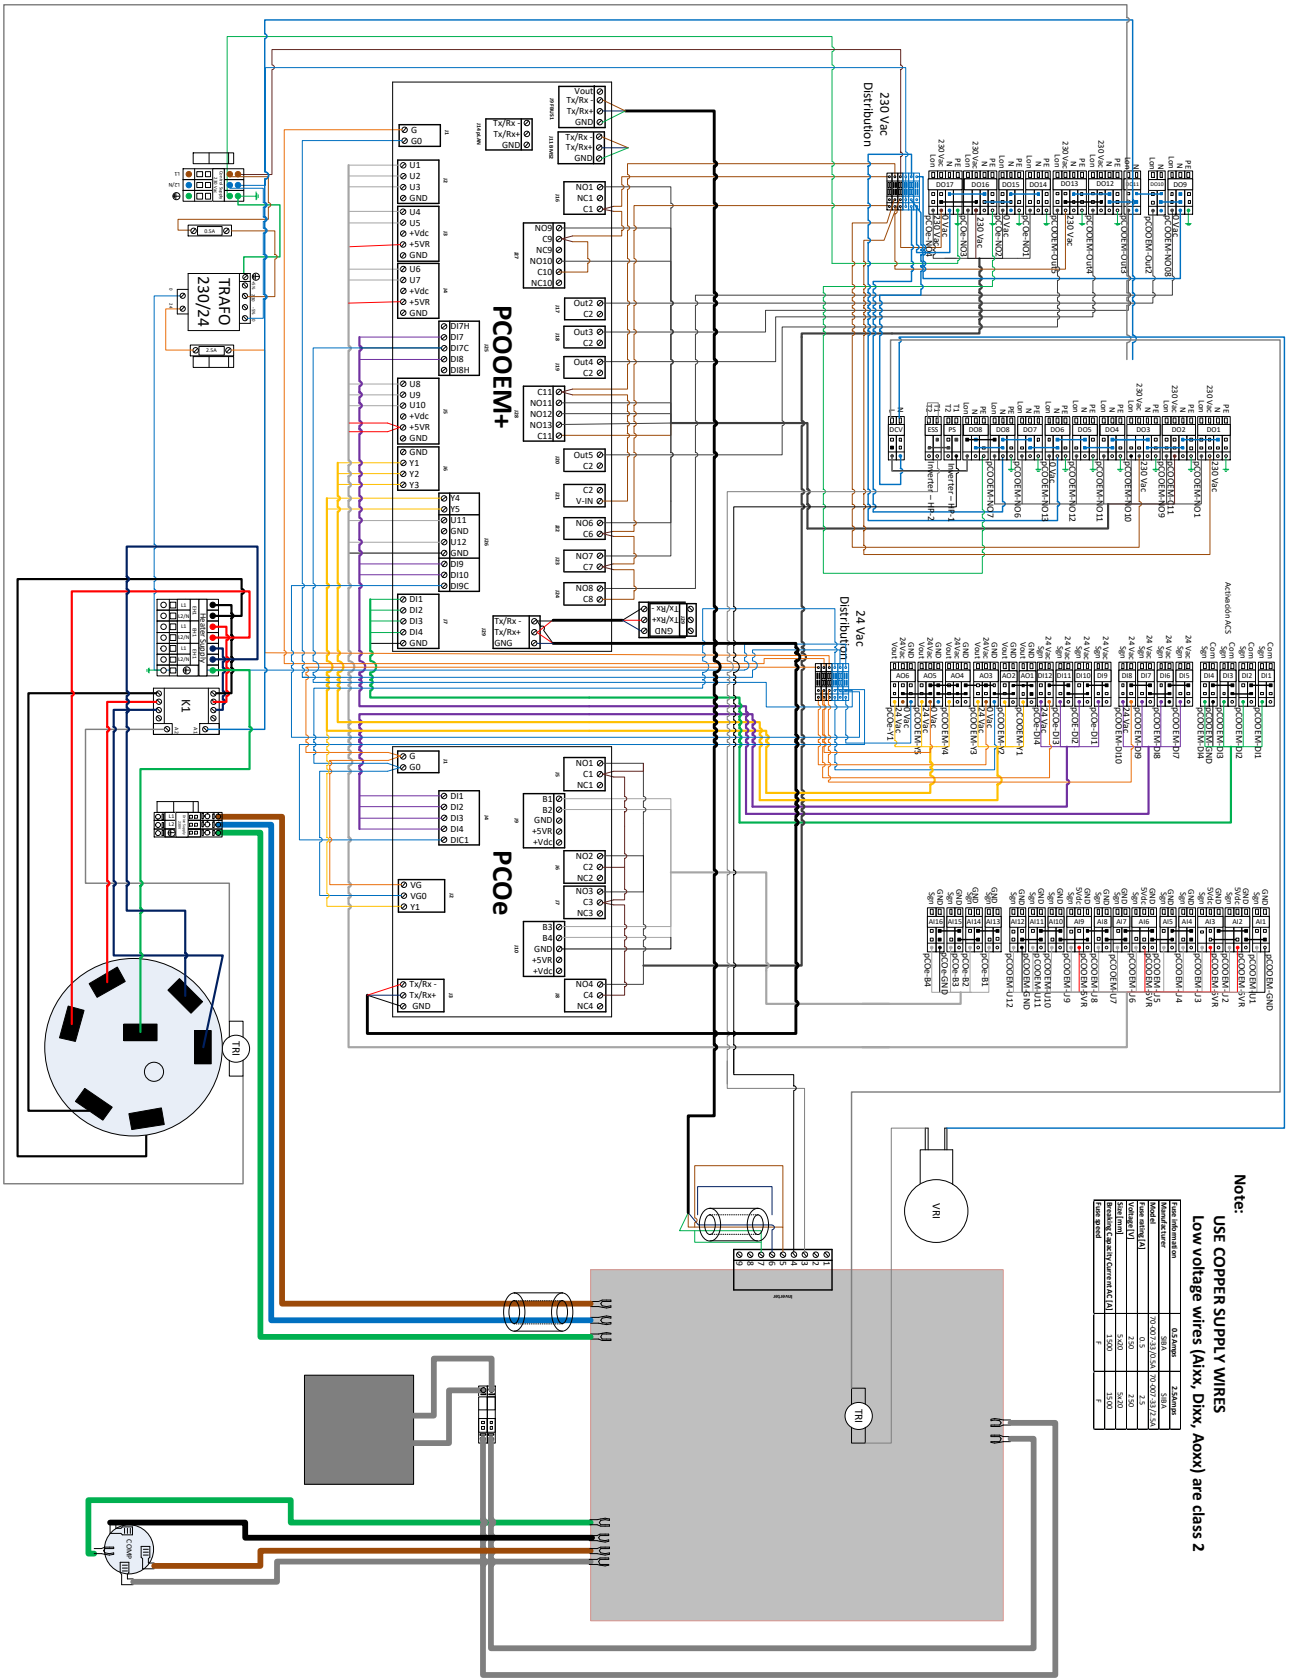


Note:

USE COPPER SUPPLY WIRES (A1xx, D1xx, A0xx) are class 2

Wire Size	AWG	mm <sup>2</sup>	mm
20	18	0.82	3.2
16	14	2.08	4.1
12	10	5.26	5.3
8	6	13.3	6.7
4	2	33.6	8.5
2	0	85.0	10.7
1	0	107.0	13.0
0	0	133.0	16.0
0	0	167.0	20.0
0	0	217.0	26.0
0	0	279.0	33.0
0	0	356.0	42.0
0	0	451.0	53.0
0	0	576.0	67.0
0	0	734.0	85.0
0	0	938.0	108.0
0	0	1199.0	138.0
0	0	1528.0	178.0
0	0	1946.0	229.0
0	0	2474.0	294.0
0	0	3142.0	375.0
0	0	4000.0	478.0
0	0	5116.0	606.0
0	0	6542.0	764.0
0	0	8348.0	974.0
0	0	10694.0	1248.0
0	0	13660.0	1590.0
0	0	17346.0	2010.0
0	0	21862.0	2520.0
0	0	28118.0	3210.0
0	0	35934.0	4080.0
0	0	45310.0	5130.0
0	0	57356.0	6470.0
0	0	72972.0	8190.0
0	0	92158.0	10300.0
0	0	115914.0	12810.0
0	0	145240.0	15840.0
0	0	181146.0	19500.0
0	0	224622.0	24000.0
0	0	285678.0	30000.0
0	0	364314.0	37500.0
0	0	460540.0	47000.0
0	0	584366.0	59000.0
0	0	745692.0	74000.0
0	0	944518.0	93000.0
0	0	1191844.0	117000.0
0	0	1507670.0	147000.0
0	0	1902996.0	186000.0
0	0	2398722.0	234000.0
0	0	3004448.0	294000.0
0	0	3820174.0	370000.0
0	0	4855900.0	470000.0
0	0	6191626.0	590000.0
0	0	7827352.0	740000.0
0	0	9863078.0	930000.0
0	0	12498804.0	1170000.0
0	0	15834530.0	1470000.0
0	0	19970256.0	1860000.0
0	0	25005982.0	2340000.0
0	0	31041708.0	2940000.0
0	0	38177434.0	3700000.0
0	0	47413160.0	4700000.0
0	0	58848886.0	5900000.0
0	0	72484612.0	7400000.0
0	0	88420338.0	9300000.0
0	0	106756064.0	11700000.0
0	0	127491790.0	14700000.0
0	0	150727516.0	18600000.0
0	0	176463242.0	23400000.0
0	0	214698968.0	29400000.0
0	0	265434694.0	37000000.0
0	0	329670420.0	47000000.0
0	0	407406146.0	59000000.0
0	0	499641872.0	74000000.0
0	0	607377598.0	93000000.0
0	0	732613324.0	117000000.0
0	0	876349050.0	147000000.0
0	0	1039584776.0	186000000.0
0	0	1223320502.0	234000000.0
0	0	1428556228.0	294000000.0
0	0	1656291954.0	370000000.0
0	0	1907527680.0	470000000.0
0	0	2182263406.0	590000000.0
0	0	2480500132.0	740000000.0
0	0	2802236858.0	930000000.0
0	0	3147473584.0	1170000000.0
0	0	3516210310.0	1470000000.0
0	0	3908447036.0	1860000000.0
0	0	4324183762.0	2340000000.0
0	0	4763420488.0	2940000000.0
0	0	5226157214.0	3700000000.0
0	0	5712393940.0	4700000000.0
0	0	6222130666.0	5900000000.0
0	0	6755367392.0	7400000000.0
0	0	7312104118.0	9300000000.0
0	0	7892340844.0	11700000000.0
0	0	8496077570.0	14700000000.0
0	0	9123314296.0	18600000000.0
0	0	9774051022.0	23400000000.0
0	0	10448287748.0	29400000000.0
0	0	11145474274.0	37000000000.0
0	0	11865610800.0	47000000000.0
0	0	12608707326.0	59000000000.0
0	0	13374753852.0	74000000000.0
0	0	14162750378.0	93000000000.0
0	0	14972696904.0	117000000000.0
0	0	15804593430.0	147000000000.0
0	0	16658449956.0	186000000000.0
0	0	17534256482.0	234000000000.0
0	0	18432013008.0	294000000000.0
0	0	19351719534.0	370000000000.0
0	0	20293376060.0	470000000000.0
0	0	21256982586.0	590000000000.0
0	0	22242539112.0	740000000000.0
0	0	23250045638.0	930000000000.0
0	0	24279502164.0	1170000000000.0
0	0	25330908690.0	1470000000000.0
0	0	26404265216.0	1860000000000.0
0	0	27499571742.0	2340000000000.0
0	0	28616828268.0	2940000000000.0
0	0	29755934794.0	3700000000000.0
0	0	30916891320.0	4700000000000.0
0	0	32099697846.0	5900000000000.0
0	0	33304354372.0	7400000000000.0
0	0	34530860898.0	9300000000000.0
0	0	35779217424.0	11700000000000.0
0	0	37049423950.0	14700000000000.0
0	0	38341480476.0	18600000000000.0
0	0	39655287002.0	23400000000000.0
0	0	40990843528.0	29400000000000.0
0	0	42348150054.0	37000000000000.0
0	0	43727206580.0	47000000000000.0
0	0	45128013106.0	59000000000000.0
0	0	46550569632.0	74000000000000.0
0	0	47994876158.0	93000000000000.0
0	0	49460932684.0	117000000000000.0
0	0	50948739210.0	147000000000000.0
0	0	52458295736.0	186000000000000.0
0	0	53989602262.0	234000000000000.0
0	0	55542658788.0	294000000000000.0
0	0	57117465314.0	370000000000000.0
0	0	58714021840.0	470000000000000.0
0	0	60332328366.0	590000000000000.0
0	0	61972384892.0	740000000000000.0
0	0	63634191418.0	930000000000000.0
0	0	65317747944.0	1170000000000000.0
0	0	67023054470.0	1470000000000000.0
0	0	68750110996.0	1860000000000000.0
0	0	70498917522.0	2340000000000000.0
0	0	72269474048.0	2940000000000000.0
0	0	74061780574.0	3700000000000000.0
0	0	75875837100.0	4700000000000000.0
0	0	77711643626.0	5900000000000000.0
0	0	79569200152.0	7400000000000000.0
0	0	81448506678.0	9300000000000000.0
0	0	83349563204.0	11700000000000000.0
0	0	85272369730.0	14700000000000000.0
0	0	87216926256.0	18600000000000000.0
0	0	89183232782.0	23400000000000000.0
0	0	91171289308.0	29400000000000000.0
0	0	93181095834.0	37000000000000000.0
0	0	95212652360.0	47000000000000000.0
0	0	97265958886.0	59000000000000000.0
0	0	99340015412.0	74000000000000000.0
0	0	101435821938.0	93000000000000000.0
0	0	103553378464.0	117000000000000000.0
0	0	105692684990.0	147000000000000000.0
0	0	107853741516.0	186000000000000000.0
0	0	109936548042.0	234000000000000000.0
0	0	112041104568.0	294000000000000000.0
0	0	114167511094.0	370000000000000000.0
0	0	116315767620.0	470000000000000000.0
0	0	118485874146.0	590000000000000000.0
0	0	120677830672.0	740000000000000000.0
0	0	122891637198.0	930000000000000000.0
0	0	125127293724.0	1170000000000000000.0
0	0	127384800250.0	1470000000000000000.0
0	0	129664156776.0	1860000000000000000.0
0	0	131965363302.0	2340000000000000000.0
0	0	134288420828.0	2940000000000000000.0
0	0	136633328354.0	3700000000000000000.0
0	0	138999985880.0	4700000000000000000.0
0	0	141488393406.0	5900000000000000000.0
0	0	143998550932.0	7400000000000000000.0
0	0	146530458458.0	9300000000000000000.0
0	0	149084115984.0	11700000000000000000.0
0	0	151659523510.0	14700000000000000000.0
0	0	154256681036.0	18600000000000000000.0
0	0	156875488562.0	23400000000000000000.0
0	0	159515946088.0	29400000000000000000.0
0	0	162178053614.0	37000000000000000000.0
0	0	164861811140.0	47000000000000000000.0
0	0	167567218666.0	59000000000000000000.0
0	0	170294276192.0	74000000000000000000.0
0	0	173042983718.0	93000000000000000000.0
0	0	175813341244.0	117000000000000000000.0
0	0	178605348770.0	147000000000000000000.0
0	0	181418906296.0	186000000000000000000.0
0	0	184254013822.0	234000000000000000000.0
0	0	187110671348.0	294000000000000000000.0
0	0	190088878874.0	370000000000000000000.0
0	0	193088636400.0	470000000000000000000.0
0	0	196109943926.0	590000000000000000000.0
0	0	199152801452.0	740000000000000000000.0
0	0	202217208978.0	930000000000000000000.0

VOLTA W-S-L\*-10-400(-SH) | VOLTA W-S-L\*-14-400(-SH) | VOLTA W-S-L\*-22-400(-SH)

EN

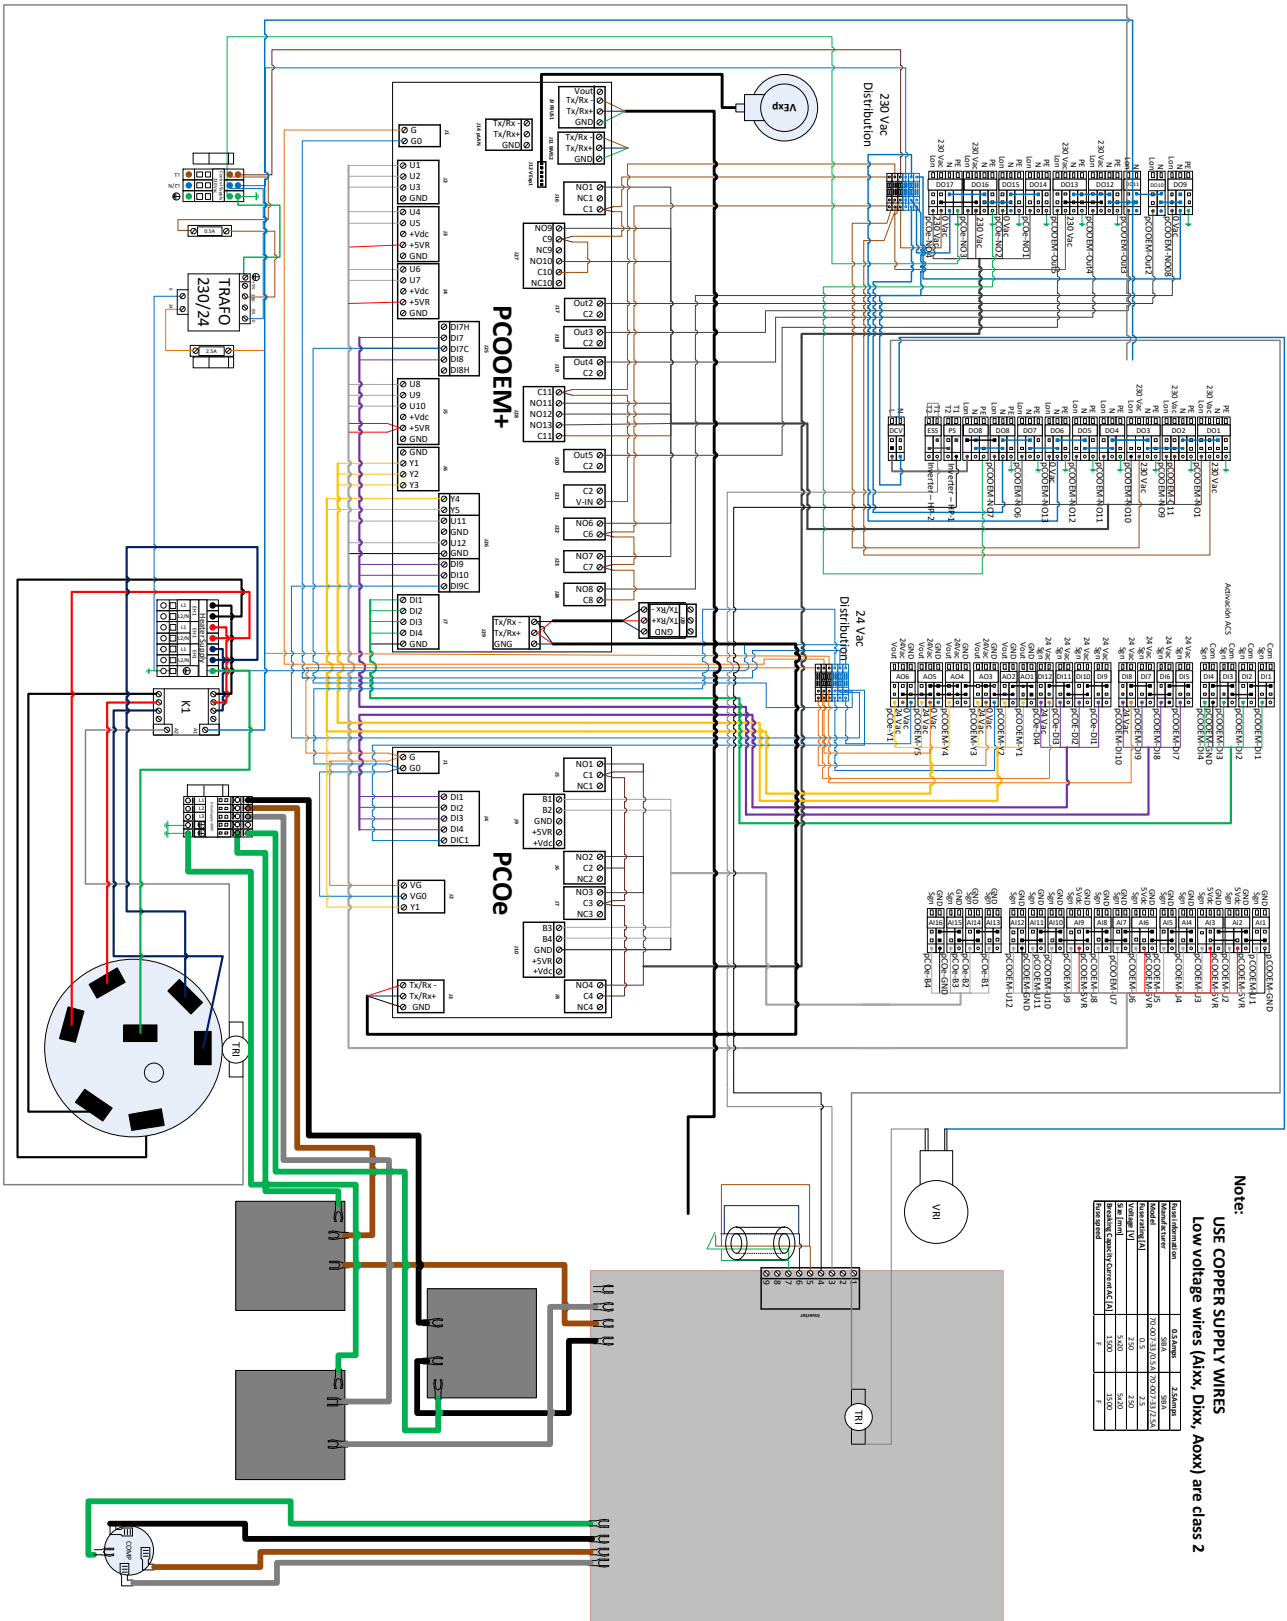

Note:  
USE COPPER SUPPLY WIRES

Low voltage wires (A1xx, D1xx, A0xx) are class 2

Wire Identification	0.3 Amps	2.5 Amps
Maximum Voltage	300.0 V	300.0 V
Maximum Current	0.3 A	2.5 A
Wire Length (m)	2.00	2.00
Wire Gauge (AWG)	22	18
Wire Color	Blue	Blue
Insulation (mm)	0.15	0.15
Insulation (mm)	1.00	1.00
Wire Speed	1	1



## 7.3. VOLTA W-S/L electrical connection tables

ANALOG INPUTS			
CONNECTIONS		DESCRIPTION	
Connection terminal	Controller terminal	Type	Signal
Block I / AI1	pCOOEM+ / J2 / U1	NTC 10K 25°C	Compressor suction temperature
Block I / AI2	pCOOEM+ / J2 / U2	Radiometer 0-5Vdc	Compressor suction pressure
Block I / AI3	pCOOEM+ / J2 / U3	Radiometer 0-5Vdc	Compressor discharge pressure
Block I / AI4	pCOOEM+ / J3 / U4	NTC 10K 25°C	Brine outlet temperature
Block I / AI5	pCOOEM+ / J3 / U5	NTC 10K 25°C	Brine inlet temperature
Block I / AI6	pCOOEM+ / J4 / U6	Radiometer 0-5Vdc	Brine circuit pressure
Block I / AI7	pCOOEM+ / J4 / U7	NTC 10K 25°C	Production outlet temperature
Block I / AI8	pCOOEM+ / J5 / U8	NTC 10K 25°C	Production inlet temperature
Block I / AI9	pCOOEM+ / J5 / U9	Radiometer 0-5Vdc	Production circuit pressure
Block I / AI10	pCOOEM+ / J5 / U10	NTC 10K 25°C	DHW inter-storage tank temperature
Block I / AI11	pCOOEM+ / J26 / U11	NTC 10K 25°C	Outdoor temperature
Block I / AI12	pCOOEM+ / J26 / U12	NTC 10K 25°C	Mixture group 2 temperature
Block I / AI13	pCOe / J9 / B1	NTC 10K 25°C	Mixture group 3 temperature
Block I / AI14	pCOe / J9 / B2	NTC 10K 25°C	Mixture group 4 temperature
Block I / AI15	pCOe / J10 / B3	NTC 10K 25°C	Heating buffer temperature
Block I / AI16	pCOe / J10 / B4	NTC 10K 25°C	Cooling buffer temperature

DIGITAL INPUTS			
CONNECTIONS		DESCRIPTION	
Connection terminal	Controller terminal	Type	Signal
Block II / DI1	pCOOEM+ / J7 / DI1	Voltage-free (0V)	EVU / SG / WINTER-SUMMER / DHW
Block II / DI2	pCOOEM+ / J7 / DI2	Voltage-free (0V)	EVU / SG / WINTER-SUMMER / DHW
Block II / DI3	pCOOEM+ / J7 / DI3	Voltage-free (0V)	EVU / SG / WINTER-SUMMER / DHW
Block II / DI4	pCOOEM+ / J7 / DI4	Voltage-free (0V)	Pool production
Block II / DI5	pCOOEM+ / J25 / DI7	24Vdc / 24Vac	DG1 heating request
Block II / DI6	pCOOEM+ / J25 / DI8	24Vdc / 24Vac	DG1 cooling request
Block II / DI7	pCOOEM+ / J26 / DI9	24Vdc / 24Vac	SG2 heating request
Block II / DI8	pCOOEM+ / J26 / DI10	24Vdc / 24Vac	SG2 cooling request
Block II / DI9	pCOe / J4 / DI1	24Vdc / 24Vac	SG3 heating request
Block II / DI10	pCOe / J4 / DI2	24Vdc / 24Vac	SG3 cooling request
Block II / DI11	pCOe / J4 / DI3	24Vdc / 24Vac	SG4 heating request
Block II / DI12	pCOe / J4 / DI4	24Vdc / 24Vac	SG4 cooling request

ANALOG OUTPUTS			
CONNECTIONS		DESCRIPTION	
Connection terminal	Controller terminal	Type	Signal
Block II / AO1	pCOOEM+ / J6 / Y1	PWM	Brine pump adjustment
Block II / AO2	pCOOEM+ / J6 / Y2	PWM	Production pump adjustment
Block II / AO3	pCOOEM+ / J6 / Y3	0-10Vdc	Regulation of mixture group 2
Block II / AO4	pCOOEM+ / J26 / Y4	0-10Vdc	Regulation of mixture group 3
Block II / AO5	pCOOEM+ / J26 / Y5	0-10Vdc	Regulation of mixture group 4
Block II / AO6	pCOe / J2 / Y1	0-10Vdc	Free


DIGITAL OUTPUTS			
CONNECTIONS		DESCRIPTION	
Connection terminal	Controller terminal	Type	Signal
Block III / DO1	pCOOEM+ / J16 / NO1-NC1	Activation 230Vac / 1A max	Free cooling production
Block III / DO2	pCOOEM+ / J27 / NO9-NC9	Activation 230Vac / 2A max	Pool production
Block III / DO3	pCOOEM+ / J27 / NO10-NC10	Activation 230Vac / 2A max	DHW production
Block III / DO4	pCOOEM+ / J28 / NO11	Activation 230Vac / 2A max	DHW Recirculation
Block III / DO5	pCOOEM+ / J28 / NO12	Activation 230Vac / 2A max	DG1 group production
Block III / DO6	pCOOEM+ / J28 / NO13	Activation 230Vac / 2A max	SG2 group production
Block III / DO7	pCOOEM+ / J22 / NO6	Activation 230Vac / 2A max	HTR system production
Block III / DO8	pCOOEM+ / J23 / NO7	Activation 230Vac / 2A max	Compressor + circulator activation
Block III / DO9	pCOOEM+ / J24 / NO8	Activation 230Vac / 2A max	Alarm signal
Block IV / DO10	pCOOEM+ / J17 / Out2	Activation 230Vac / 1A max	Buffer storage tank resistor / Internal resistor
Block IV / DO11	pCOOEM+ / J18 / Out3	Activation 230Vac / 2A max	DHW inter-storage tank resistor
Block IV / DO12	pCOOEM+ / J19 / Out4	Activation 230Vac / 2A max	Heating / cooling consumption
Block IV / DO13	pCOOEM+ / J20 / Out5	Activation 230Vac / 2A max	Active cooling production
Block IV / DO14	pCOe / J5 / NO1	Activation 230Vac / 2A max	SG3 group production
Block IV / DO15	pCOe / J6 / NO2	Activation 230Vac / 2A max	SG4 group production
Block IV / DO16	pCOe / J7 / NO3NC3	Activation 230Vac / 2A max	Aerothermal collector
Block IV / DO17	pCOe / J8 / NC3	Activation 230Vac / 2A max	Geothermal collector

PROTECTIONS			
CONNECTIONS		DESCRIPTION	
Connection terminal	Controller terminal	Type	Signal
Block III / PS	Inverter / 3	Safety switch	High pressure switch
Block III / ESS	Inverter / 4	Safety switch	External safety switch
Block III / DCV	-	Refrigeration inverter	Refrigeration valve inverter


COMMUNICATIONS			
CONNECTIONS		DESCRIPTION	
Serial port	Controller terminal	Type	Signal
Plan	pCOOEM+ / J15 Phone connector	RJ11	Controller screen
	pCOOEM+ / J14 Plug-in connector	RS485 ModBus RTU	Controller network connector
FBus	pCOOEM+ / J9	RS485 ModBus RTU	Compressor inverter
FBus2	pCOOEM+ / J29	RS485 ModBus RTU	Outdoor bus terminals
			Expansion module pCOe
BMS Card	pCOOEM+ / J13	RS485 ModBus RTU	Connector for remote access communication cards
BMS2	pCOOEM+ / J11	RS485 ModBus RTU	Remote access through bus
Expansion valve	pCOOEM+ / J12	Stepper motor	Unipolar valve control

### 7.4. Load losses


**VOLTA W-S/L-H/P-10-\*\*\*(-SH)**

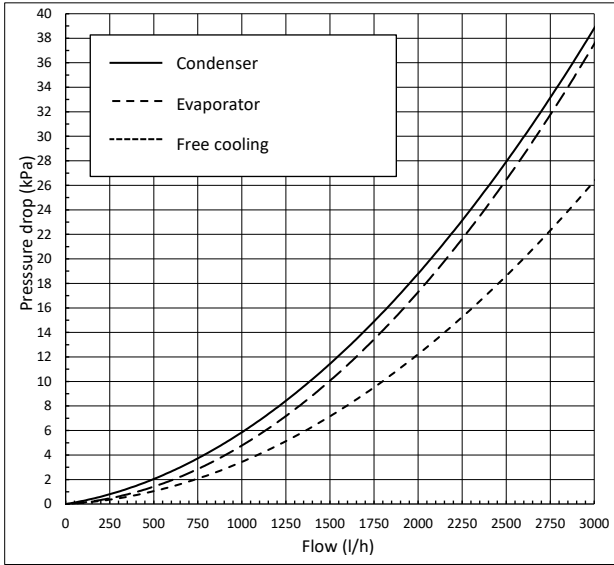


**VOLTA W-S/L-A/F-10-\*\*\*(-SH)**

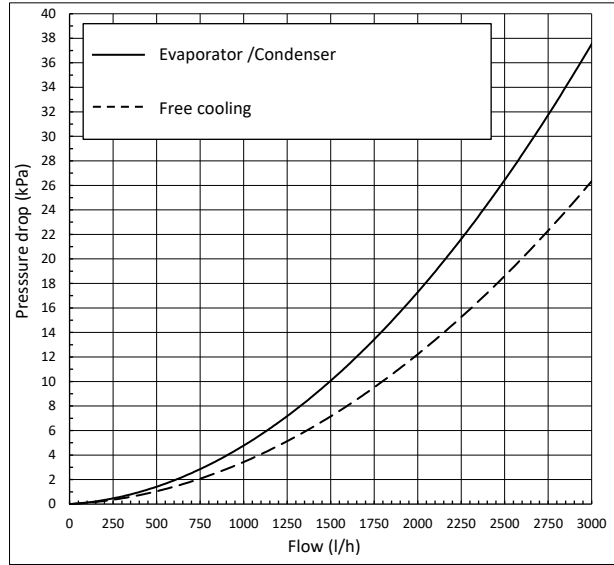


**VOLTA W-S/L-H/P-14-\*\*\*(-SH)**

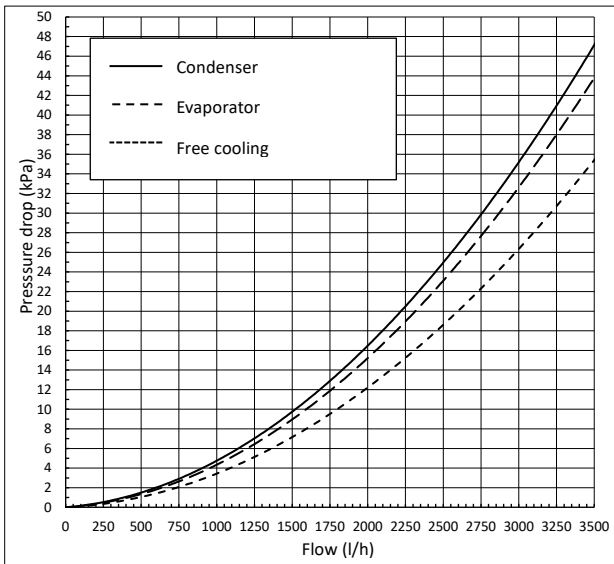


**VOLTA W-S/L-A/F-14-\*\*\*(-SH)**

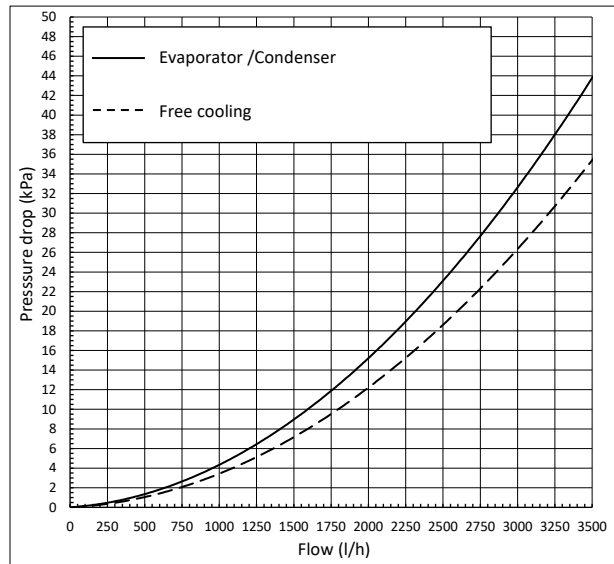

VOLTA W-S/L-H/P-22-\*\*\*(-SH)

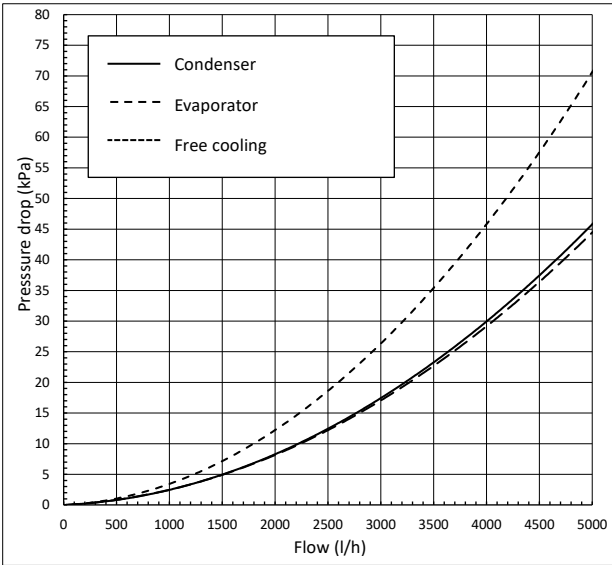


VOLTA W-S/L-A/F-22-\*\*\*(-SH)

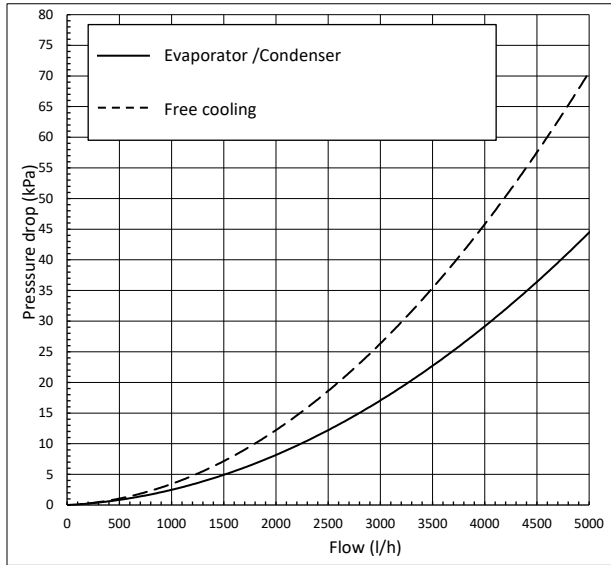


### 7.5. Brine circulation pump


VOLTA W-S/L-\*-10-\*\*\*(-SH)

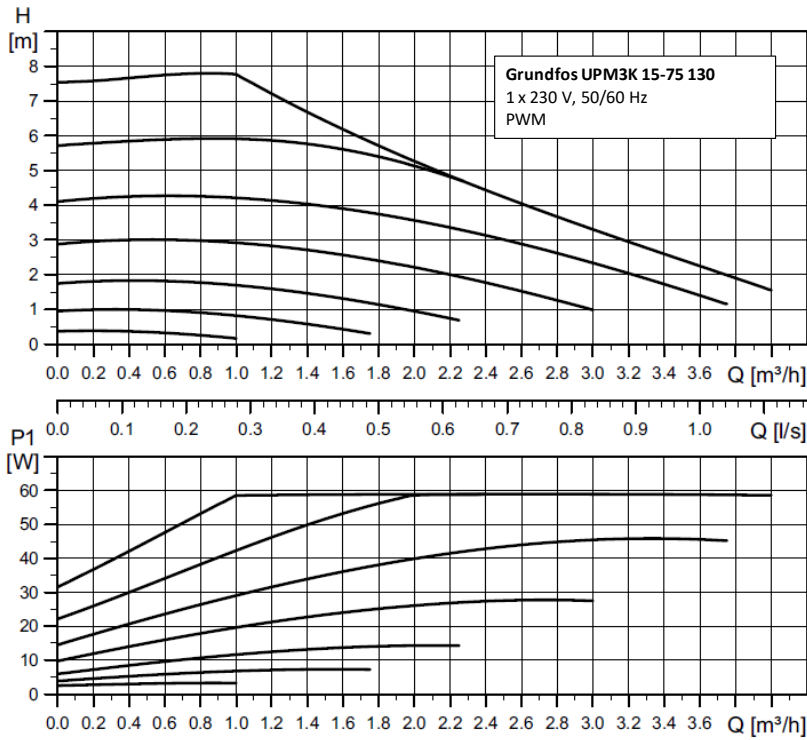

**VOLTA W-S/L-\*-14-\*\*\*(-SH)**

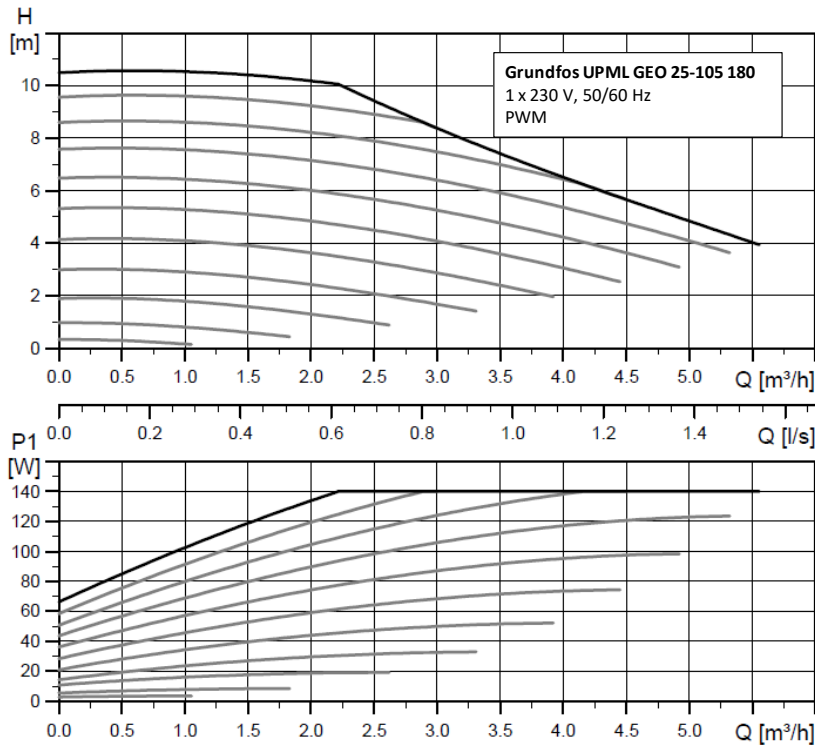


**VOLTA W-S/L-\*-22-\*\*\*(-SH)**

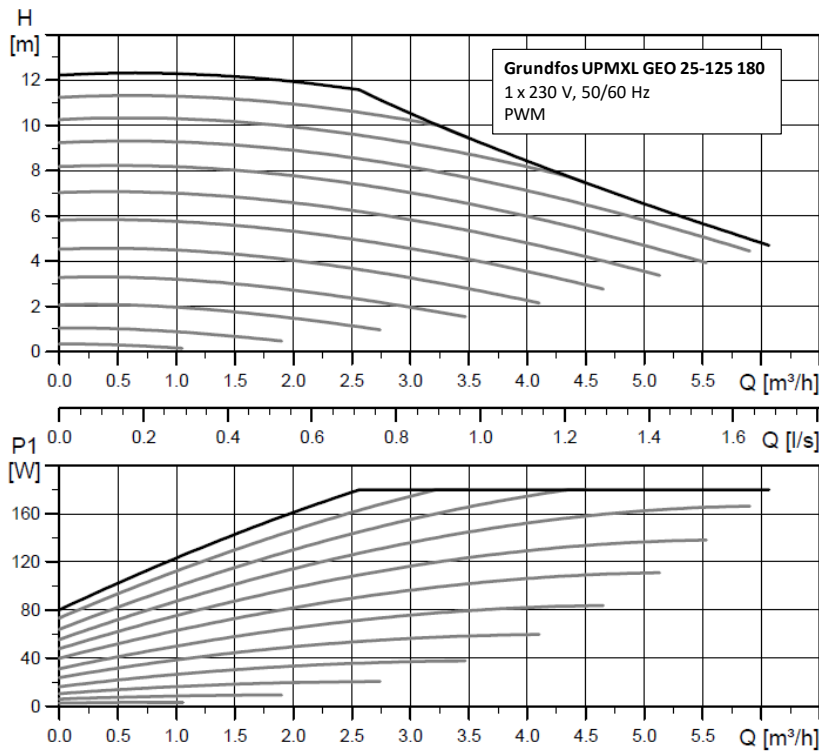


### 7.6. Production circulator pumps

EN


Main circulator pump VOLTA W-S/L-\*-10-\*\*\*(-SH)

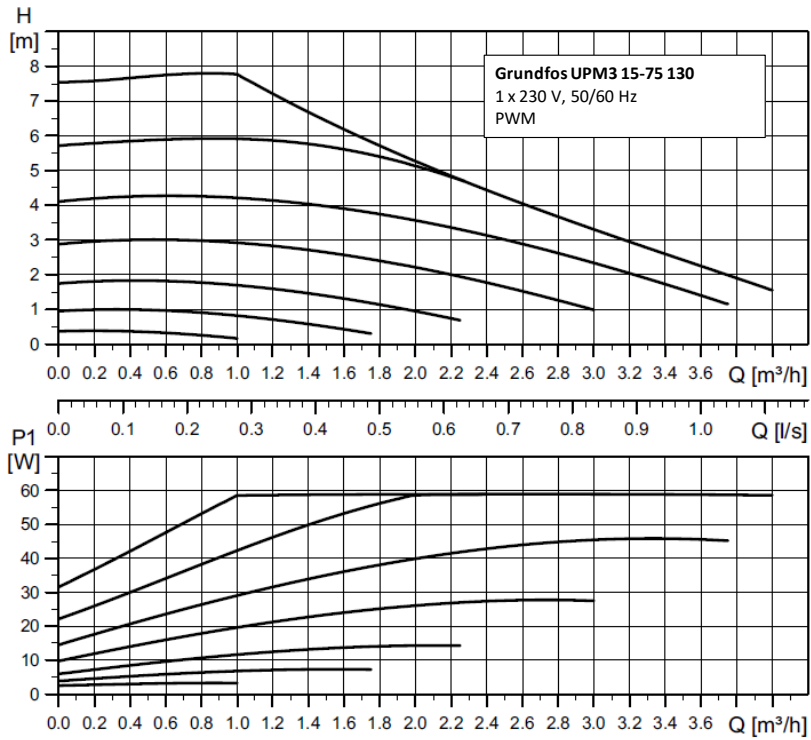


Main circulator pump VOLTA W-S/L-\*-14-\*\*\*(-SH)

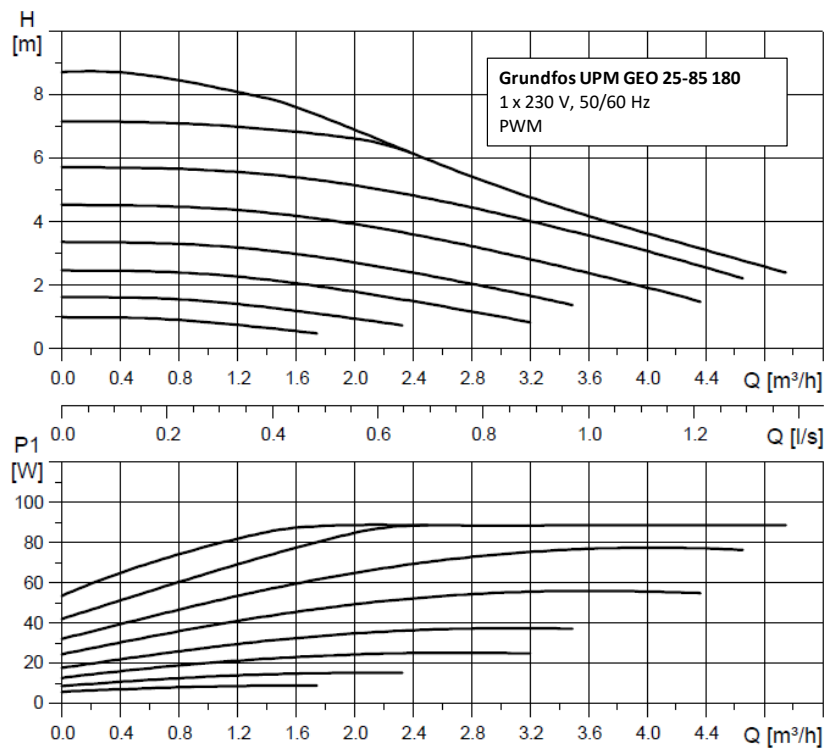

Main circulator pump VOLTA W-S/L-\*-22-\*\*\*(-SH)

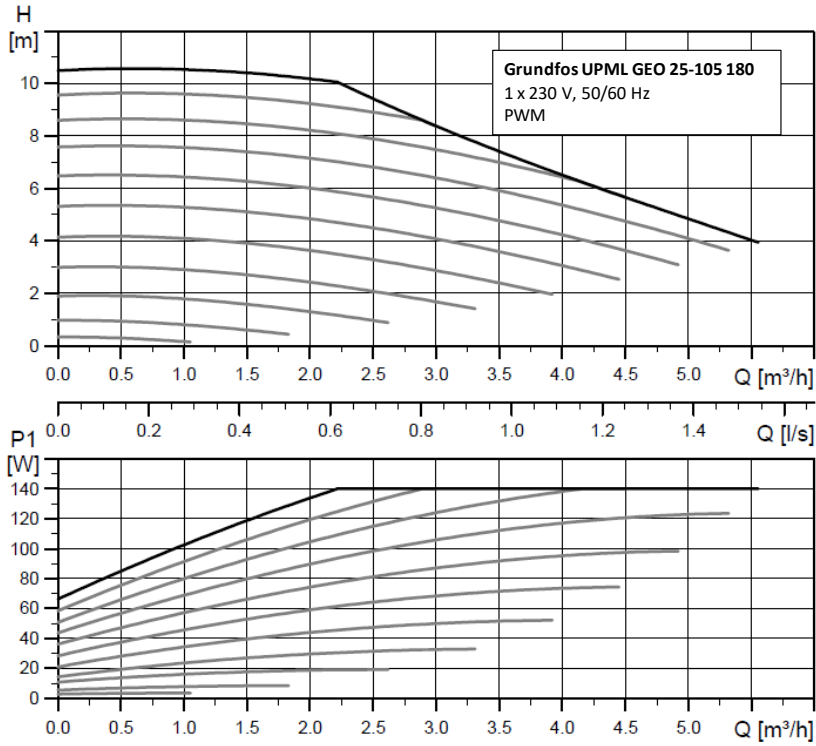


HTR system circulator pump

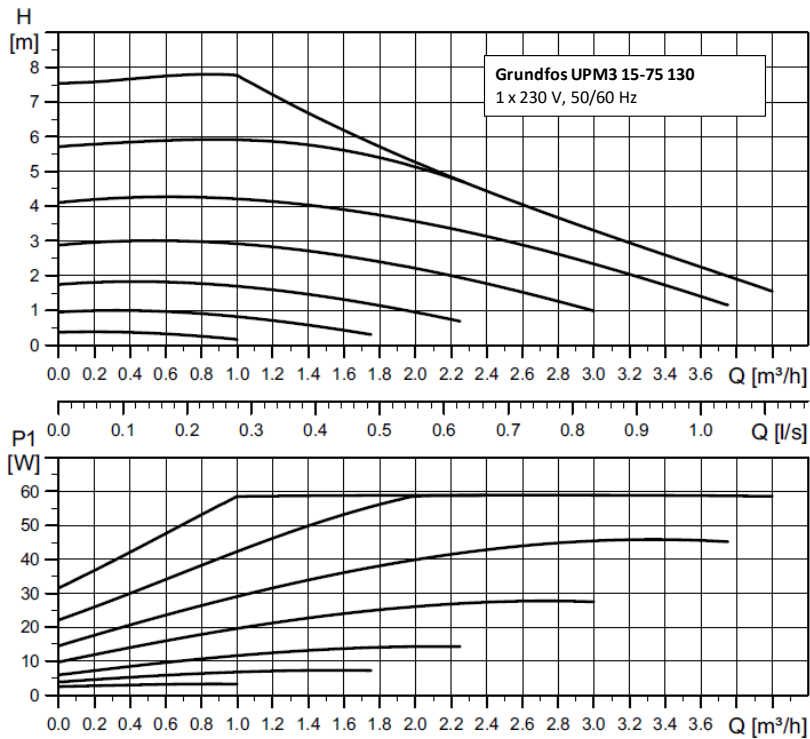


### 8. Operation map

VOLTA W-S/L

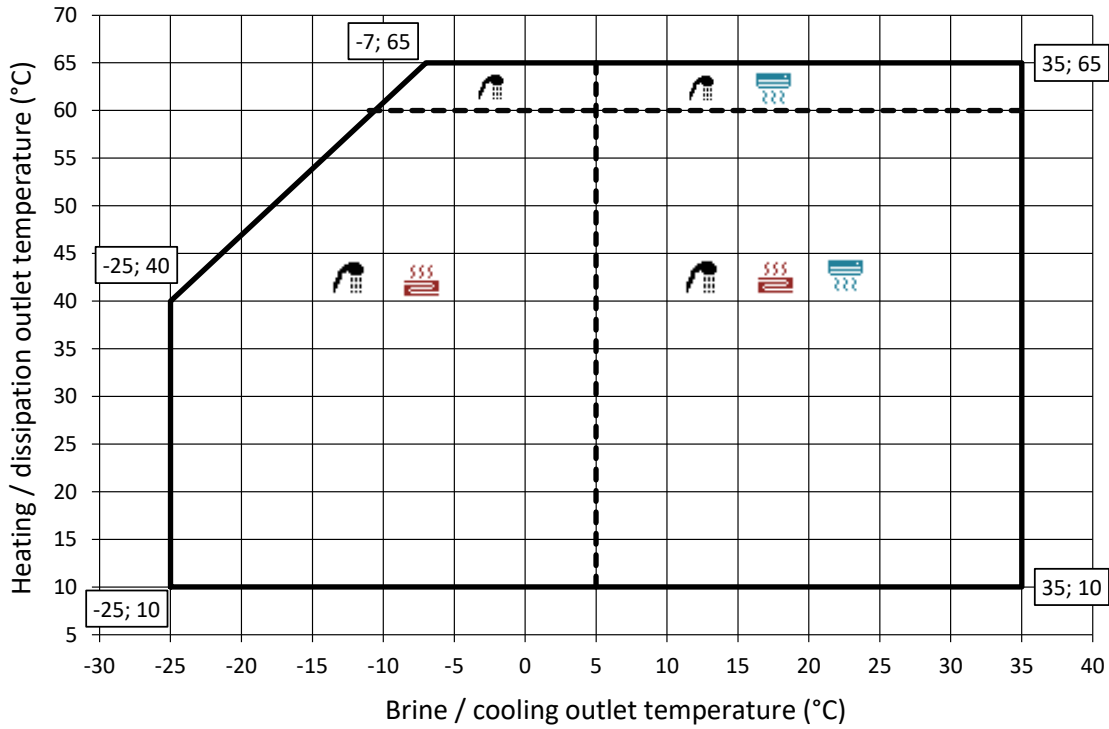


VOLTA W-S/L with VOLTA W-O

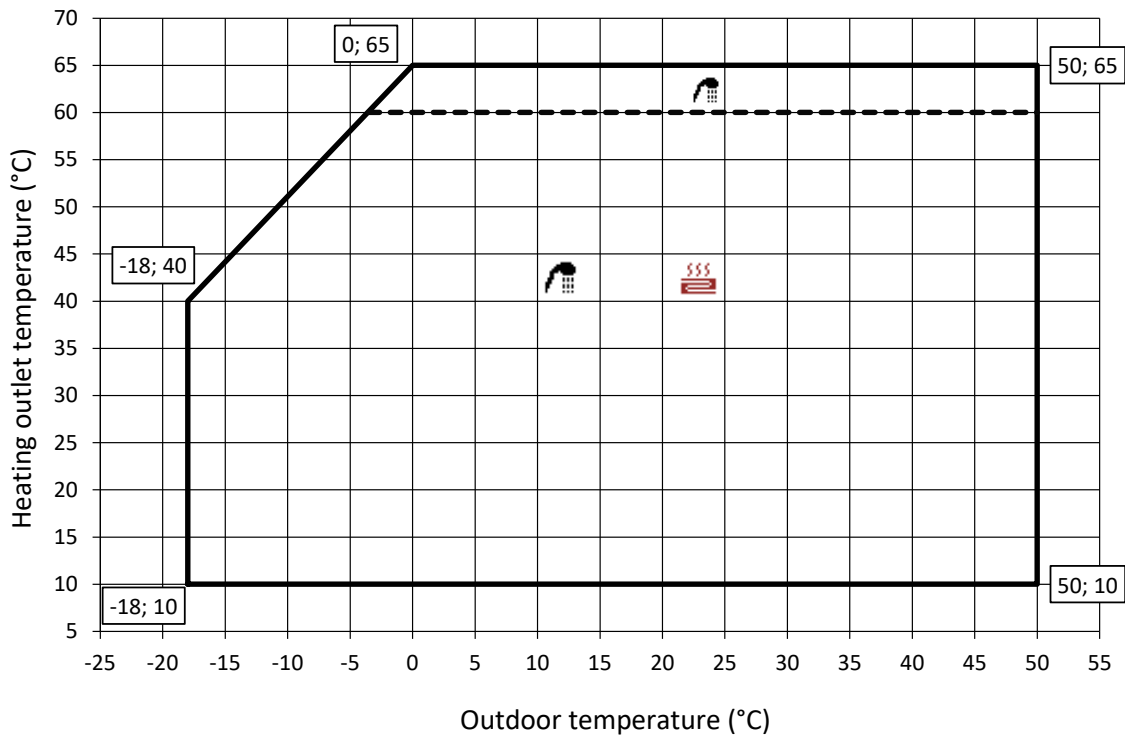



## VOLTA W-S/L with VOLTA W-O in cooling mode









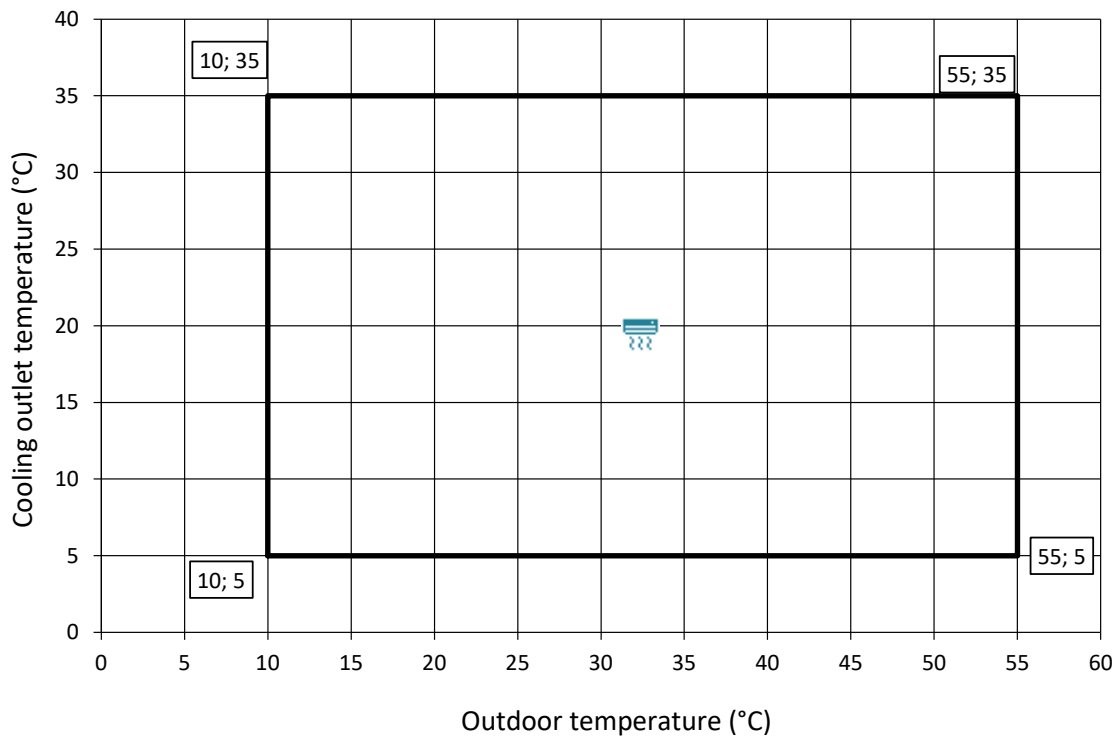


## NOTE










- The maximum compressor speed is not guaranteed over the entire compressor operating map.

### 9. Operation curves

VOLTA W-S/L-\*10-\*\*\*(-SH)

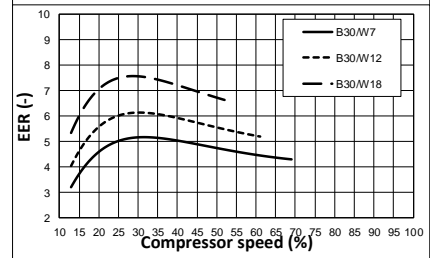
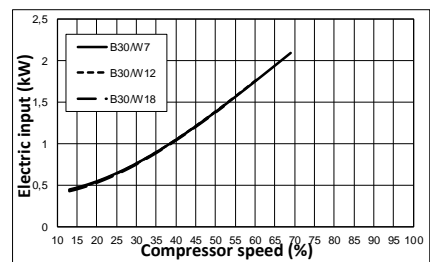
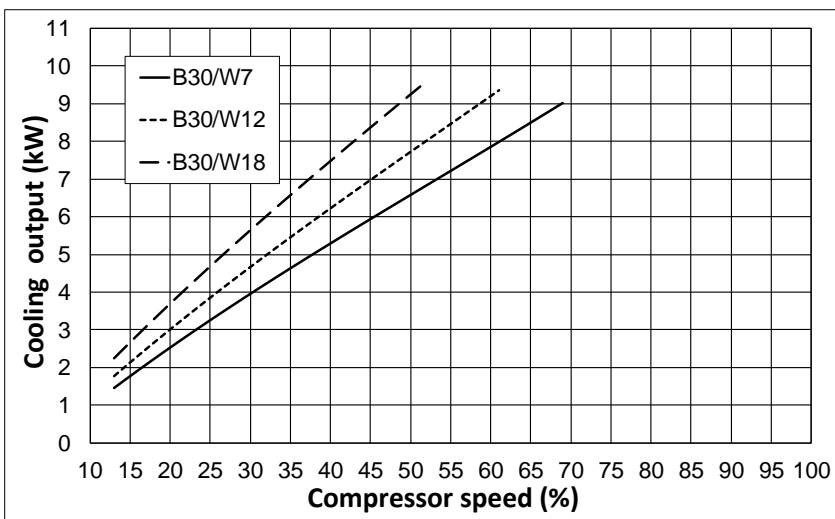
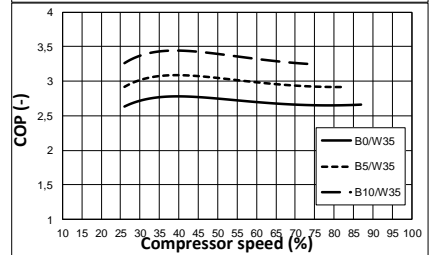
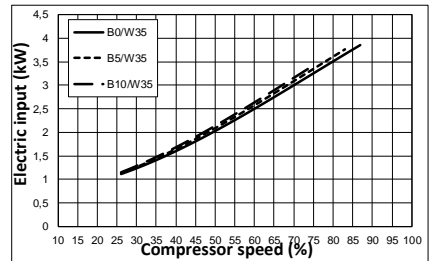
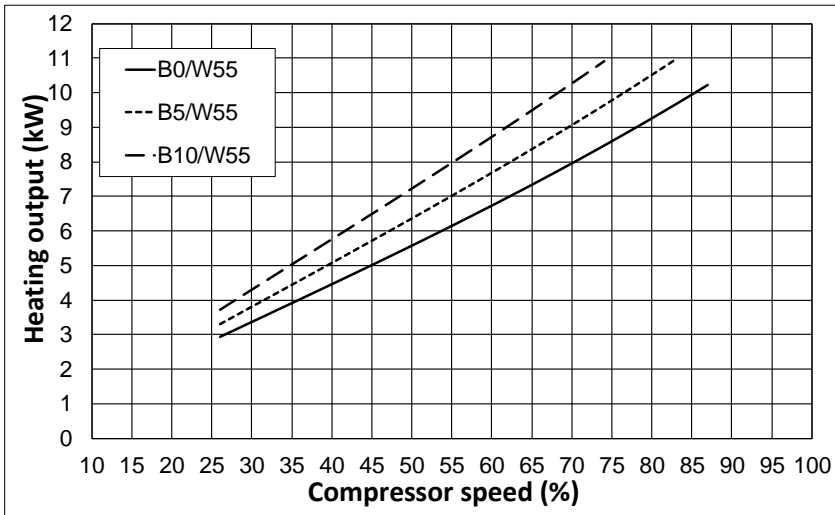
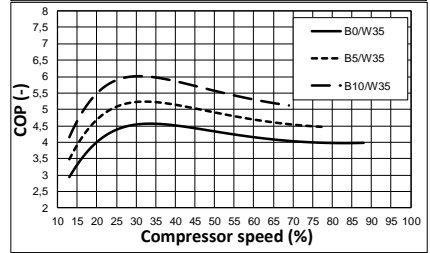
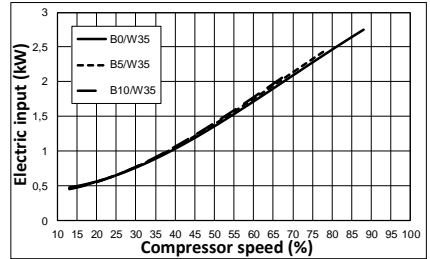
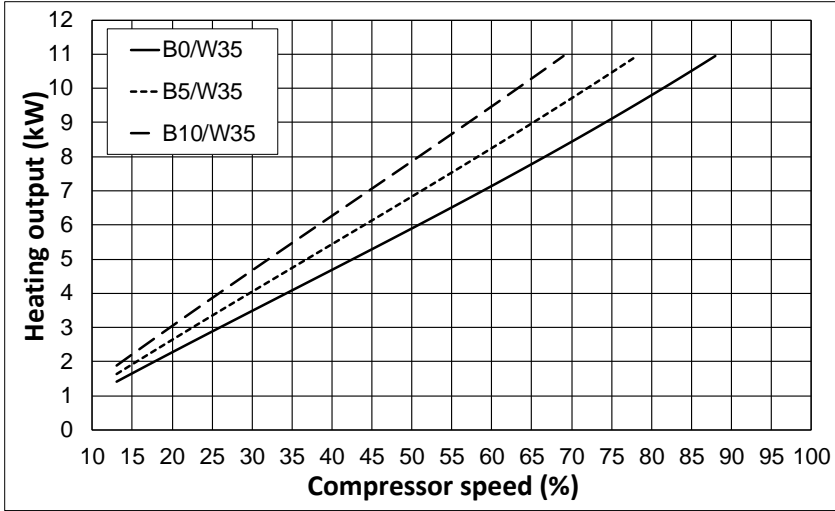


VOLTA W-S/L-\*-14-\*\*\*(-SH)

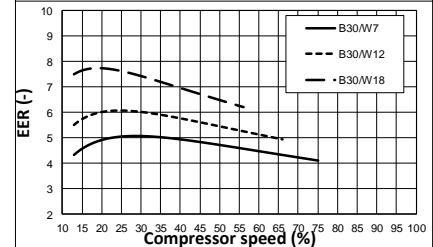
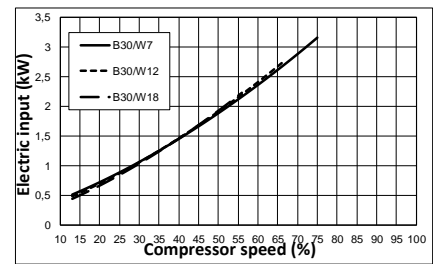
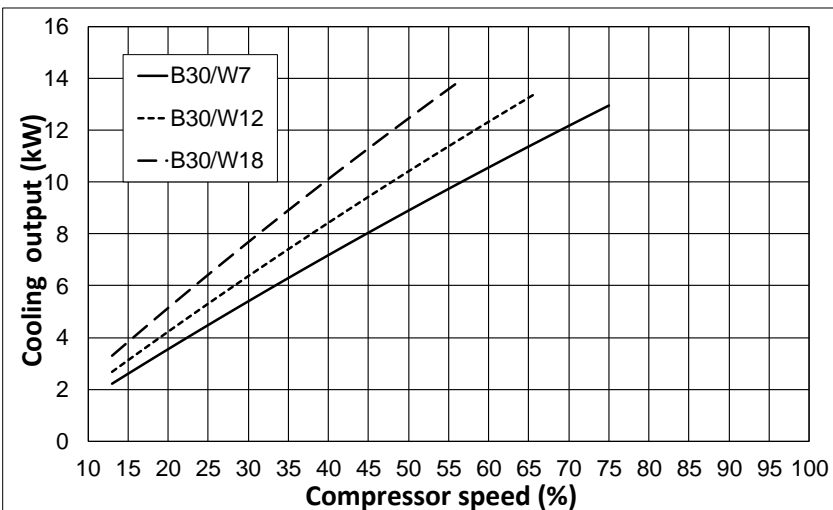
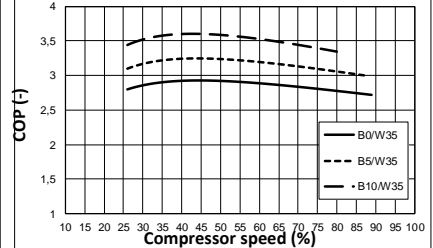
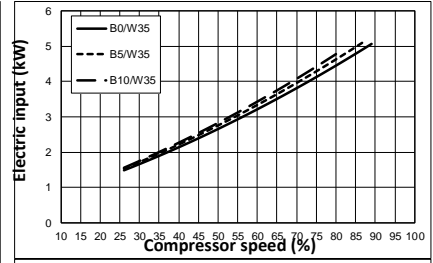
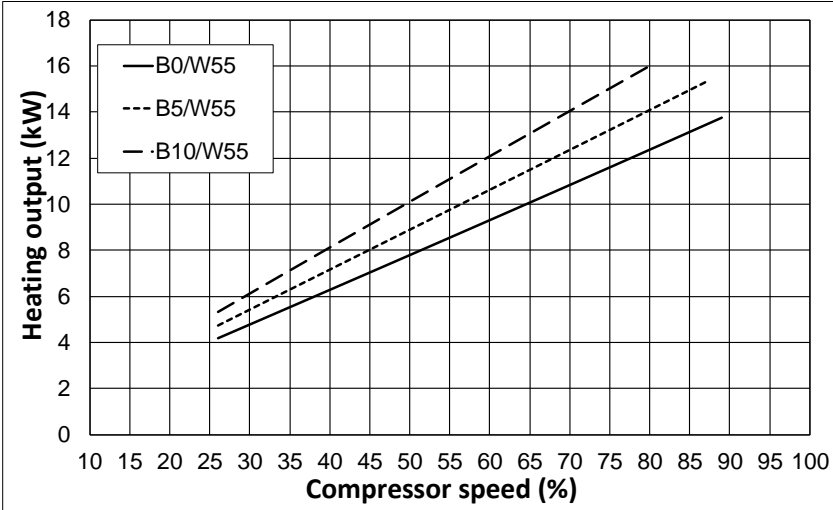
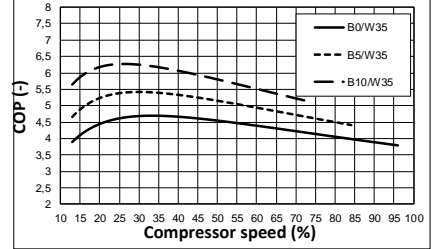
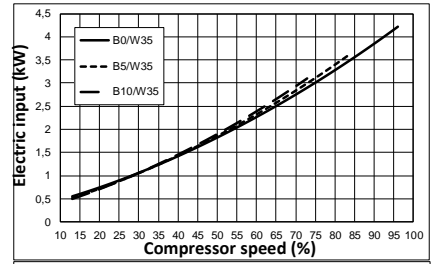
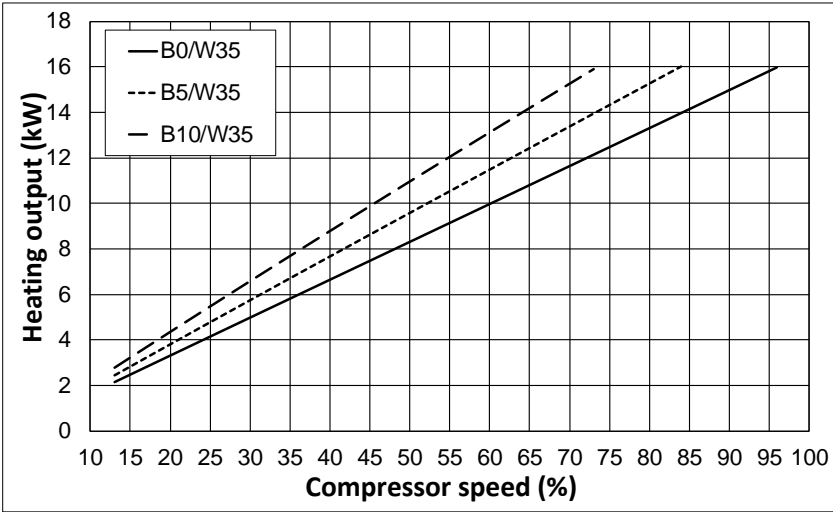


VOLTA W-S/L-\*-22-\*\*\*(-SH)

EN

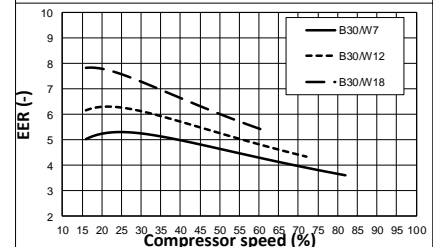
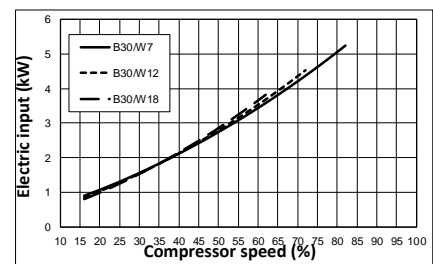
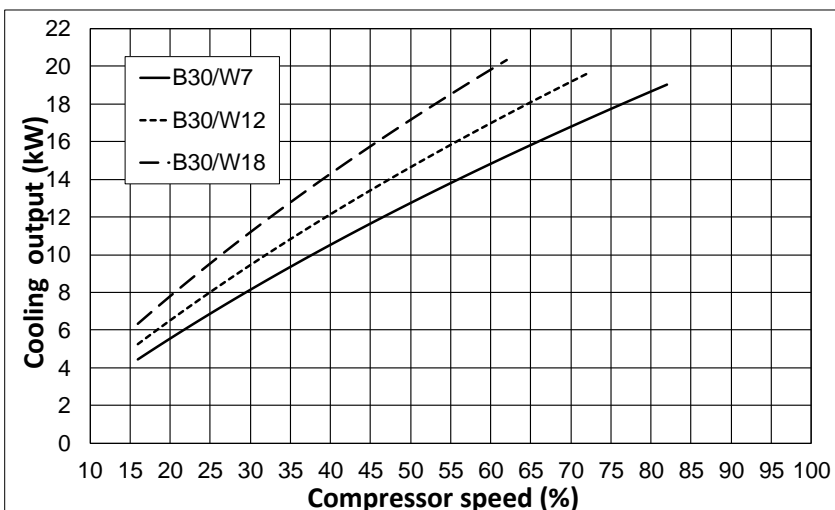
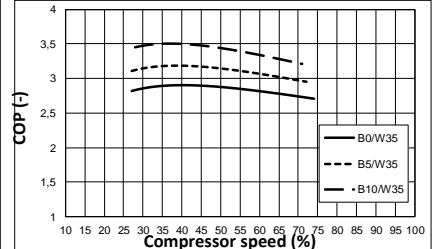
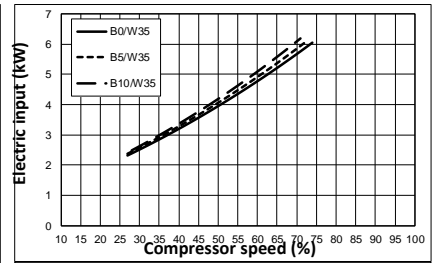
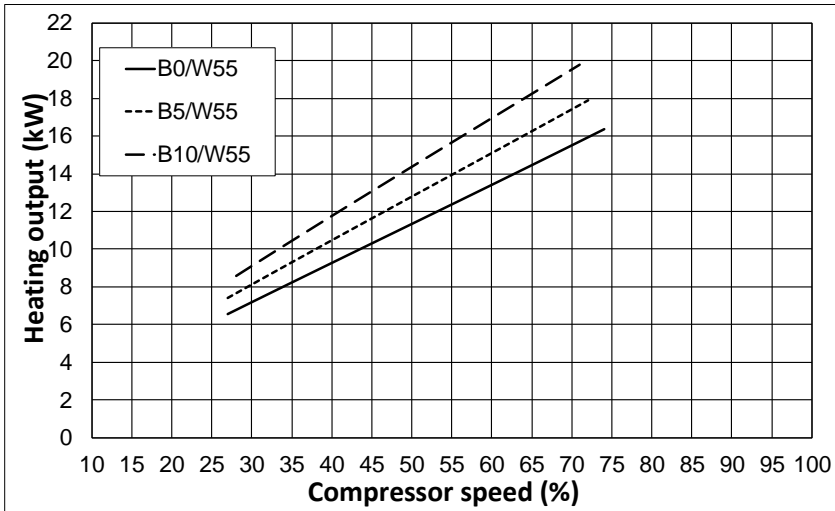
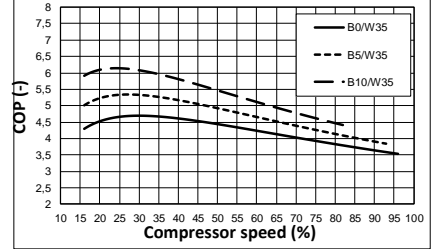
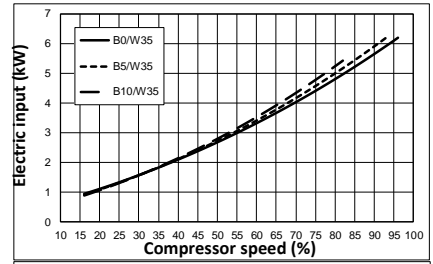
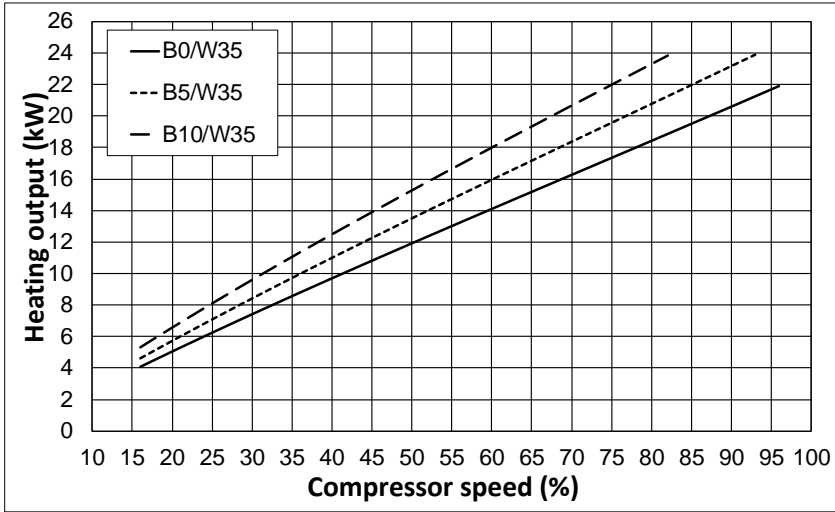


VOLTA W-S/L-\*-10-\*\*\*(-SH) with VOLTA W-O-10-230

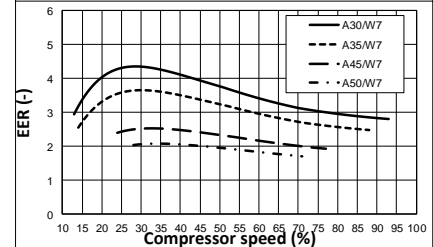
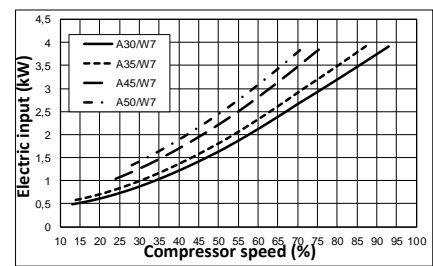
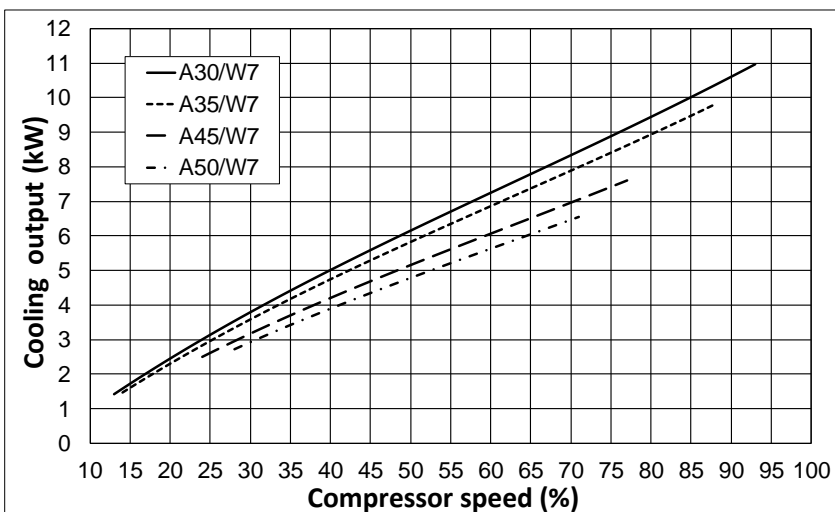
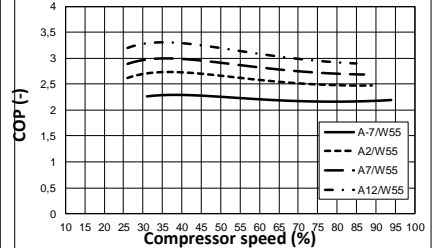
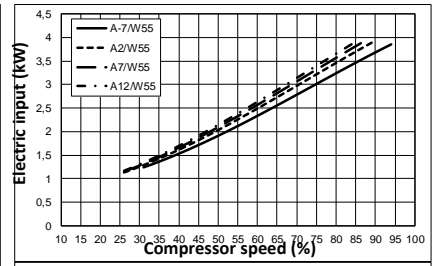
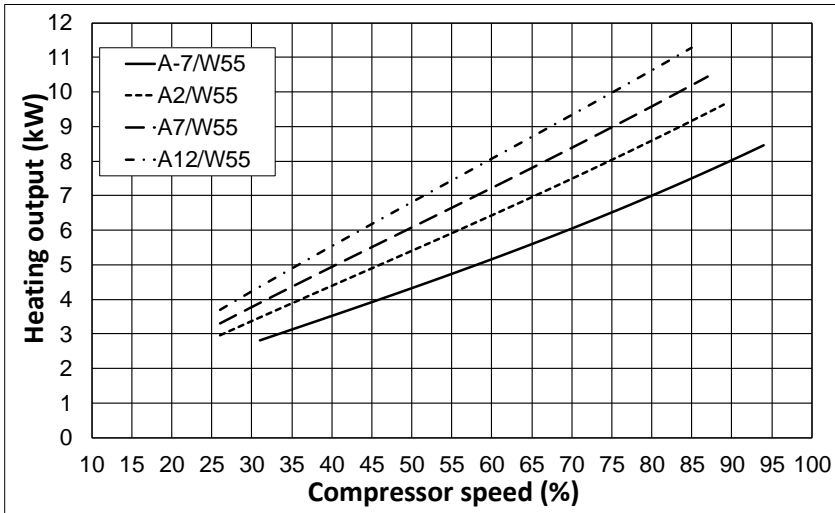
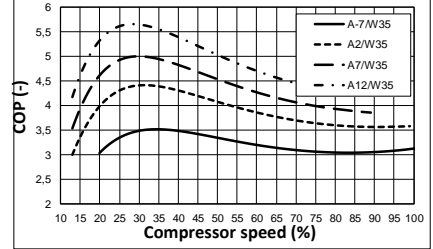
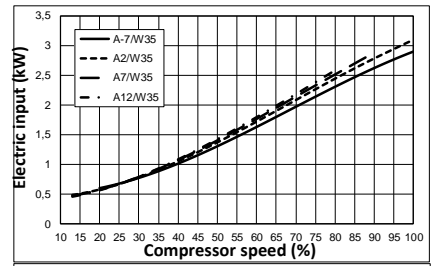
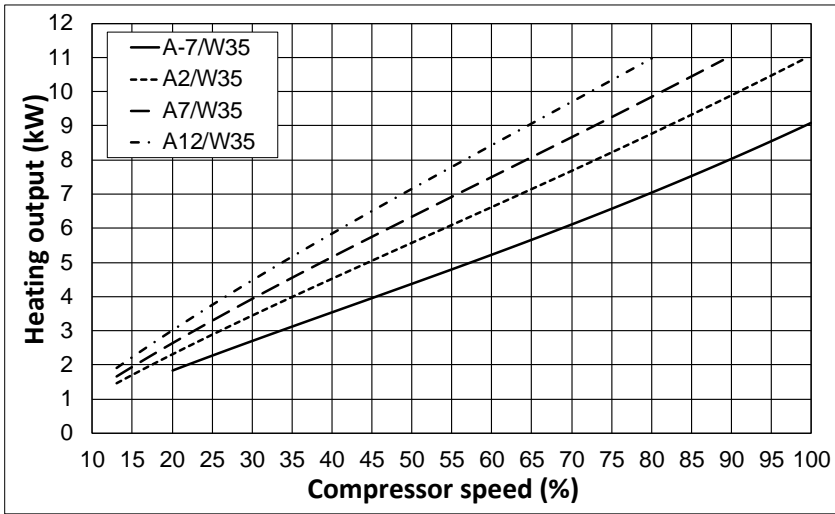


VOLTA W-S/L-\*14-\*\*\*(-SH) with VOLTA W-O-10-230

EN

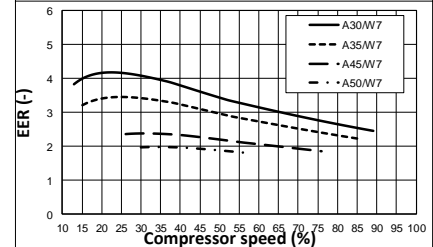
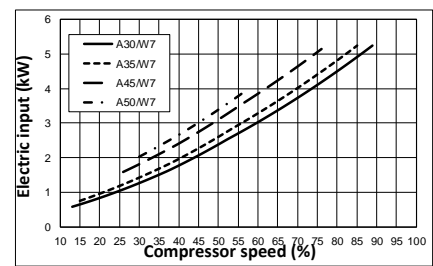
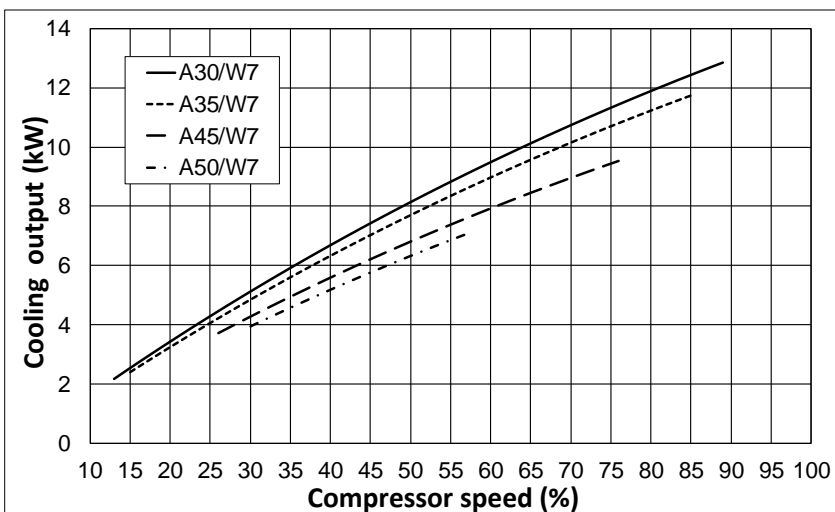
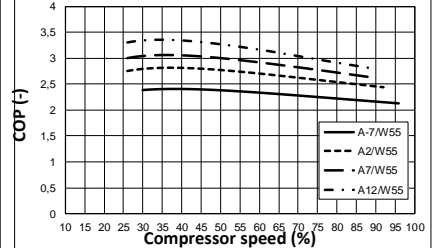
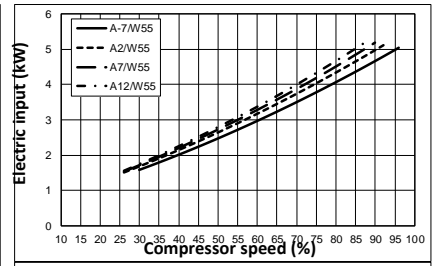
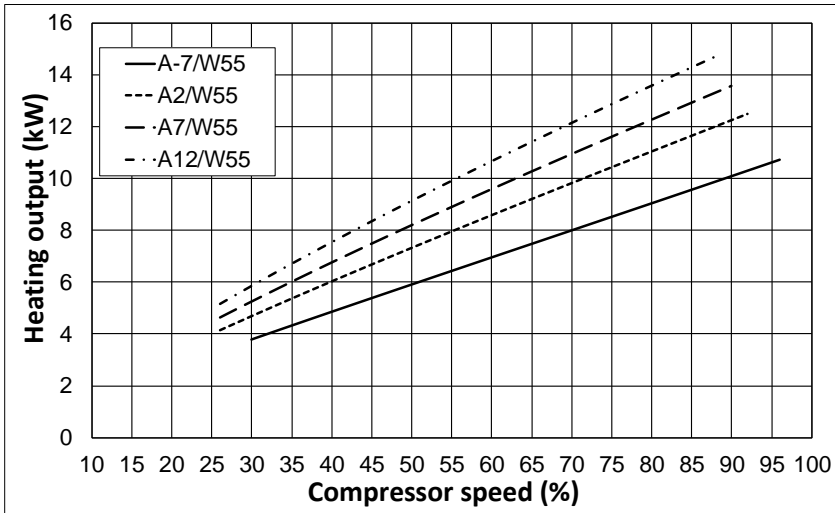
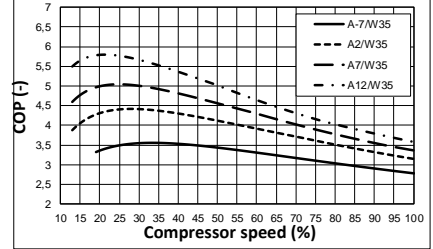
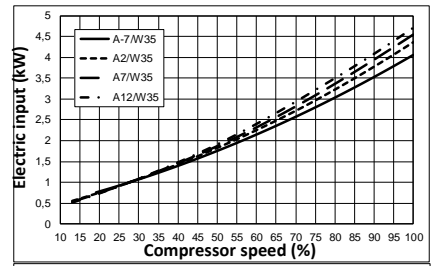
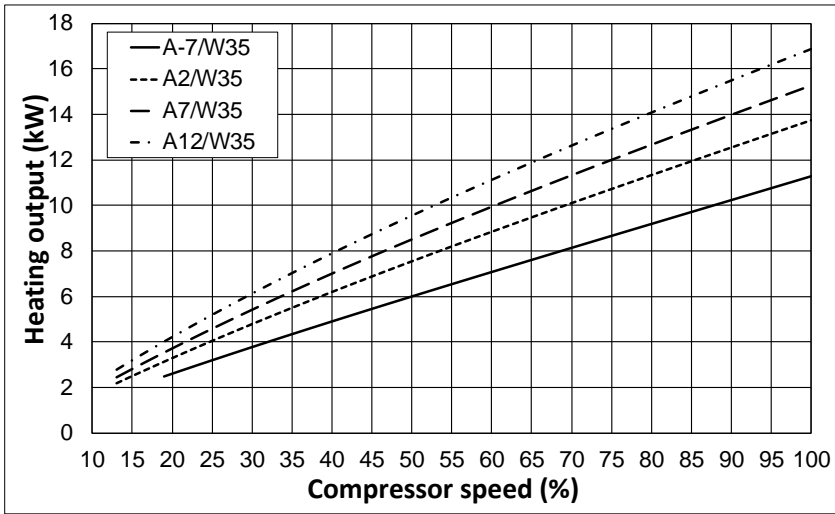


VOLTA W-S/L-\*22-\*\*\*(-SH) with VOLTA W-O-10-230

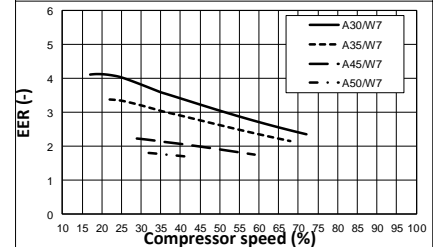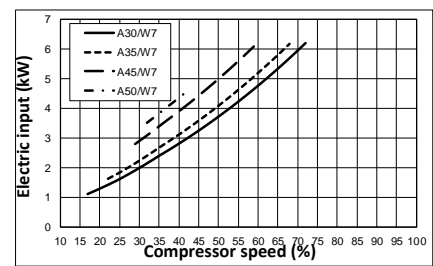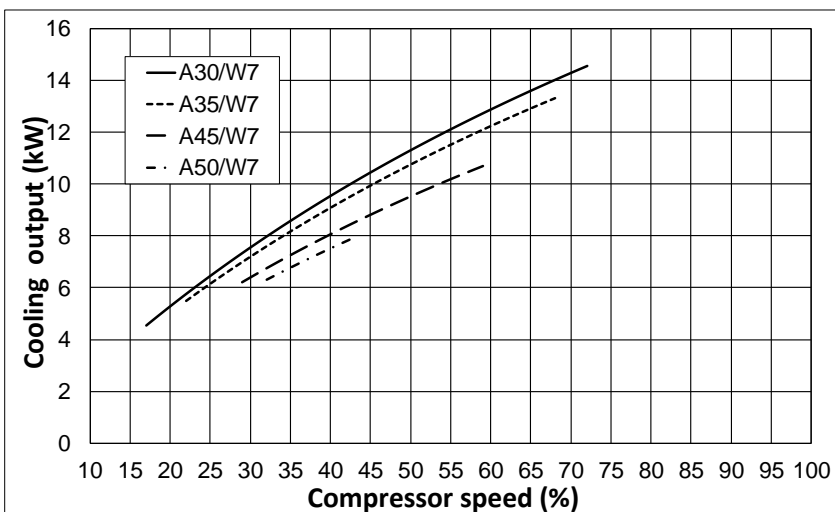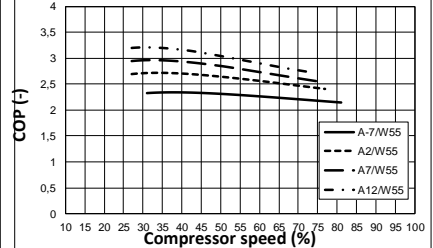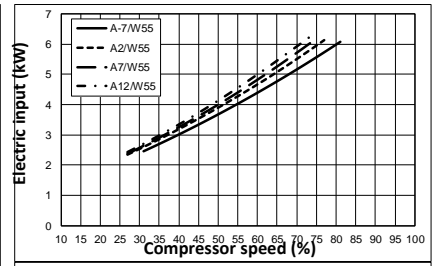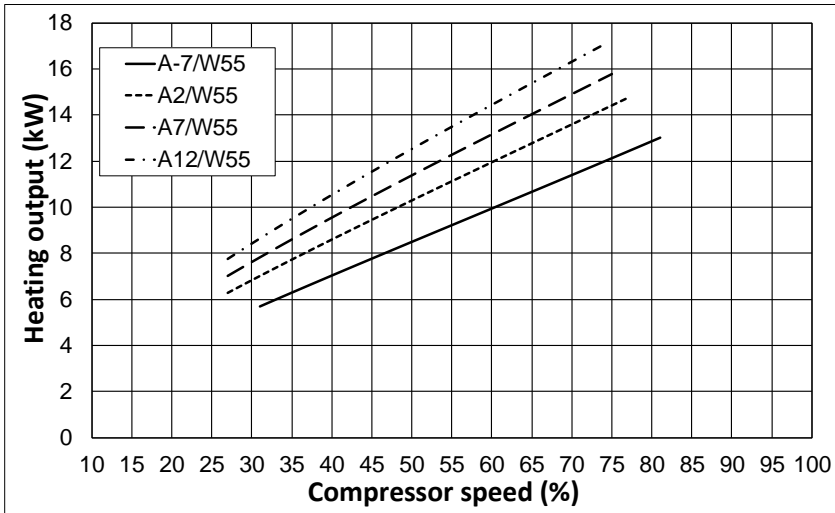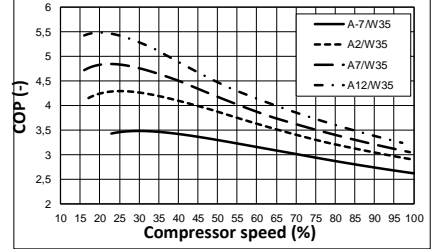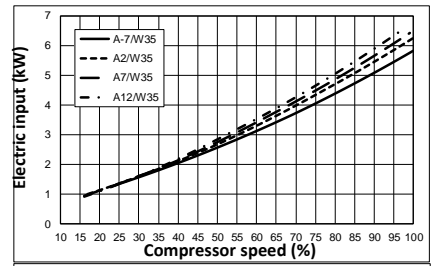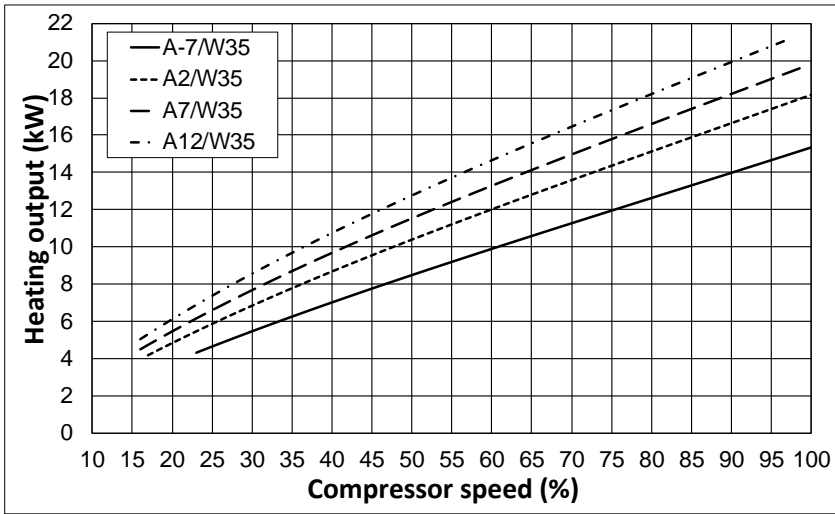


VOLTA W-S/L-\*22-\*\*\*(-SH) with VOLTA W-O-20-230

EN

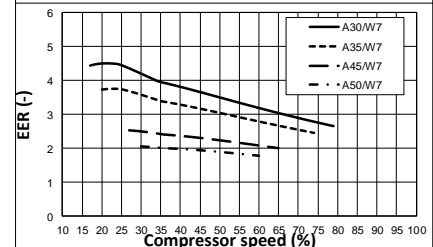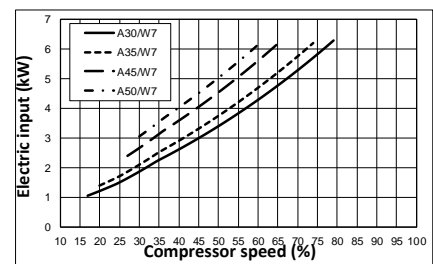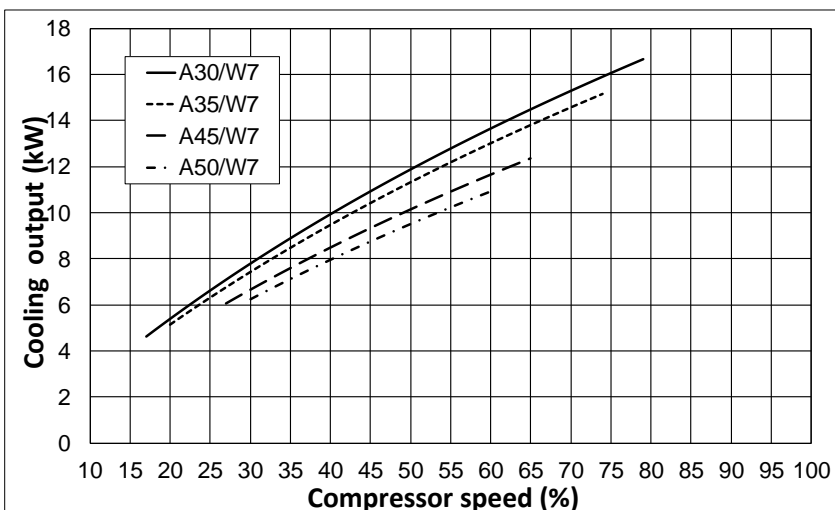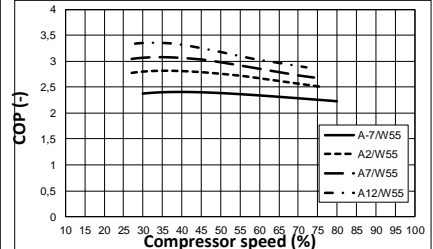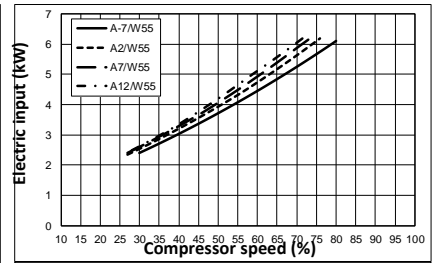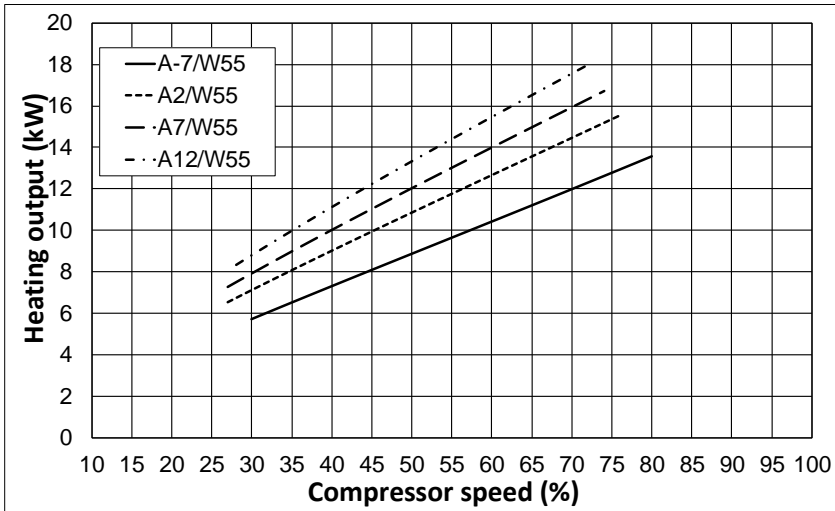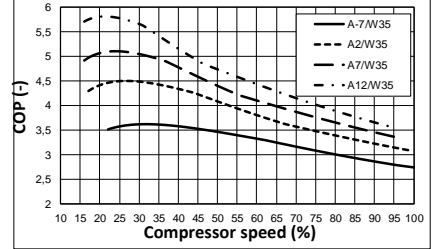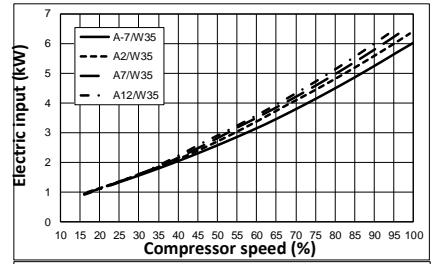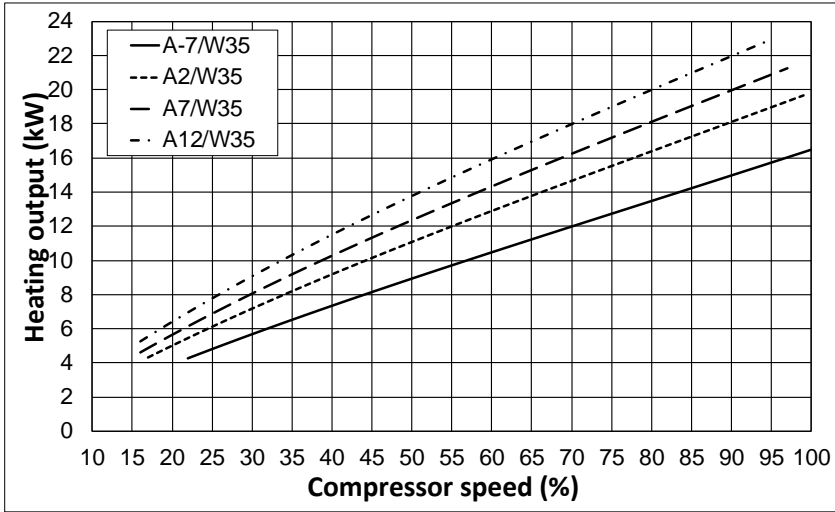



VOLTA W-S-P | VOLTA W S-F | VOLTA W-L-P | VOLTA W L-F

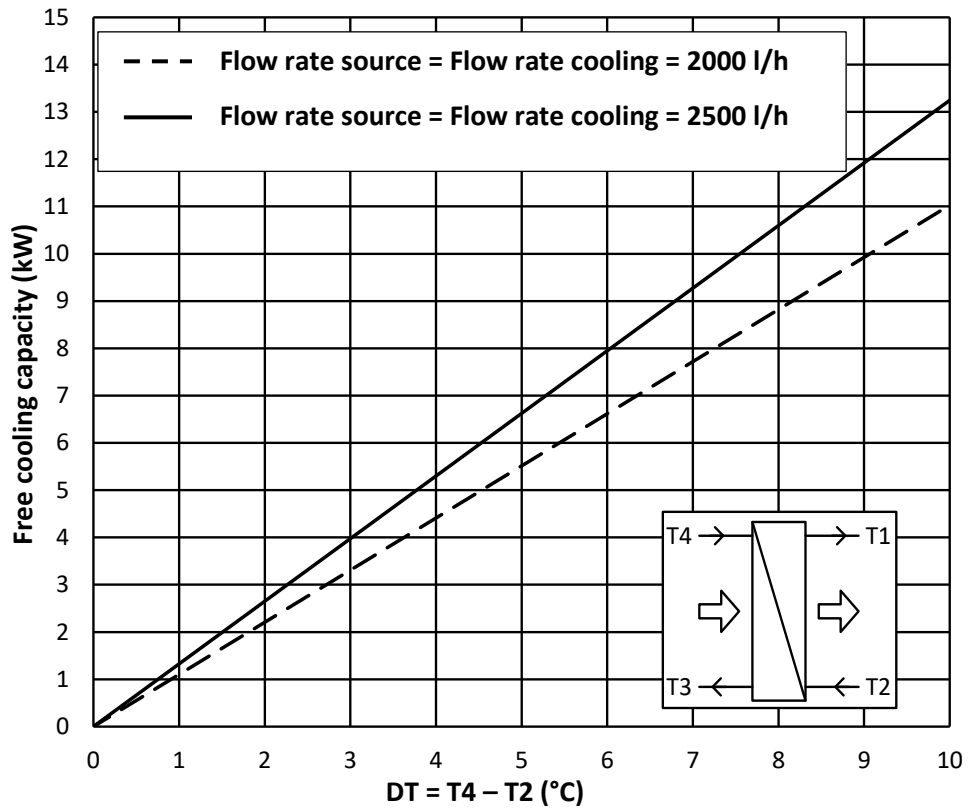

## 10. Technical data table



### NOTE

- In the technical data tables you will find a series of numbers in superscript format, the meaning of which is explained below:
  1. Replacing or combining the geothermal collector with one or more VOLTA W-O aerothermal units. Refer to the VOLTA W-O aerothermal units manual for more detailed information.
  2. In compliance with EN 14511, this includes the consumption of the circulation pumps and the compressor driver. Brine thermal gap ( $\Delta T = 3 \text{ }^\circ\text{C}$ ) and production thermal gap ( $\Delta T = 5 \text{ }^\circ\text{C}$ ).
  3. Pending certification
  4. Considering a heat ramp of  $20^\circ\text{C}$  to  $50^\circ\text{C}$  in absence of consumption.
  5. Considering support provided by the emergency electrical resistor or the HTR system. Maximum DHW temperature with the HTR system can be limited by the compressor discharge temperature.
  6. In compliance with EN 12102, this includes the acoustic insulation kit of the compressor.
  7. Start-up intensity depends on the operating conditions of the hydraulic circuits.
  8. The admissible voltage range for proper operation of the heat pump is  $\pm 10\%$ .
  9. Maximum consumption can vary significantly according to working conditions, or if the compressor's range of operation is restricted. Refer to the technical service manual for more detailed information.
  10. The installation must be carried out in such a way as to guarantee the nominal flow rates, which will be calculated for the maximum powers with a temperature differential of  $5^\circ\text{C}$ . On the other hand, to ensure correct compressor start-up, the installation must guarantee a flow rate greater than that resulting from the formula:
 

$Q \geq 1.2 \times P_{ref}$ , where:

    - i.  $Q$  = flow in litres per minute.
    - ii.  $P_{ref}$  = cooling power at 25% of compressor, see operating curve graphs.
  11. Only for VOLTA W-L

VOLTA W-S/L*-10-***(-SH) specifications		Units	VOLTA W-S/L-H	VOLTA W-S/L-P	VOLTA W-S/L-A	VOLTA W-S/L-F
Application	Place of installation	-	Indoors			
	Type of brine system	-	Geothermal			
	Heating	-	✓	✓	✓	✓
	HTR - High temperature recovery system	-	✓	✓	✓	✓
	Integrated active cooling	-	--	--	✓	✓
	Integrated Free cooling	-	--	✓	--	✓
Performance	Compressor modulation	%	12,5 - 100			
	Heating power <sup>2</sup> , B0W35 <sup>10</sup>	kW	1,3 - 11			
	COP <sub>max</sub> <sup>2</sup> / Heating power <sup>2</sup> B0W35 <sup>10</sup>	- / kW	4,5 / 4,1			
	Active cooling power <sup>2</sup> , B35W7 <sup>10</sup>	kW	--	1.4 - 11		
	EER <sup>2</sup> / Active cooling power <sup>2</sup> B35W7 <sup>10</sup>	- / kW	--	5.2 / 4.6		
	Maximum DHW temperature without backup <sup>11</sup>	°C	63			
	Maximum DHW temperature with backup <sup>5,11</sup>	°C	70			
	Sound power level <sup>6</sup>	dBA	33 - 44			
	Energy label / $\eta_s$ average climate	--	A+++ / 190%			
Operation limits	Heating temperatures / Maximum setpoint	°C	10 - 60 / 60			
	Cooling temperatures / Min. setpoint	°C	-20 - 35 / -15		5 - 35 / 7	
	Brine heating temperatures	°C	-25 - +35			
	Dissipation cooling temperatures	°C	10 - 60			
	Min./max. refrigerant circuit pressure	bar	2 / 45			
	Production circuit pressure / pre-charge	bar	0,5 - 3 / 1,5			
	Brine circuit pressure / pre-charge	bar	0,5 - 3 / 0,7			
	Maximum ACS storage tank pressure <sup>11</sup>	bar	8			
Working fluids	Refrigerant type / GWP	--	R410A / 2088			
	Charge / T CO <sub>2</sub> eq	Kg/ton	0,8 / 1,67 (without HTR) 0,85 / 1,77 (with HTR)		1 / 2,09	
	Compressor oil type / charge	kg	POE / 0,74			
Electrical control data	1/N/PE 230 V / 50-60 Hz <sup>8</sup>	-	✓			
	Maximum recommended external protection <sup>9</sup>	A	C16A			
	Primary transformer circuit fuse	A	0,5			
	Secondary transformer circuit fuse	A	2,5			
Heat pump electrical data: Single phase	1/N/PE 230 V / 50-60 Hz <sup>8</sup>	-	✓			
	Maximum recommended external protection <sup>9</sup>	A	C25A			
	Maximum consumption <sup>2</sup> , B0W35	kW/A	2,7/11,8			
	Maximum consumption <sup>2</sup> , B0W55	kW/A	3,8/16,5			
	Start-up intensity minimum/maximum <sup>7</sup>	A	2,8/5,8			
	Correction of cosine $\phi$	-	0,96-1			
Heat pump electrical data: Three phase	3/PE 400 V / 50-60 Hz <sup>8</sup>	-	✓			
	Maximum recommended external protection <sup>9</sup>	A	C10A			
	Maximum consumption <sup>2</sup> , B0W35	kW/A	2,7/4			
	Maximum consumption <sup>2</sup> , B0W55	kW/A	3,8/5,5			
	Start-up intensity minimum/maximum <sup>7</sup>	A	0,9/1,9			
	Correction of cosine $\phi$	-	0,96-1			
Electrical integrated resistance backup data	Connection option 1/N/PE 230Vac / 50-60 Hz <sup>8</sup>	-	✓			
	Number of elements	-	1 / 2 / 3			
	External protection recommended 1 / 2 / 3	A	C10A / C16A / C20A			
	Max. consumption 1 / 2 / 3	kW	1,3 / 2,7 / 4			
	Max. consumption 1 / 2 / 3	A	6,3/12,6/18,9			
	Connection option 3/N/PE 400Vac / 50-60 Hz <sup>8</sup>	-	✓			
	External protection recommended	A	C10A			
	Maximum consumption	kW	4			
	Maximum consumption	A	6,3			
Dimensions and weight	Height x width x depth	mm	VOLTA W-S: 1060x600x710 VOLTA W-L: 1845x600x720			
	Empty weight (without assembly)	kg	S: 184 L: 245	S: 192 L: 253	S: 184 L: 245	S: 192 L: 253

VOLTA W-S/L*-14-***(-SH) specifications		Units	VOLTA W-S/L-H	VOLTA W-S/L-P	VOLTA W-S/L-A	VOLTA W-S/L-F
Application	Place of installation	-	Indoors			
	Type of brine system	-	Geothermal			
	Heating	-	✓	✓	✓	✓
	HTR - High temperature recovery system	-	✓	✓	✓	✓
	Integrated active cooling	-	--	--	✓	✓
	Integrated Free cooling	-	--	✓	--	✓
Performance	Compressor modulation	%	12,5 - 100			
	Heating power <sup>2</sup> , B0W35 <sup>10</sup>	kW	2,1 - 16			
	COP <sub>max</sub> <sup>2</sup> / Heating power <sup>2</sup> B0W35 <sup>10</sup>	- / kW	4,6 / 7,3			
	Active cooling power <sup>2</sup> , B35W7 <sup>10</sup>	kW	--	2.1 -15		
	EER <sup>2</sup> / Active cooling power <sup>2</sup> B35W7 <sup>10</sup>	- / kW	--	5.2 / 6.3		
	Maximum DHW temperature without backup <sup>11</sup>	°C	63			
	Maximum DHW temperature with backup <sup>5,11</sup>	°C	70			
	Sound power level <sup>6</sup>	dBA	34 - 45			
Energy label / $\eta_s$ average climate	--	A+++ / 194%				
Operation limits	Heating temperatures / Maximum setpoint	°C	10 - 60 / 60			
	Cooling temperatures / Min. setpoint	°C	-20 - 35 / -15		5 - 35 / 7	
	Brine heating temperatures	°C	-25 - +35			
	Dissipation cooling temperatures	°C	10 - 60			
	Min./max. refrigerant circuit pressure	bar	2 / 45			
	Production circuit pressure / pre-charge	bar	0,5 - 3 / 1,5			
	Brine circuit pressure / pre-charge	bar	0,5 - 3 / 0,7			
	Maximum ACS storage tank pressure <sup>11</sup>	bar	8			
Working fluids	Refrigerant type / GWP	--	R410A / 2088			
	Charge / T CO <sub>2</sub> eq	Kg/ton	0,9 / 1,88 (without HTR) 1 / 2,09 (with HTR)		1 / 2,09	
	Compressor oil type / charge	kg	POE / 0,74			
Electrical control data	1/N/PE 230 V / 50-60 Hz <sup>8</sup>	-	✓			
	Maximum recommended external protection <sup>9</sup>	A	C16A			
	Primary transformer circuit fuse	A	0,5			
	Secondary transformer circuit fuse	A	2,5			
Heat pump electrical data: Single phase	1/N/PE 230 V / 50-60 Hz <sup>8</sup>	-	✓			
	Maximum recommended external protection <sup>9</sup>	A	C32A			
	Maximum consumption <sup>2</sup> , B0W35	kW/A	4,2/18,6			
	Maximum consumption <sup>2</sup> , B0W55	kW/A	5/21,7			
	Start-up intensity minimum/maximum <sup>7</sup>	A	2/8			
Correction of cosine $\phi$	-	0,96-1				
Heat pump electrical data: Three phase	3/PE 400 V / 50-60 Hz <sup>8</sup>	-	✓			
	Maximum recommended external protection <sup>9</sup>	A	C16A			
	Maximum consumption <sup>2</sup> , B0W35	kW/A	4,2/6,2			
	Maximum consumption <sup>2</sup> , B0W55	kW/A	5/7,2			
	Start-up intensity minimum/maximum <sup>7</sup>	A	0,7/2,6			
Correction of cosine $\phi$	-	0,96-1				
Electrical integrated resistance backup data	Connection option 1/N/PE 230Vac / 50-60 Hz <sup>8</sup>	-	✓			
	Number of elements	-	1 / 2 / 3			
	External protection recommended 1 / 2 / 3	A	C16A / C20A / C32A			
	Max. consumption 1 / 2 / 3	kW	2 / 4 / 6			
	Max. consumption 1 / 2 / 3	A	8,8 / 17,6 / 26,4			
	Connection option 3/N/PE 400Vac / 50-60 Hz <sup>8</sup>	-	✓			
	External protection recommended	A	C16A			
	Maximum consumption	kW	6			
Maximum consumption	A	8,8				
Dimensions and weight	Height x width x depth	mm	VOLTA W-S: 1060x600x710 VOLTA W-L: 1845x600x720			
	Empty weight (without assembly)	kg	S: 185 L: 246	S: 193 L: 254	S: 185 L: 246	S: 193 L: 254

VOLTA W-S/L*-22-***(-SH) specifications		Units	VOLTA W-S/L-H	VOLTA W-S/L-P	VOLTA W-S/L-A	VOLTA W-S/L-F
Application	Place of installation	-	Indoors			
	Type of brine system	-	Geothermal			
	Heating	-	✓	✓	✓	✓
	HTR - High temperature recovery system	-	✓	✓	✓	✓
	Integrated active cooling	-	--	--	✓	✓
	Integrated Free cooling	-	--	✓	--	✓
Performance	Compressor modulation	%	15 - 100			
	Heating power <sup>2</sup> , B0W35 <sup>10</sup>	kW	4 - 22,8			
	COP <sub>max</sub> <sup>2</sup> / Heating power <sup>2</sup> B0W35 <sup>10</sup>	- / kW	4,9 / 8,6			
	Active cooling power <sup>2</sup> , B35W7 <sup>10</sup>	kW	--	4.2 - 22		
	EER <sup>2</sup> / Active cooling power <sup>2</sup> B35W7 <sup>10</sup>	- / kW	--	5.3 / 9.4		
	Maximum DHW temperature without backup <sup>11</sup>	°C	63			
	Maximum DHW temperature with backup <sup>5,11</sup>	°C	70			
	Sound power level <sup>6</sup>	dBA	35 - 46			
	Energy label / $\eta_s$ average climate	--	A+++ / 184%			
Operation limits	Heating temperatures / Maximum setpoint	°C	10 - 60 / 60			
	Cooling temperatures / Min. setpoint	°C	-20 - 35 / -15		5 - 35 / 7	
	Brine heating temperatures	°C	-25 - +35			
	Dissipation cooling temperatures	°C	10 - 60			
	Min./max. refrigerant circuit pressure	bar	2 / 45			
	Production circuit pressure / pre-charge	bar	0,5 - 3 / 1,5			
	Brine circuit pressure / pre-charge	bar	0,5 - 3 / 0,7			
	Maximum ACS storage tank pressure <sup>11</sup>	bar	8			
Working fluids	Refrigerant type / GWP	--	R410A / 1,4		R410A / 1.5	
	Charge / T CO <sub>2</sub> eq	Kg/ton	1,4 / 2,92		1,5 / 3,13	
	Compressor oil type / charge	kg	POE/1,18			
Electrical control data	1/N/PE 230 V / 50-60 Hz <sup>8</sup>	-	✓			
	Maximum recommended external protection <sup>9</sup>	A	C16A			
	Primary transformer circuit fuse	A	0,5			
	Secondary transformer circuit fuse	A	2,5			
Heat pump electrical data: Single phase	1/N/PE 230 V / 50-60 Hz <sup>8</sup>	-	✓			
	Maximum recommended external protection <sup>9</sup>	A	C32A			
	Maximum consumption <sup>2</sup> , B0W35	kW/A	5,5/23,9			
	Maximum consumption <sup>2</sup> , B0W55	kW/A	5,5/23,9			
	Start-up intensity minimum/maximum <sup>7</sup>	A	2,6/12,5			
	Correction of cosine $\phi$	-	0,96-1			
Heat pump electrical data: Three phase	3/PE 400 V / 50-60Hz <sup>8</sup>	-	✓			
	Maximum recommended external protection <sup>9</sup>	A	C16A			
	Maximum consumption <sup>2</sup> , B0W35	kW/A	6/8,7			
	Maximum consumption <sup>2</sup> , B0W55	kW/A	6/8,7			
	Start-up intensity minimum/maximum <sup>7</sup>	A	0,9/4,2			
	Correction of cosine $\phi$	-	0,96-1			
Electrical integrated resistance backup data	Connection option 1/N/PE 230Vac / 50-60 Hz <sup>8</sup>	-	✓			
	Number of elements	-	1 / 2 / 3			
	External protection recommended 1 / 2 / 3	A	C16A / C20A / C32A			
	Max. consumption 1 / 2 / 3	kW	2 / 4 / 6			
	Max. consumption 1 / 2 / 3	A	8,8 / 17,6 / 26,4			
	Connection option 3/N/PE 400Vac / 50-60 Hz <sup>8</sup>	-	✓			
	External protection recommended	A	C16A			
	Maximum consumption	kW	6			
	Maximum consumption	A	8,8			
Dimensions and weight	Height x width x depth	mm	VOLTA W-S: 1060x600x710 VOLTA W-L: 1845x600x720			
	Empty weight (without assembly)	kg	S: 185 L: 247	S: 193 L: 255	S: 185 L: 247	S: 193 L: 255

VOLTA W-S/L-*10-***(-SH) with VOLTA W-O-10-230 specifications		Units	VOLTA W-S/L-P	VOLTA W-S/L-F
Application	Place of installation	-	Indoors	
	Type of brine system <sup>1</sup>	-	Aerothermal / Hybrid	
	Heating	-	✓	✓
	HTR - High temperature recovery system	-	✓	✓
	Integrated active cooling	-	--	✓
Performance	Compressor modulation	%	12,5 - 100	
	Heating power <sup>2</sup> , A7W35 <sup>10</sup>	kW	1,7 - 11	
	COP <sub>max</sub> <sup>2</sup> / Power <sup>2</sup> A7W35 <sup>10</sup>	- / kW	5 / 3,9	
	Active cooling power <sup>2</sup> , A35W7 <sup>10</sup>	kW	--	1,5 - 9,8
	EER <sup>2</sup> / Power <sup>2</sup> A35W7 <sup>10</sup>	- / kW	--	3,6 / 3,6
	Maximum DHW temperature without backup <sup>11</sup>	°C	63	
	Maximum DHW temperature with backup <sup>5,11</sup>	°C	70	
	Sound power level <sup>6</sup> (Indoor/outdoor)	dB(A)	33 - 44 / 34 - 50	
	Energy label / $\eta_s$ average climate	--	A+++ / 197%	
Operation limits	Heating temperatures / Maximum setpoint	°C	10 - 60 / 60	
	Cooling temperatures / Min. setpoint	°C	-20 - 35 / -15	5 - 35 / 7
	Brine heating temperatures	°C	-25 - +35	
	Dissipation cooling temperatures	°C	10 - 60	
	Outside temperature range	°C	-10 - 50	
	Min./max. refrigerant circuit pressure	bar	2 / 45	
	Production circuit pressure / pre-charge	bar	0,5 - 3 / 1,5	
	Brine circuit pressure / pre-charge	bar	0,5 - 3 / 0,7	
Maximum ACS storage tank pressure <sup>11</sup>	bar	8		
Working fluids	Refrigerant type / GWP	--	R410A / 2088	
	Charge / T CO <sub>2</sub> eq	Kg/ton	0,8 / 1,67 (without HTR) 0,85 / 1,77 (with HTR)	1 / 2,09
	Compressor oil type / charge	kg	POE / 0,74	
Electrical control data	1/N/PE 230 V / 50-60 Hz <sup>8</sup>	-	✓	
	Maximum recommended external protection <sup>9</sup>	A	C16A	
	Primary transformer circuit fuse	A	0,5	
	Secondary transformer circuit fuse	A	2,5	
Heat pump electrical data: Single phase	1/N/PE 230 V / 50-60 Hz <sup>8</sup>	-	✓	
	Maximum recommended external protection <sup>9</sup>	A	C25A	
	Maximum consumption <sup>2</sup> , A7W35	kW/A	2,7/11,8	
	Maximum consumption <sup>2</sup> , A7W55	kW/A	3,8/16,5	
	Start-up intensity minimum/maximum <sup>7</sup>	A	2,8/5,8	
Correction of cosine $\phi$	-	0,96-1		
Heat pump electrical data: Three phase	3/PE 400 V / 50-60 Hz <sup>8</sup>	-	✓	
	Maximum recommended external protection <sup>9</sup>	A	C10A	
	Maximum consumption <sup>2</sup> , A7W35	kW/A	2,7/4	
	Maximum consumption <sup>2</sup> , A7W55	kW/A	3,8/5,5	
	Start-up intensity minimum/maximum <sup>7</sup>	A	0,9/1,9	
Correction of cosine $\phi$	-	0,96-1		
Electrical integrated resistance backup data	Connection option 1/N/PE 230Vac / 50-60 Hz <sup>8</sup>	-	✓	
	Number of elements	-	1 / 2 / 3	
	External protection recommended 1 / 2 / 3	A	C10A / C16A / C20A	
	Max. consumption 1 / 2 / 3	kW	1,3 / 2,7 / 4	
	Max. consumption 1 / 2 / 3	A	6,3/12,6/18,9	
	Connection option 3/N/PE 400Vac / 50-60 Hz <sup>8</sup>	-	✓	
	External protection recommended	A	C10A	
	Maximum consumption	kW	4	
Maximum consumption	A	6,3		
Dimensions and weight	Height x width x depth	mm	VOLTA W-S: 1060x600x710 VOLTA W-L: 1845x600x720	
	Empty weight (without assembly)	kg	S: 192 L: 253	S: 192 L: 253
















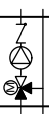






VOLTA W-S/L-*14-***(-SH) with VOLTA W-O-10-230 specifications		Units	VOLTA W-S/L-P	VOLTA W-S/L-F
Application	Place of installation	-	Indoors	
	Type of brine system <sup>1</sup>	-	Aerothermal / Hybrid	
	Heating	-	✓	✓
	HTR - High temperature recovery system	-	✓	✓
	Integrated active cooling	-	--	✓
Performance	Compressor modulation	%	12,5 - 100	
	Heating power <sup>2</sup> , A7W35 <sup>10</sup>	kW	2,5 - 15,3	
	COP <sub>max</sub> <sup>2</sup> / Power <sup>2</sup> A7W35 <sup>10</sup>	- / kW	5 / 4,6	
	Active cooling power <sup>2</sup> , A35W7 <sup>10</sup>	kW	--	2,4 - 11,7
	EER <sup>2</sup> / Power <sup>2</sup> A35W7 <sup>10</sup>	- / kW	--	3,4 / 4,1
	Maximum DHW temperature without backup <sup>11</sup>	°C	63	
	Maximum DHW temperature with backup <sup>5,11</sup>	°C	70	
	Sound power level <sup>6</sup> (Indoor/outdoor)	dBA	34 - 45 / 34 - 50	
	Energy label / $\eta_s$ average climate	--	A+++ / 198%	
Operation limits	Heating temperatures / Maximum setpoint	°C	10 - 60 / 60	
	Cooling temperatures / Min. setpoint	°C	-20 - 35 / -15	5 - 35 / 7
	Brine heating temperatures	°C	-25 - +35	
	Dissipation cooling temperatures	°C	10 - 60	
	Outside temperature range	°C	-10 - 50	
	Min./max. refrigerant circuit pressure	bar	2 / 45	
	Production circuit pressure / pre-charge	bar	0,5 - 3 / 1,5	
	Brine circuit pressure / pre-charge	bar	0,5 - 3 / 0,7	
	Maximum ACS storage tank pressure <sup>11</sup>	bar	8	
Working fluids	Refrigerant type / GWP	--	R410A / 2088	
	Charge / T CO <sub>2</sub> eq	Kg/ton	0,9 / 1,88 (without HTR) 1 / 2,09 (with HTR)	1 / 2,09
	Compressor oil type / charge	kg	POE/0,74	
Electrical control data	1/N/PE 230 V / 50-60 Hz <sup>8</sup>	-	✓	
	Maximum recommended external protection <sup>9</sup>	A	C16A	
	Primary transformer circuit fuse	A	0,5	
	Secondary transformer circuit fuse	A	2,5	
Heat pump electrical data: Single phase	1/N/PE 230 V / 50-60 Hz <sup>8</sup>	-	✓	
	Maximum recommended external protection <sup>9</sup>	A	C32A	
	Maximum consumption <sup>2</sup> , A7W35	kW/A	4,2/18,6	
	Maximum consumption <sup>2</sup> , A7W55	kW/A	5/21,7	
	Start-up intensity minimum/maximum <sup>7</sup>	A	2/8	
Correction of cosine $\phi$	-	0,96-1		
Heat pump electrical data: Three phase	3/PE 400 V / 50-60 Hz <sup>8</sup>	-	✓	
	Maximum recommended external protection <sup>9</sup>	A	C16A	
	Maximum consumption <sup>2</sup> , A7W35	kW/A	4,2/6,2	
	Maximum consumption <sup>2</sup> , A7W55	kW/A	5/7,2	
	Start-up intensity minimum/maximum <sup>7</sup>	A	0,7/2,6	
Correction of cosine $\phi$	-	0,96-1		
Electrical integrated resistance backup data	Connection option 1/N/PE 230Vac / 50-60 Hz <sup>8</sup>	-	✓	
	Number of elements	-	1 / 2 / 3	
	External protection recommended 1 / 2 / 3	A	C16A / C20A / C32A	
	Max. consumption 1 / 2 / 3	kW	2 / 4 / 6	
	Max. consumption 1 / 2 / 3	A	8,8 / 17,6 / 26,4	
	Connection option 3/N/PE 400Vac / 50-60 Hz <sup>8</sup>	-	✓	
	External protection recommended	A	C16A	
	Maximum consumption	kW	6	
Maximum consumption	A	8,8		
Dimensions and weight	Height x width x depth	mm	VOLTA W-S: 1060x600x710 VOLTA W-L: 1845x600x720	
	Empty weight (without assembly)	kg	S: 193 L: 254	S: 193 L: 254

VOLTA W-S/L-*22-***(-SH) with VOLTA W-O-10-230 specifications		Units	VOLTA W-S/L-P	VOLTA W-S/L-F
Application	Place of installation	-	Indoors	
	Type of brine system <sup>1</sup>	-	Aerothermal / Hybrid	
	Heating	-	✓	✓
	HTR - High temperature recovery system	-	✓	✓
	Integrated active cooling	-	--	✓
Performance	Compressor modulation	%	15 - 100	
	Heating power <sup>2</sup> , A7W35 <sup>10</sup>	kW	4,5 - 19,7	
	COP <sub>max</sub> <sup>2</sup> / Power <sup>2</sup> A7W35 <sup>10</sup>	- / kW	4,8 / 6,2	
	Active cooling power <sup>2</sup> , A35W7 <sup>10</sup>	kW	--	5,5 - 13,3
	EER <sup>2</sup> / Power <sup>2</sup> A35W7 <sup>10</sup>	- / kW	--	3,4 / 5,5
	Maximum DHW temperature without backup <sup>11</sup>	°C	63	
	Maximum DHW temperature with backup <sup>5,11</sup>	°C	70	
	Sound power level <sup>6</sup> (Indoor/outdoor)	dBA	35 - 46 / 34 - 50	
	Energy label / $\eta_s$ average climate	--	A+++ / 190%	
Operation limits	Heating temperatures / Maximum setpoint	°C	10 - 60 / 60	
	Cooling temperatures / Min. setpoint	°C	-20 - 35 / -15	5 - 35 / 7
	Brine heating temperatures	°C	-25 - +35	
	Dissipation cooling temperatures	°C	10 - 60	
	Outside temperature range	°C	-10 - 50	
	Min./max. refrigerant circuit pressure	bar	2 / 45	
	Production circuit pressure / pre-charge	bar	0,5 - 3 / 1,5	
	Brine circuit pressure / pre-charge	bar	0,5 - 3 / 0,7	
Maximum ACS storage tank pressure <sup>11</sup>	bar	8		
Working fluids	Refrigerant type / GWP	--	R410A / 2088	
	Charge / T CO <sub>2</sub> eq	Kg/ton	1,4 / 2,92	1,5 / 3,13
	Compressor oil type / charge	kg	POE/1,18	
Electrical control data	1/N/PE 230 V / 50-60 Hz <sup>8</sup>	-	✓	
	Maximum recommended external protection <sup>9</sup>	A	C16A	
	Primary transformer circuit fuse	A	0,5	
	Secondary transformer circuit fuse	A	2,5	
Heat pump electrical data: Single phase	1/N/PE 230 V / 50-60 Hz <sup>8</sup>	-	✓	
	Maximum recommended external protection <sup>9</sup>	A	C32A	
	Maximum consumption <sup>2</sup> , A7W35	kW/A	5,5/23,9	
	Maximum consumption <sup>2</sup> , A7W55	kW/A	5,5/23,9	
	Start-up intensity minimum/maximum <sup>7</sup>	A	2,6/12,5	
Correction of cosine $\phi$	-	0,96-1		
Heat pump electrical data: Three phase	3/PE 400 V / 50-60Hz <sup>8</sup>	-	✓	
	Maximum recommended external protection <sup>9</sup>	A	C16A	
	Maximum consumption <sup>2</sup> , A7W35	kW/A	6/8,7	
	Maximum consumption <sup>2</sup> , A7W55	kW/A	6/8,7	
	Start-up intensity minimum/maximum <sup>7</sup>	A	0,9/4,2	
Correction of cosine $\phi$	-	0,96-1		
Electrical integrated resistance backup data	Connection option 1/N/PE 230Vac / 50-60 Hz <sup>8</sup>	-	✓	
	Number of elements	-	1 / 2 / 3	
	External protection recommended 1 / 2 / 3	A	C16A / C20A / C32A	
	Max. consumption 1 / 2 / 3	kW	2 / 4 / 6	
	Max. consumption 1 / 2 / 3	A	8,8 / 17,6 / 26,4	
	Connection option 3/N/PE 400Vac / 50-60 Hz <sup>8</sup>	-	✓	
	External protection recommended	A	C16A	
	Maximum consumption	kW	6	
Maximum consumption	A	8,8		
Dimensions and weight	Height x width x depth	mm	VOLTA W-S: 1060x600x710 VOLTA W-L: 1845x600x720	
	Empty weight (without assembly)	kg	S: 193 L: 255	S: 193 L: 255



VOLTA W-S/L-*22-***(-SH) with VOLTA W-O-20-230 specifications		Units	VOLTA W-S/L-P	VOLTA W-S/L-F
Application	Place of installation	-	Indoors	
	Type of brine system <sup>1</sup>	-	Aerothermal / Hybrid	
	Heating	-	✓	✓
	HTR - High temperature recovery system	-	✓	✓
	Integrated active cooling	-	--	✓
Performance	Compressor modulation	%	15 - 100	
	Heating power <sup>2</sup> , A7W35 <sup>10</sup>	kW	4,6 - 21,3	
	COP <sub>max</sub> <sup>2</sup> / Power <sup>2</sup> A7W35 <sup>10</sup>	- / kW	5,1 / 6,7	
	Active cooling power <sup>2</sup> , A35W7 <sup>10</sup>	kW	--	5.2 – 15.5
	EER <sup>2</sup> / Power <sup>2</sup> A35W7 <sup>10</sup>	- / kW	--	3.6 / 6.6
	Maximum DHW temperature without backup <sup>11</sup>	°C	63	
	Maximum DHW temperature with backup <sup>5,11</sup>	°C	70	
	Sound power level <sup>6</sup> (Indoor/outdoor)	dB(A)	35 - 46 / 48 – 60	
	Energy label / $\eta_s$ average climate	--	A+++ / 199%	
Operation limits	Heating temperatures / Maximum setpoint	°C	10 - 60 / 60	
	Cooling temperatures / Min. setpoint	°C	-20 - 35 / -15	5 - 35 / 7
	Brine heating temperatures	°C	-25 - +35	
	Dissipation cooling temperatures	°C	10 - 60	
	Outside temperature range	°C	-10 - 50	
	Min./max. refrigerant circuit pressure	bar	2 / 45	
	Production circuit pressure / pre-charge	bar	0,5 - 3 / 1,5	
	Brine circuit pressure / pre-charge	bar	0,5 - 3 / 0,7	
Maximum ACS storage tank pressure <sup>11</sup>	bar	8		
Working fluids	Refrigerant type / GWP	--	R410A / 2088	
	Charge / T CO <sub>2</sub> eq	Kg/ton	1,4 / 2,92	1,5 / 3,13
	Compressor oil type / charge	kg	POE/1,18	
Electrical control data	1/N/PE 230 V / 50-60 Hz <sup>8</sup>	-	✓	
	Maximum recommended external protection <sup>9</sup>	A	C16A	
	Primary transformer circuit fuse	A	0,5	
	Secondary transformer circuit fuse	A	2,5	
Heat pump electrical data: Single phase	1/N/PE 230 V / 50-60 Hz <sup>8</sup>	-	✓	
	Maximum recommended external protection <sup>9</sup>	A	C32A	
	Maximum consumption <sup>2</sup> , A7W35	kW/A	5,5/23,9	
	Maximum consumption <sup>2</sup> , A7W55	kW/A	5,5/23,9	
	Start-up intensity minimum/maximum <sup>7</sup>	A	2,6/12,5	
Correction of cosine $\phi$	-	0,96-1		
Heat pump electrical data: Three phase	3/PE 400 V / 50-60Hz <sup>8</sup>	-	✓	
	Maximum recommended external protection <sup>9</sup>	A	C16A	
	Maximum consumption <sup>2</sup> , A7W35	kW/A	6/8,7	
	Maximum consumption <sup>2</sup> , A7W55	kW/A	6/8,7	
	Start-up intensity minimum/maximum <sup>7</sup>	A	0,9/4,2	
Correction of cosine $\phi$	-	0,96-1		
Electrical integrated resistance backup data	Connection option 1/N/PE 230Vac / 50-60 Hz <sup>8</sup>	-	✓	
	Number of elements	-	1 / 2 / 3	
	External protection recommended 1 / 2 / 3	A	C16A / C20A / C32A	
	Max. consumption 1 / 2 / 3	kW	2 / 4 / 6	
	Max. consumption 1 / 2 / 3	A	8,8 / 17,6 / 26,4	
	Connection option 3/N/PE 400Vac / 50-60 Hz <sup>8</sup>	-	✓	
	External protection recommended	A	C16A	
	Maximum consumption	kW	6	
Maximum consumption	A	8,8		
Dimensions and weight	Height x width x depth	mm	VOLTA W-S: 1060x600x710 VOLTA W-L: 1845x600x720	
	Empty weight (without assembly)	kg	S: 193 L: 255	S: 193 L: 255

## 11. Symbols

	DHW circuit		3-way valve open/closed
	Pool		3-way thermostatic valve
	Heating system		3-way modulating valve 0-10Vdc
	Cooling system		Check valve
	NTC temperature sensor		Cut-off valve
	Relay thermostat		Safety valve
	Data bus communication terminal		Differential pressure valve
	Circulator pump		Particulate filter
	Direct outlet unit		Heat exchanger
	Outlet unit with mixture		Outlet pipe
	Electrical heater		Return pipe
	Drain defrost heater		Flexible hose
	Expansion vessel		Drain



CE



**VOLTA Heat Pumps**

[www.voltaheatpumps.com](http://www.voltaheatpumps.com)

Rúa das Pontes 25, 36350 Nigrán (Pontevedra) Spain

[contact@voltaheatpumps.com](mailto:contact@voltaheatpumps.com)

+34 986 262 184

---

VOLTA W-S/L Gen5 TECHNICAL service manual Version 04.0X/2023

The manufacturer reserves the right to make any necessary changes to the contents of this manual without prior notice.